MANUAL OF GUIDELINES AND STANDARDS

PART I GUIDELINES AND PRINCIPLES

PART II STATION RECONNAISSANCE (Discontinued)

PART III STATION MODERNIZATION PROGRAM (Discontinued)

PART IV COMPONENTS

PART V GRAPHICS

PART VI LIGHTING

PART VII MATERIALS

PART VIII ACOUSTICS

PART IX SERVICE FACILITIES

PART X SITE PLANNING AND NEW STATIONS

PART XI VENTILATION

GENERAL INTRODUCTION

The Massachusetts Bay Transportation Authority has found it both necessary and possible to concentrate attention on the complex needs of people. Programs to improve service must now include a new emphasis on the quality of the transportation experience. In effect, transportation engineering has been joined by human engineering and environmental design.

This manual provides a framework for the continued coordination of all those elements in the system that affect human comfort.

Many of the criteria involved are common to all environments, such as the control of light, noise, humidity, temperature, wind, and odors, or the need for orderliness, through clear and easy circulation and clean appearance. Other criteria that are more specific to the transportation environment are such needs as safety, traffic handling capability, spatial variety, consistently available information, and orientation.

The most important single criterion that has guided the preparation of this manual is the need for orientation. The rider must not only be physically comfortable, he must also know in the fullest sense where he is and where he is going.

Since to the layman a public transportation system is to a large extent an invisible skeleton of the city and metropolitan region, the comprehension of that structure generates an awareness and appreciation of the city itself, and an appreciation of travel through it.

There are many aspects to achieving this orientation. Circulation at all points must be direct and open. Spaces should relate visually to their surrounding environment, either through direct openings to adjacent spaces and structures, or in the case of platforms, by graphic reflection through photographic murals.

Above all, the need for orientation places great emphasis on maps and a consistent system of identification and directional signing. Graphics then emerges as a major factor in the design of each environment, a factor that must be given high priority in the early design phases of each project.

It is hoped that all participants in all programs will familiarize themselves with the entire manual, so that the implications of each decision can be understood in a system-wide context.

The standards and guidelines presented here are not inflexible rules. They are a framework for meaningful development and variety, and offer no restriction to the capacity of each participant to evolve better solutions to old or new problems.

As new solutions are developed and approved, revised and additional pages for the manual will be issued to all participants.



Part I of the Manual illustrates certain defects in the present station environment and establishes principles through which improvement may be achieved, as part of the Station Modernization Program. It further sets down various demensional standards and limitations pertaining to each of the existing lines.

Further general guidelines will be added to this Part, regarding the new stations.

INTRODUCTION



PART I GUIDELINES AND PRINCIPLES

A. Circulation

- 1. Direct Circulation
- 2. Direct Circulation
- 3. Cross Circulation
- 4. Right Hand Circulation
- 5. Circulation Space
- 6. Frustrated Entry
- 7. Useless Options
- 8. Escalators

B. Openness

- Open Entrances
- 3. Platform Openness
- 4. Surveillance
- Waiting Areas (Pages 2, 6, 7, 8 Deleted)

C. Components and Structure

- 1. Component Relocation
- 2. Component Relocation
- 3. Component Relocation
- 4. Screening of Conduit
- Surface Structure Simplification (Pages 5.1, 6 Deleted)

D. Platform Elements

- Primary Platform Elements
- Platform Lengths
- 3. Required Clearances -- Red Line
- 4. Required Clearances -- Green Line
- 5. Required Clearances -- Blue Line
- 6. Required Clearances -- Orange Line
- Sightlines
- Sightlines
 - (Page 7 Deleted)
- E. Defined Spaces (Deleted)

F. Platform Walls

- 1. New Walls
- 2. Platform Side Walls
- 4. Platform Side Walls
- 6. Platform End Walls
- Platform End Walls (Pages 3, 5, 7 Deleted)

G. <u>Unnecessary Elements</u>

- 1. Unused Facilities
- 2. Non-public Space
- 3. Unnecessary Barriers
- 4. Unnecessary Barriers
- 5. Unnecessary Barriers


H. Advertising and Graphics

- 1. Advertising and Information
- 3. Advertising Location
- 5. Sign Location
- 6. Sign Location
- 7. Sign Location
- 8. Map Space (Pages 1.1, 1.2, 2, 4 Deleted)
- I. Restored Architecture (Deleted)

MASSACHUSETTS BAY TRANSPORTATION AUTHORITY	GUIDELINES AND PRINCIPLES	I
MANUAL OF GUIDELINES AND STANDARDS	CONTENTS	4

SYMBOL KEY


- Change Booth
- * Entrance Turnstile
- Passimeter
- * Exit Gate
- **LLL** Graphics
 - Advertising
- --> Entrance Circulation
- ## > Exiting Circulation

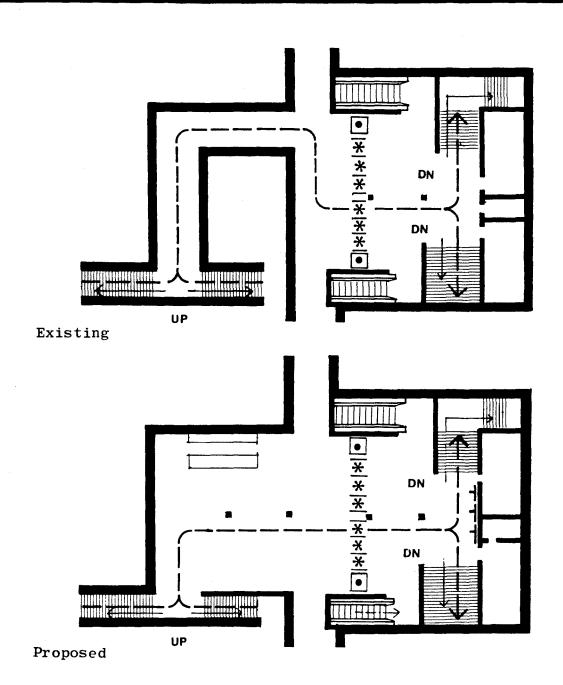


Clarify circulation by eliminating unnecessary and disorienting turns.

Example used: Kenmore

DIRECT CIRCULATION



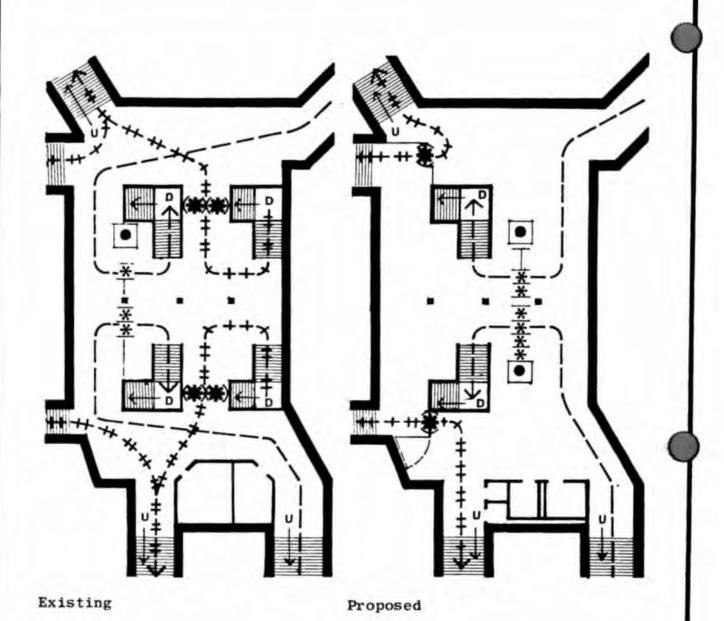


Improve circulation by providing adequate space to eliminate bottlenecks.

Example used: Arlington

DIRECT CIRCULATION

MASSACHURETTS SAY TRANSPORTATION AUTHORITY MANUAL OF GUIDELINES AND STANDARDS	GUIDELINES AND PRINCIPLES	1
	CIRCULATION	A2

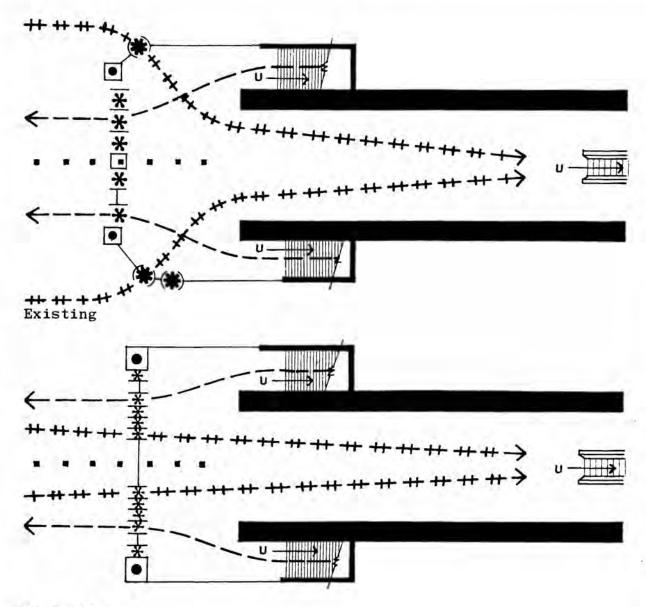


Proposed


Relocate fare collection components to avoid cross circulation at constricted decision points.

Example used: Maverick

CROSS CIRCULATION

MASSACHUSETTS BAY TRAMSPORTATION AUTHORITY MANUAL OF GUIDELINES AND STANDARDS	GUIDELINES AND PRINCIPLES	
	CIRCULATION	А3

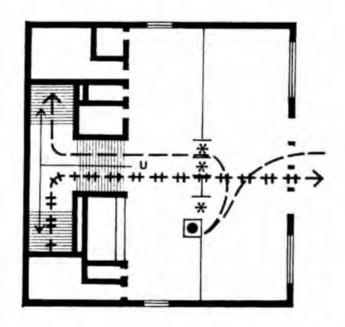


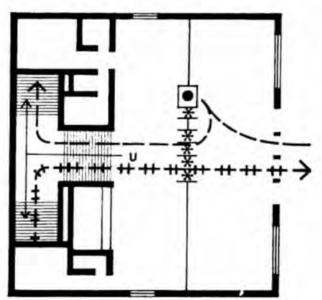


Proposed


Provide right hand circulation, by relocation of change booth.

Example used: Beachmont RIGHT HAND CIRCULATION



GUIDELINES	AND PR	INCIPLES
------------	--------	----------

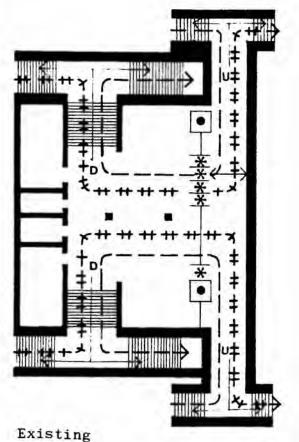

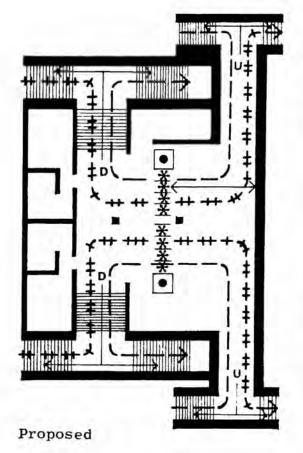


mark and a second

Provide adequate space in mezzanines and entrance lobbies for queuing outside fare collection.

CIRCULATION SPACE

MASSACHUSETTS BAY TRANSPORTATION AUTHORITY	GUIDELINES AND PRINCIPLES	1
MANUAL OF GUIDELINES AND STANDARDS	CIRCULATION	A5

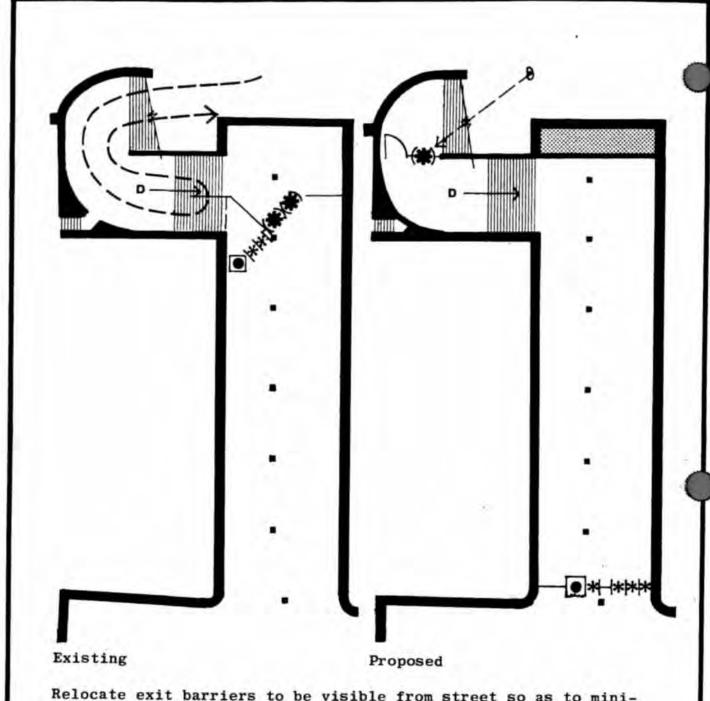


Relocate exit barriers to be visible from street so as to minimize frustrated entry attempts.

Example used: Essex

FRUSTRATED ENTRY

MASSACHURETTS SAY TRANSPORTATION AUTHORITY MAMUAL OF GUIDELINES AND STANDARDS	GUIDELINES AND PRINCIPLES	=
	CIRCULATION	A6

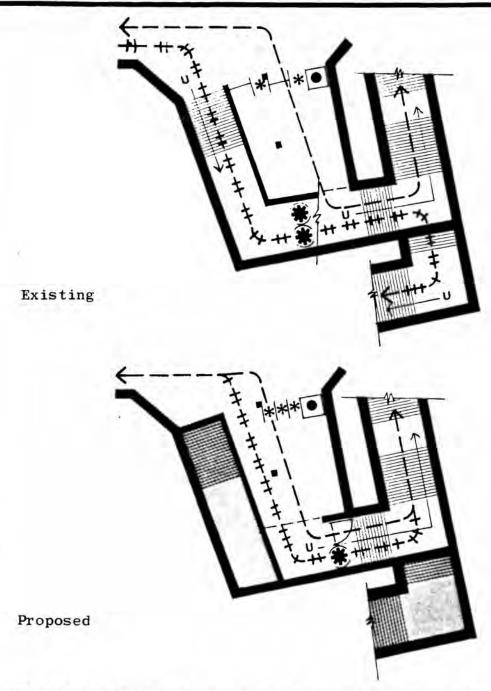



Clarify circulation by eliminating useless options, and where space is adequate, by combining entrance and exit circulation.

Example used: Essex

USELESS OPTIONS

MASSACHUBETTS BLY TRANSPORTATION AUTHORITY MAMUAL OF GUIDELINES AND STANDARDS	GUIDELINES AND PRINCIPLES	i i
	CIRCULATION	A7

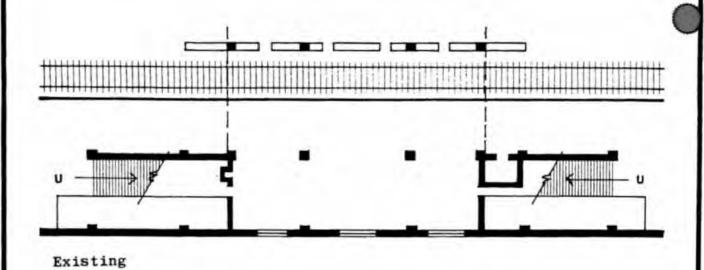


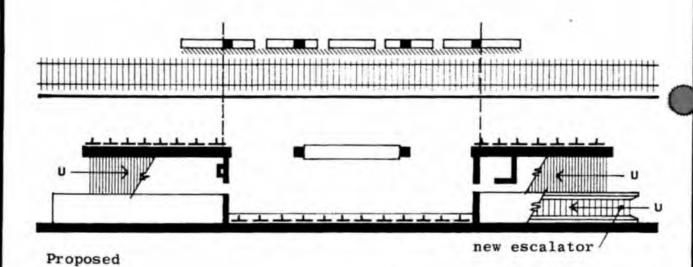

Provide escalators, whenever possible.

Example used: Airport

ESCALATORS





GUIDELINES AND PRINCIPLES

I

CIRCULATION

A8

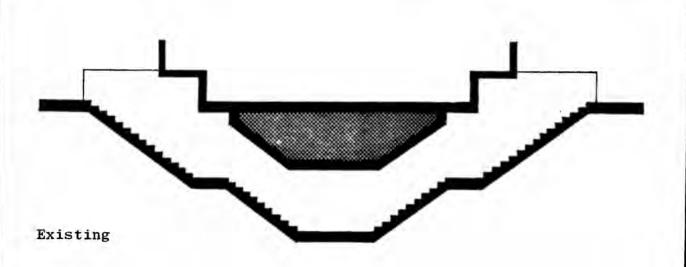

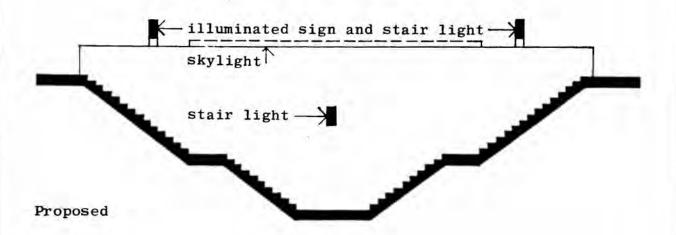



Open double entrance stairs to daylight, where possible. Reduction in sidewalk area will require approval of local traffic authorities.

When roofs are removed, drainage and installation of new means of snow melting must be considered.

OPEN ENTRANCES

MASSACHUSETTS BAY TRANSPORTATION AUTHORITY MANUAL OF GUIDGE BIES AND STANDARDS	GUIDELINES AND PRINCIPLES	1
	OPENNESS	B1

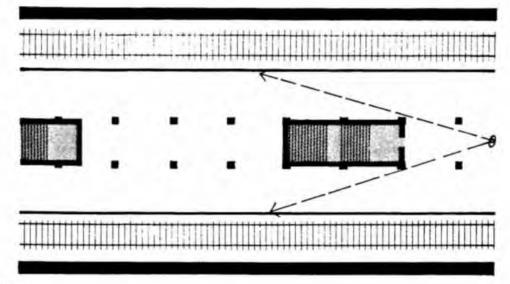

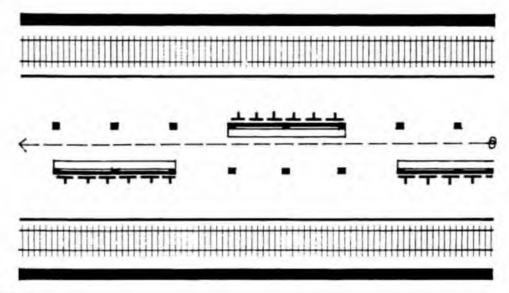



Proposed

Visually open end-loaded platforms to eliminate blind spots, where possible.

Example used: Broadway

PLATFORM OPENNESS



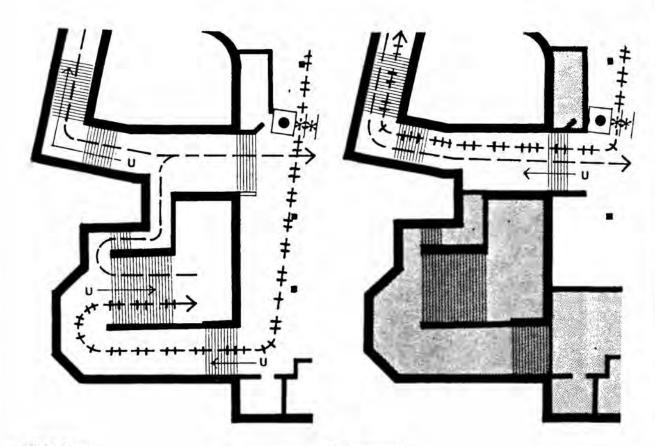


Proposed


Improve circulation spaces by eliminating unsupervisable passage-ways and stairs, where possible.

Example used: Essex

SURVEILLANCE

MASSACHUSETTS EAY TRANSPORTATION AUTHORITY MANUAL OF GUIDELINES AND SYANDARDS	GUIDELINES AND PRINCIPLES	1
	OPENNESS	B4

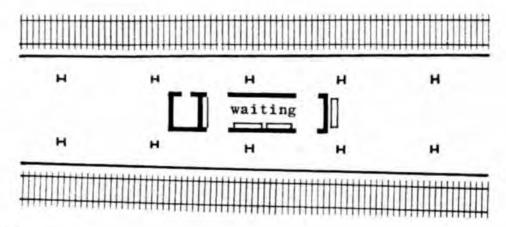

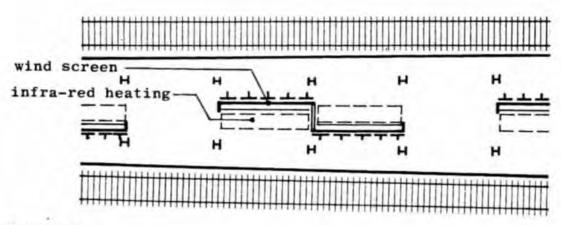


Proposed


Provide open waiting areas, with infra-red heating and wind screens. Eliminate closed waiting rooms which are impossible to supervise.

Example used: Columbia


WAITING AREAS



GUIDELINES	AND	PRINCIPL	.ES
------------	-----	----------	-----

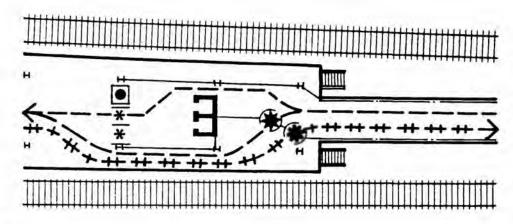

Existing

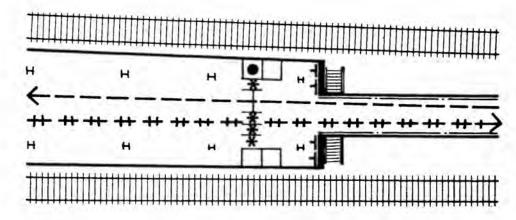


Proposed

Relate freestanding components sympathetically to structure and circulation. Reduce blindspots to ease surveillance.

Example used: Columbia

COMPONENT RELOCATION




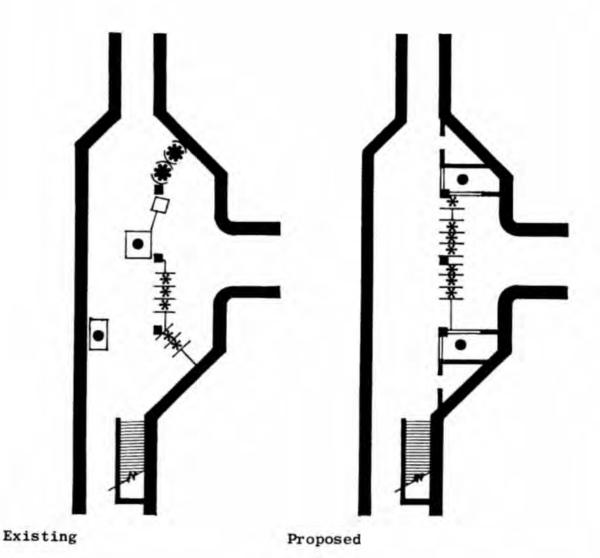


Build-in components, such as change booths, to relate to structure, where appropriate. Reduce clutter in confined areas.

Example used: Arlington


COMPONENT RELOCATION




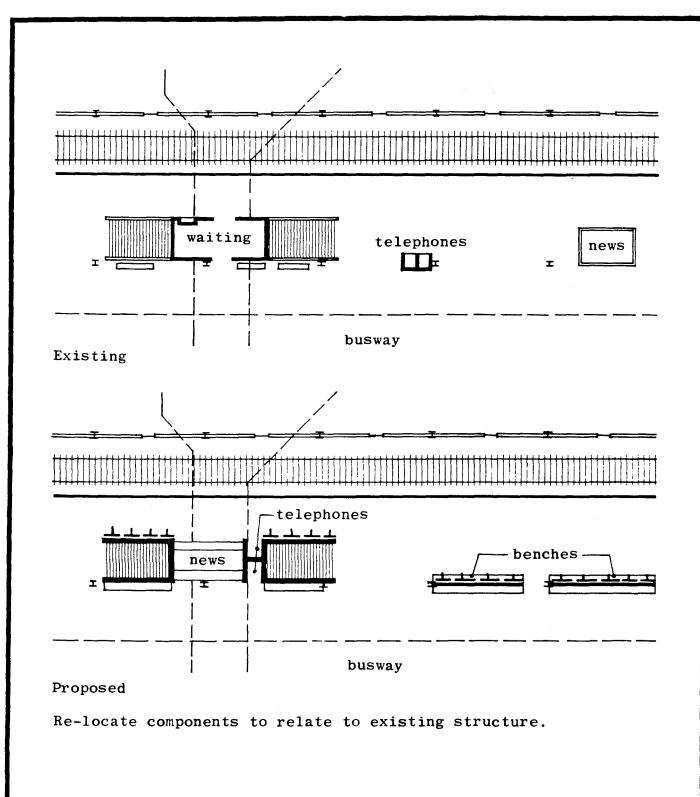

Example used: Field's Corner

COMPONENT RELOCATION



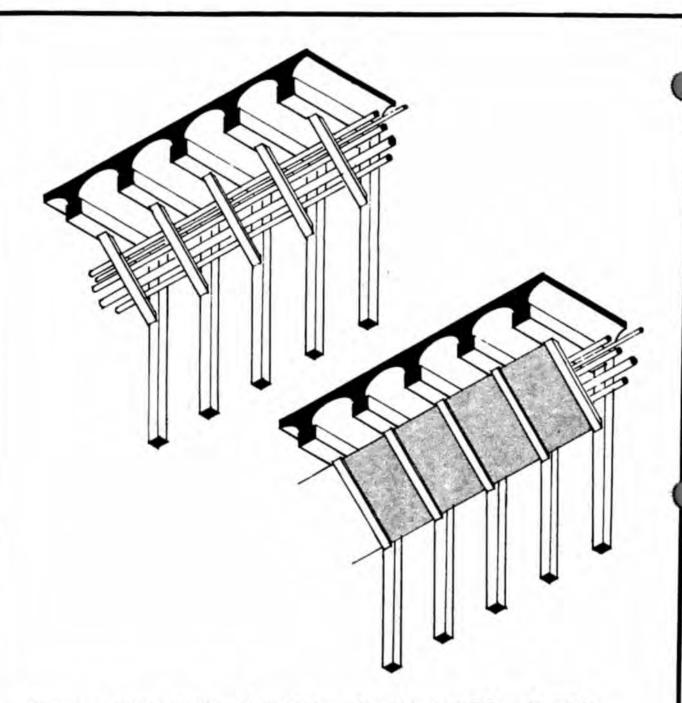


Cover up exposed runs of conduit, wherever possible, in neat new ducts or chases. When this is not possible, design new conduit and relocate.

Where such covering is provided, it must be adequately vented and drained to prevent collection of gas from leaks and of seepage and condensation. It should be removable for cable access.

SCREENING OF CONDUIT


MASSACHUBETTS SAY TRAMSPORTATION AUTHORITY MANUAL OF GUIDELINES AND STANDARDS	GUIDELINES AND PRINCIPLES	-
	COMPONENTS AND STRUCTURE	C4

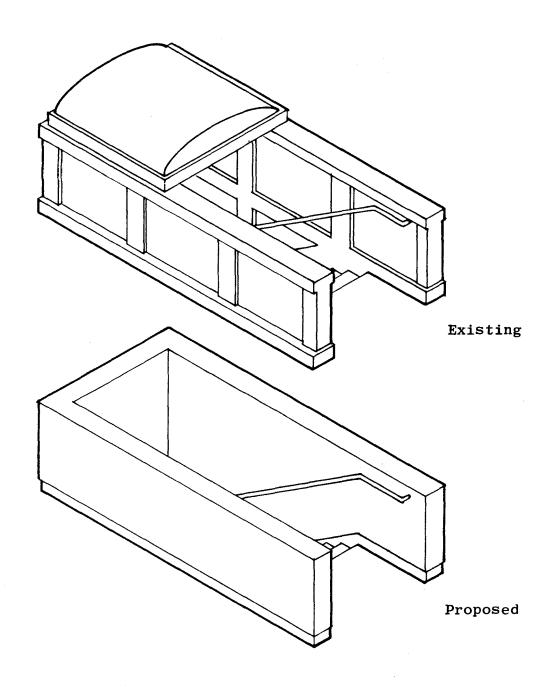

Example Used: Arlington


SURFACE STRUCTURE SIMPLIFICATION

MASSACHUSETTS BAY TRANSPORTATION AUTHORITY MANUAL OF GUIDELINES AND STANDARDS	GUIDELINES AND PRINCIPLES	ı
MANUAL OF GUIDELINES AND STABBANDS	COMPONENTS AND STRUCTURE	C 5

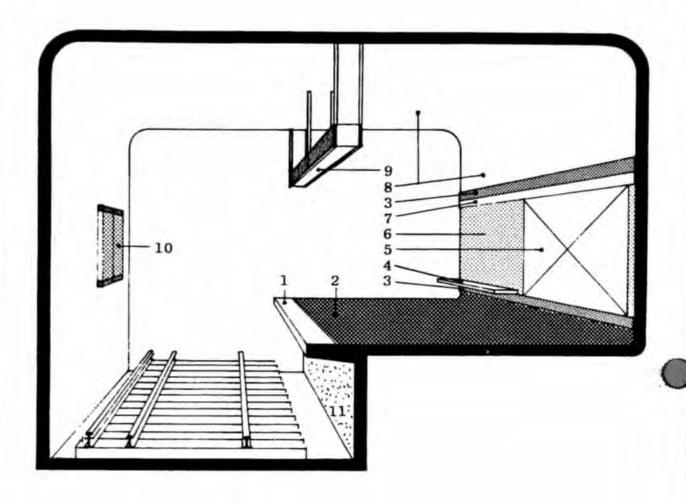

- 1. Yellow safety strip
- 2. Flooring
- 3. 9" colored porcelain enamel identity band
- 4. 3" laminated wood bench
- 5. Porcelain enamel mural
- 6. Ceramic tile
- 7. 6" White porcelain enamel information band
- 8. White painted walls and ceilings
- 9. Continuous fluorescent fixture w/ speakers and emerg. lights
- 10. Advertising frames
- 11. Acoustic treatment beneath overhang


PRIMARY PLATFORM ELEMENTS



- 1. Green Line: Existing stations vary from 135' to 440'.
 Minimum length for 2-3 car trains @ 45'/car plus 30'=300'.
 Each station should be reviewed with the Authority for special conditions.
- 2. Red Line: Existing stations vary from 267' to 435'. Stations will be lengthened to allow for 6 car trains @ 70'/car plus 20'=440'. New stations (South Shore and Alewife extensions) should be designed for ultimate use of 8 car trains = 580' though initial construction will be for 6 car trains.
- 3. Blue Line: Existing stations vary from 187' to 350', which will accommodate 4 car trains @ 50'/car. Ultimately longer trains of larger cars may be necessary so existing platform lengths, and possibility for lengthening should be maintained.
- 4. Orange Line: Existing stations vary from 305' to 480' and are presently served by 4 car trains @ 55'/car. Existing subway stations will be lengthened, and all new stations (Haymarket-Charlestown, North, and Southwest extensions) designed to allow for 6 car trains @ 65'/car plus 20' = 410'.

PLATFORM LENGTHS




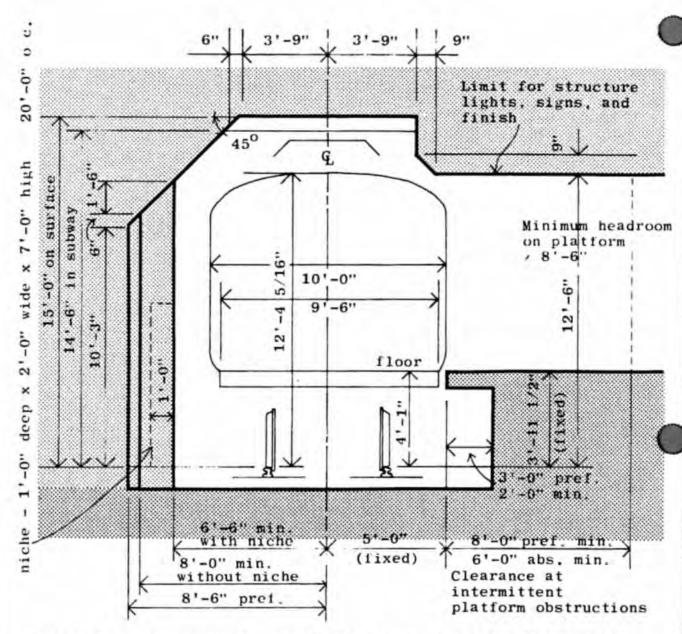

Clearances shown are for new facilities. Existing clearances and absolute minimum clearances for special conditions must be obtained from the MBTA. Track and platform alignment and profile is determined by the engineers in conjunction with the Station Architects and the MBTA. For platform widths see Part IV Components. Structural dimensions shown are minimum unless otherwise noted.

REQUIRED CLEARANCES - Red Line


**************************************	GUIDELINES AND PRINCIPLES	1
MANUAL DE GUIDELINES AND STANBARDS		
REVISED 1977	PLATFORM ELEMENTS	D3

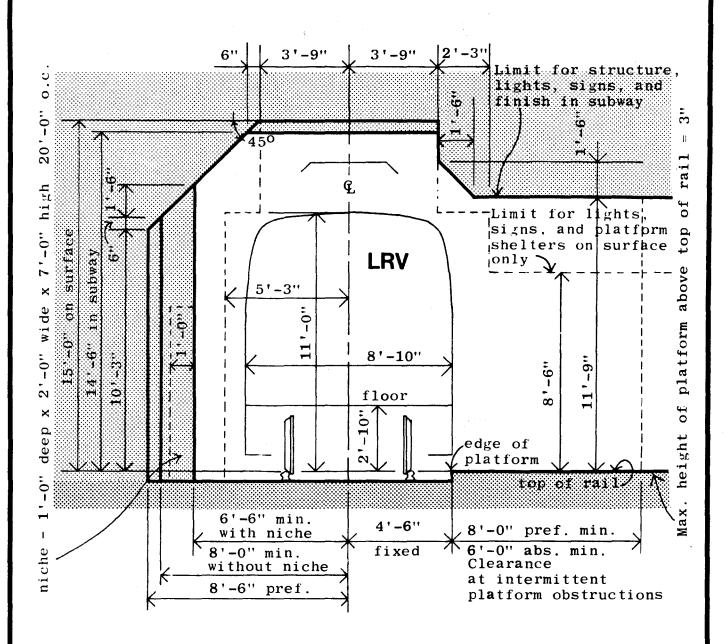

Clearances shown are for new facilities. Existing clearances, and absolute minimum clearances for special conditions must be obtained from the MBTA. Track and platform alignment and profiles are determined by the engineers in conjunction with the Station Architects and the MBTA. For platform widths see Part IV Components. Structural dimensions shown are minimum unless otherwise noted.

REQUIRED CLEARANCES - Green Line


MANSACHUSETTS BAY TRANSPORTATION AUTHORITY	GUIDELINES AND PRINCIPLES	f
MANUAL OF GUIDELINES AND STANDARDS		
REVISED 1977	PLATFORM ELEMENTS	D4

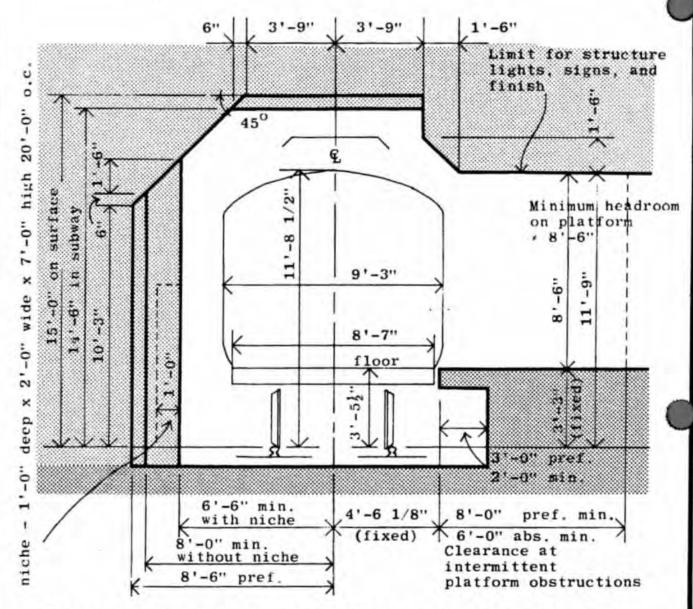

Clearances shown are for new facilities. Existing clearances, and absolute minimum clearances for special conditions must be obtained from the MBTA. Track and platform alignment and profile is determined by the engineers in conjunction with the Station Architects and the MBTA. For platform widths see Part IV Components. Structural dimensions shown are minimum unless otherwise noted.

REQUIRED CLEARANCES - Blue Line


WASSEL WISHTS WASSEL WISHTS WASSEL WISHTS WASSEL WISHTS WASSEL WISHTS WASSEL WISHTS REVISED 1977	GUIDELINES AND PRINCIPLES	1
	PLATFORM ELEMENTS	D5

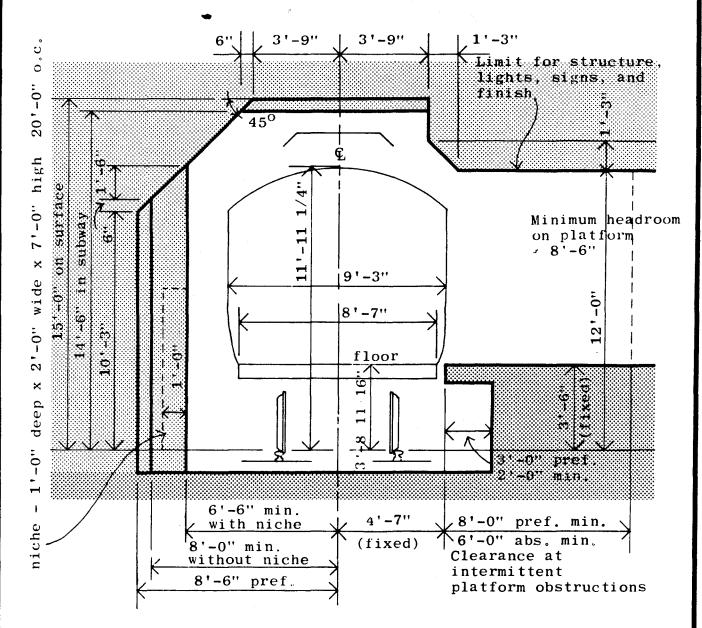

Clearances shown are for new facilities. Existing clearances, and absolute minimum clearances for special conditions must be obtained from the MBTA. Track and platform alignment and profile is determined by the engineers in conjunction with the Station Architects and the MBTA. For platform widths see Part IV Components. Structural dimensions shown are minimum unless otherwise noted.


REQUIRED CLEARANCES - Orange Line

MASSACHUSETTS BAY TRANSPORTATION AUTHORITY	GUIDELINES AND PRINCIPLES	
MANUAL OF GUIDELINES AND STANDARDS	PLATFORM ELEMENTS	D6

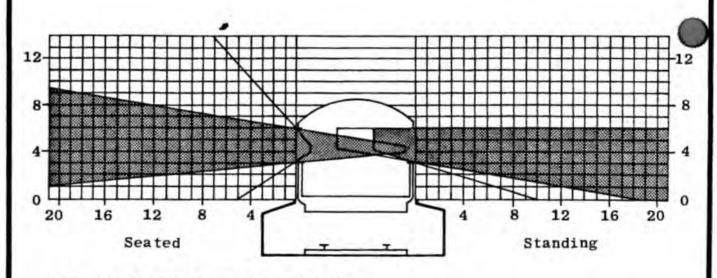

ORANGE LINE · No.12 Car

Top of glass Bottom of glass Floor Platform 9'-5 3/4" above top of rail 6'-9 3/4" above top of rail 3'-8 3/4" above top of rail 3'-6" above top of rail

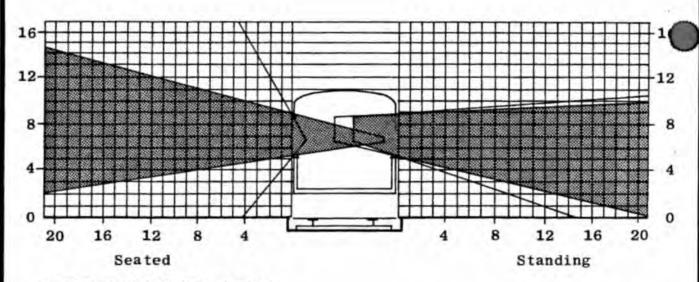


GREEN LINE · LRV

SIGHTLINES FROM CARS

Scale 1/8" = 1'-0"

Top of glass Bottom of glass Floor Platform 8'-10" above top of rail 5'-7' above top of rail 2'-10" above top of rail 0"-3" above top of rail




GUIDELINES AND PRINCIPLES

1


PLATFORM ELEMENTS

D8

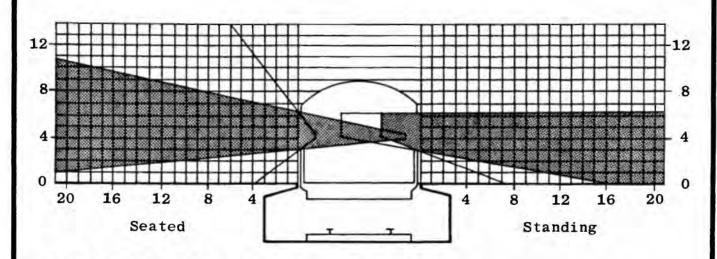

RED LINE · No.1 South Shore Car

Top of glass 9'-9" above top of rail Bottom of glass 6'-10" above top of rail Floor 4'-1" above top of rail $3'-11\frac{1}{2}"$ above top of rail

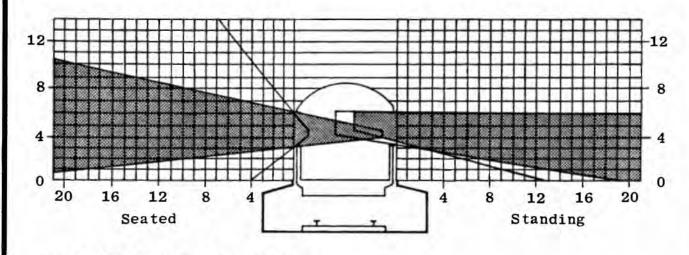



BLUE LINE · No.4 Car

Top of glass $9'-2\frac{1}{2}"$ above top of rail Bottom of glass $6'-6\frac{1}{2}"$ above top of rail Floor $3'-5\frac{1}{2}"$ above top of rail Platform 3'-3" above top of rail


SIGHTLINES FROM CARS

Scale: 1/8" = 1'-0"



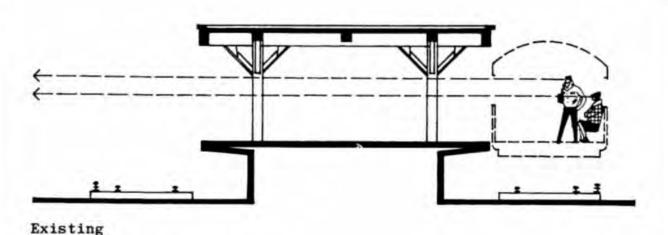



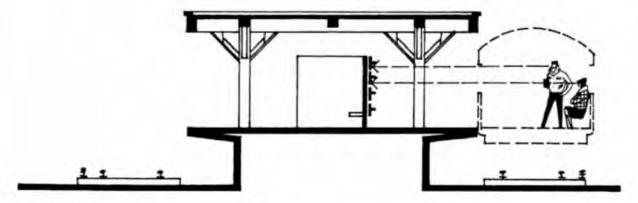



Proposed

Provide new walls on platforms for station identification and orientation graphics.

Example used: Savin Hill

NEW WALLS




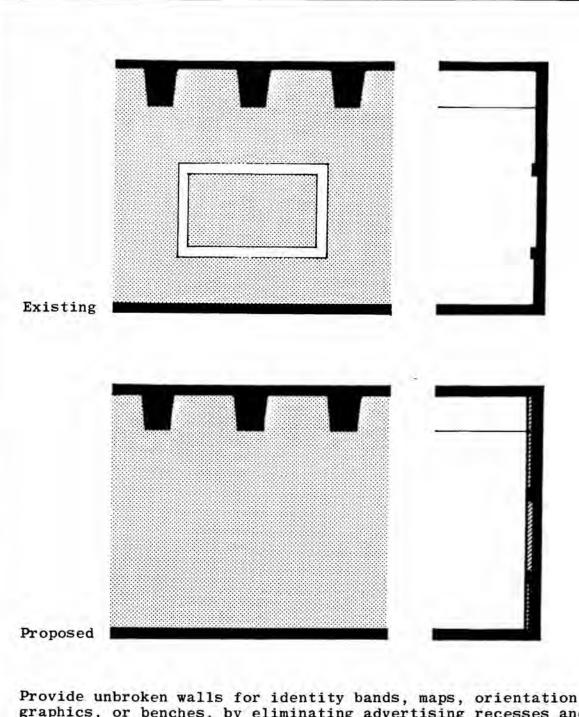


Provide unbroken walls for identity bands, maps, orientation graphics, or benches, by eliminating advertising recesses and other miscellaneous changes of plane.

PLATFORM SIDE WALLS

SAME STANDARDS STANDARDS	GUIDELINES AND PRINCIPLES	1
	PLATFORM WALLS	F2

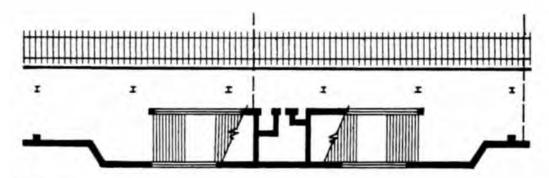

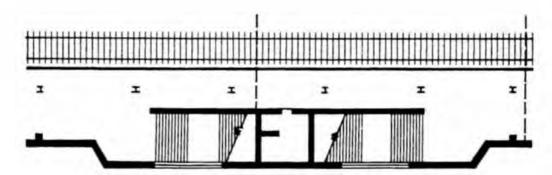



Proposed

Provide unbroken platform walls for identity bands, maps, orientation graphics, or benches, by eliminating unnecessary openings or niches. This also aids station maintenance.

Example used: Beachmont

PLATFORM SIDE WALLS




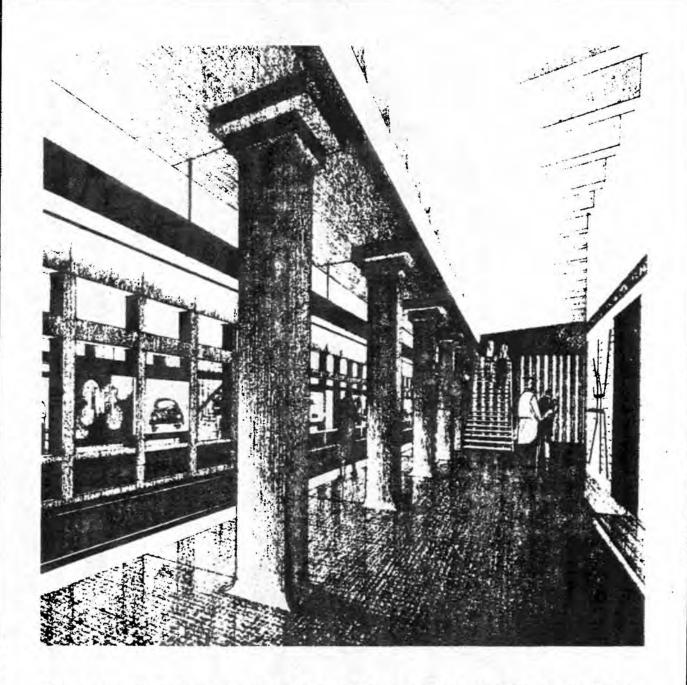


Provide open view of end walls, with transparent stairs or other devices.

Example used: Arlington

PLATFORM END WALLS




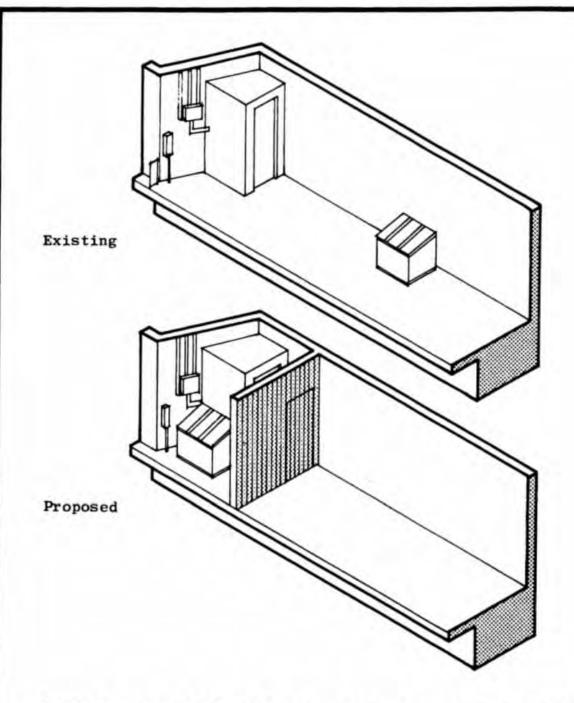

Provide new end walls to define platform space and to mask-off unsightly utility elements.

PLATFORM END WALLS


MARRACHUSETTE BAY TRAMSPORTATION JATTHORITY MARGIAL OF GUIDELINES AND STANDARDS	GUIDELINES AND PRINCIPLES	1
	PLATFORM WALLS	F8

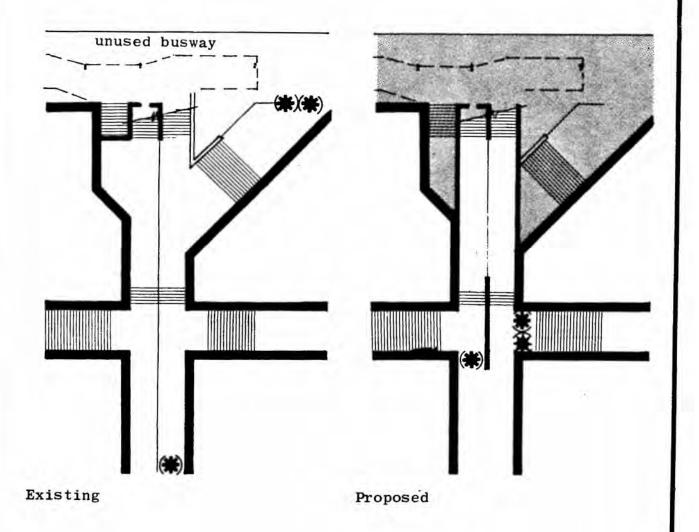


Simplify public spaces by closing-off areas and passageways no longer in use.


Example used: Field's Corner

UNUSED FACILITIES



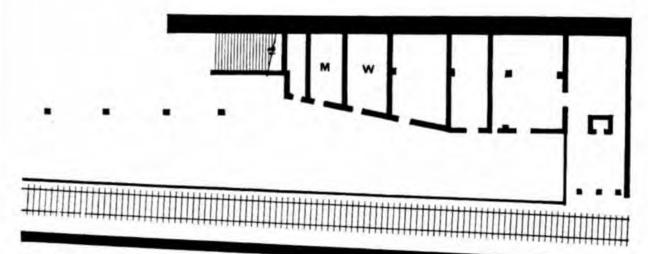

Existing

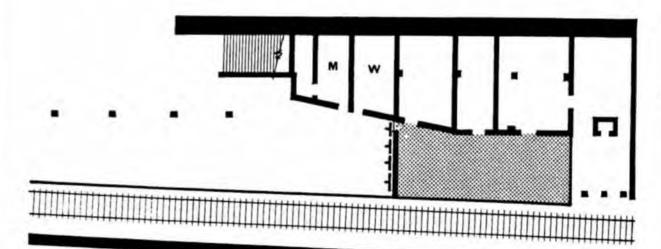


Proposed

Close-off, with new walls, spaces not used by the public.


Example used: Maverick

NON-PUBLIC SPACE



GUIDELINES AND PRINCIPLES I

UNNECESSARY ELEMENTS G2

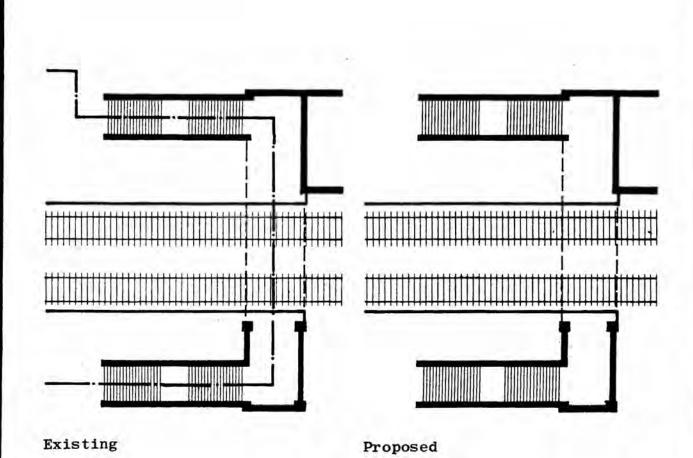


Eliminate unnecessary fences that have unpleasant visual and psychological effects. In this example, an unimportant option of circulation has been removed.

Example used: Orient Heights

UNNECESSARY BARRIERS


MASSACHUSETTS BAY TRAMSPORTATION AUTHORITY	GUIDELINES AND PRINCIPLES	1
MANUAL OF GUIDELSHES AND STANDARDS	UNNECESSARY ELEMENTS	G3

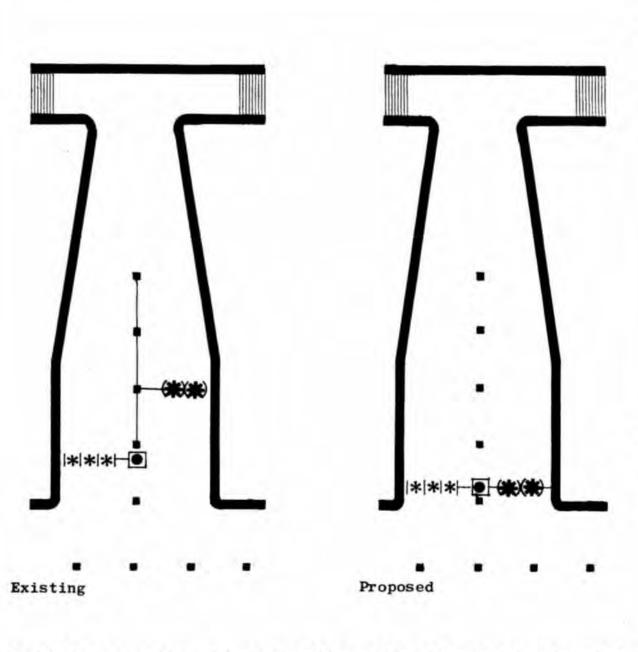


Simplify circulation spaces by eliminating and relocating barriers.

Example used: Copley

UNNECESSARY BARRIERS



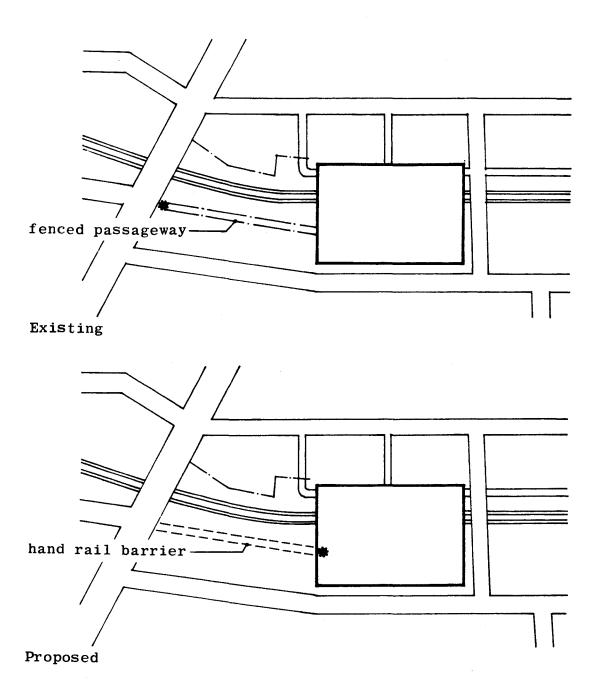


Eliminate unnecessary barriers that have unpleasant visual and psychological effects. In this case relocation of the exit gate makes possible the replacement of a fenced passageway with a hand rail safety barrier.

Example used: Field's Corner


UNNECESSARY BARRIERS

MASSACHUSETTS BAY TRANSPORTATION AUTHORITY MAMUAL OF GUIDELINES AND STANDARDS	GUIDELINES AND PRINCIPLES	-
MANUAL OF GUIDELINES AND STANDARDS	UNNECESSARY ELEMENTS	G5





MASSACHUSETTS
BAY
TRANSPORTATION
AUTHORITY
GUIDELINES AND STANDARDS
PART IV
COMPONENTS
REVISED 1977



MANUAL OF GUIDELINES AND STANDARDS

PART I GUIDELINES AND PRINCIPLES

PART II STATION RECONNAISSANCE (Discontinued)

PART III STATION MODERNIZATION PROGRAM (Discontinued)

PART IV COMPONENTS

PART V GRAPHICS

PART VI LIGHTING

PART VII MATERIALS

PART VIII ACOUSTICS

PART IX SERVICE FACILITIES

PART X SITE PLANNING AND NEW STATIONS

PART XI VENTILATION

GENERAL INTRODUCTION

The Massachusetts Bay Transportation Authority has found it both necessary and possible to concentrate attention on the complex needs of people. Programs to improve service must now include a new emphasis on the quality of the transportation experience. In effect, transportation engineering has been joined by human engineering and environmental design.

This manual provides a framework for the continued coordination of all those elements in the system that affect human comfort.

Many of the criteria involved are common to all environments, such as the control of light, noise, humidity, temperature, wind, and odors, or the need for orderliness, through clear and easy circulation and clean appearance. Other criteria that are more specific to the transportation environment are such needs as safety, traffic handling capability, spatial variety, consistently available information, and orientation.

The most important single criterion that has guided the preparation of this manual is the need for orientation. The rider must not only be physically comfortable, he must also know in the fullest sense where he is and where he is going.

Since to the layman a public transportation system is to a large extent an invisible skeleton of the city and metropolitan region, the comprehension of that structure generates an awareness and appreciation of the city itself, and an appreciation of travel through it.

There are many aspects to achieving this orientation. Circulation at all points must be direct and open. Spaces should relate visually to their surrounding environment, either through direct openings to adjacent spaces and structures, or in the case of platforms, by graphic reflection through photographic murals.

Above all, the need for orientation places great emphasis on maps and a consistent system of identification and directional signing. Graphics then emerges as a major factor in the design of each environment, a factor that must be given high priority in the early design phases of each project.

It is hoped that all participants in all programs will familiarize themselves with the entire manual, so that the implications of each decision can be understood in a system-wide context.

The standards and guidelines presented here are not inflexible rules. They are a framework for meaningful development and variety, and offer no restriction to the capacity of each participant to evolve better solutions to old or new problems.

As new solutions are developed and approved, revised and additional pages for the manual will be issued to all participants.



Part IV of the Manual illustrates a number of elements and conditions which occur repeatedly throughout the System. It establishes recommended treatments for these conditions, gives layout information for required station equipment, and describes the specially designed components that have been adopted as Authority standard. The intent is that similar situations in different stations receive similar treatment, with resulting advantages in large volume purchasing, increased clarity for subway users, and an intensified sense of unity among the variety of station types.

Refer to Part V: Graphics, and Part VI: Lighting, for other standardized elements.

INTRODUCTION

MASSACHUSETTS BAY TRANSPORTATION AUTHORITY MANUAL OF GUIDELINES AND STANDARDS	COMPONENTS	IV
MARON, OF GOOGEENES AND STANDARDS		2


PART IV COMPONENTS

Surface Structures

- Explanation
- Glass vaulted (Type 1)
- Low-walled (Type 2)
- 4. Control House (Type 3)
- Controlling factors width of sidewalk
- 5.1 Controlling factors building projections
- 5.2 Controlling factors visual sight lines
- Special situations
- Station closures
- Identification Signs T sign Description
- 8.1 Identification Signs T Sign Location
- 8.2 Identification Signs T Sign Anchor Detail
- 8.3 Identification Signs Station Identification Signs
- 8.4 Identification Signs Station Identification Signs
- 8.5 Identification Signs Station Identification Signs

B. Fare Collection

- 1. Explanation Basic Fare Structure
- 1.1 Explanation Methods of Collection
- Design Criteria
- 2.1 Design Criteria Fare Collection Sequence
- 2.2 Design Criteria Fare Collection Circulation (Inner City)
- 2.3 Design Criteria Fare Collection Line (Inner City)
- 2.4 Design Criteria Fare Collection Circulation
 - In Suburban
- 2.5 Design Criteria Fare Collection Circulation
 - In Suburban
- 2.7 Design Criteria Fare Collectors Sight Lines
- 2.8 Design Criteria Queue Space
- Collection Booth General
- 3.1 Collection Booth Freestanding (General Description)
- 3.2 Collection Booth Freestanding (Inner City)
- 3.3 Collection Booth Freestanding & Built In (Suburban)
- 3.4 Collection Booth Details
- 3.5 Collection Booth Equipment
- 3.6 Collection Booth Equipment
- 3.7 Collection Booth Countertop Coin Plate
- 3.8 Collection Booth Cabinet
- Turnstile Existing
- 4.1 Turnstile New
- 4.2 Turnstile Base Detail
- 5. Fare Box
- 6. Barriers Pass Gate
- 6.1 Barriers Emergency Gate, low type
- 6.2 Barriers Fixed, low type
- 6.3 Barriers Suggested Details
 - (Pages 1.2, 1.3, 2.6, 4.3, 4.4, 6.4 Deleted)



COMPONENTS


IV

C. Circulation Elements

- 1. Rotary Exit Gate
- 1.4 Rotary Exit Gate Special Installations
- 1.5 Rotary Exit Gate Visible From Surface
- 2. Platform Areas Design Criteria
- 2.1 Platform Areas Design Criteria
- 2.2 Platform Areas Clearance Requirements
- 2.3 Platform Areas Clearance Requirements (Busways)
- 3. Vertical Circulation
- 3.1 Stairs Design Criteria
- 3.2 Stairs Design Criteria
- 3.3 Stairs Stair Treads
- 3.4 Stairs Handrails
- 4. Escalators Design Criteria
- 4.1 Escalators Layout
- 4.2 Escalators Stair Escalator Relationship
- 4.3 Escalators Emergency Shut-Off Switch
- 4.4 Escalators Control Criteria
- 4.5 Elevators Design Criteria
- 5. Ramps and Passages Design Criteria
- 6. Fence Description
- 6.1 Fence-Construction
- 6.2 Fence High Fences
- 6.3 Fence Modification of Existing Fences
- 7. Guard Rails Suggested Detail
- 7.1 Guard Rails Suggested Detail
 - (Pages 1.1, 1.2, 1.3, 3.5, 3.6, deleted)

D. Station Furnishings

- 1. Explanation Public Convenience Facilities
- 2. Benches Wall-mounted
- 2.1 Benches Wall-mounted
- 2.2 Benches Suggested Detail
- 5. Internally-Illuminated Signs
- 5.1 Internally-Illuminated Signs
- 5.2 Internally-Illuminated Signs
- 6. Commercial Facilities Explanation
- 6.1 Commercial Facilities Newstands
- 6.2 Commercial Facilities Newstands
- 6.3 Commercial Facilities Telephone Booths
- 6.5 Commercial Facilities Other Facilities (Pages 3, 4, 6.4, 7, 7.1, 7.2, 7.3, deleted -- Pages 7.1 thru 7.3 covered in Vol. V)



E. Safety - Emergency - Control

- 1. Emergency Requirements
 1.1 Station Emergency Egress

- 1.2 Station Emergency Egress
 1.3 Station Emergency Egress
 1.4 Station Emergency Egress

MANDACOUSETTS BAY TRANSPORTATION AUTHORITY MANUAL OF GUIDELINES AND STANDARDS REVISED 1977	COMPONENTS	IV
	CONTENTS	5

General Description

These structures provide access to below grade platforms and may also function as exits. They are important street elements and careful consideration should be given to their relationship to other street furnishings and to the character of the street as a whole. In order to insure a consistency from station to station, they should be the types described in this Section.

Special situations: A different type may be approved by the Authority and their consultants.


Definitions


Entrance - a surface structure without roof, simply serving as entrance or exit for fare collection facilities below. Station close-off occurs below the surface.

Headhouse - a surface structure serving the same function as an entrance, but with a roof and surface level close-off. Escalator installations require headhouses.

Control House - a larger headhouse, housing a fare collection line and, sometimes, service facilities and concessions.

EXPLANATION



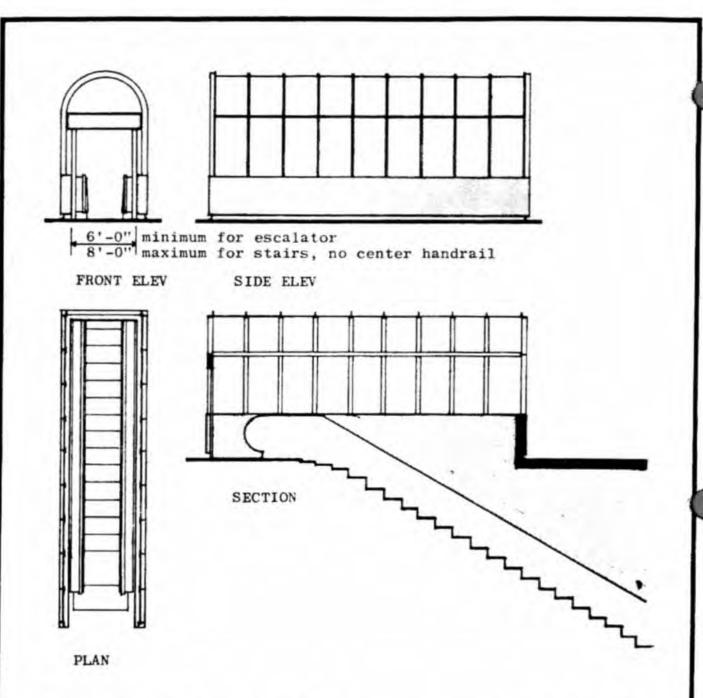


The Type 1 steel and glass structure permits maximum visibility of the surrounding area and also permits maximum light penetration to the lower level, while providing complete weather protection.

This type has been installed at Central Square


GLASS VAULTED TYPE 1 scale 1/8" = 1'-0"
HEADHOUSE

WASSACHUSETTS BAY TRAMBROWT ATTOM ANTHOMETY	COMPONENTS	IV
MARKIAL OF GUIDAL PASS AND STANDARDS	SURFACE STRUCTURES	A2

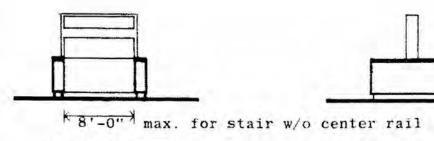



SIDE ELEVATION

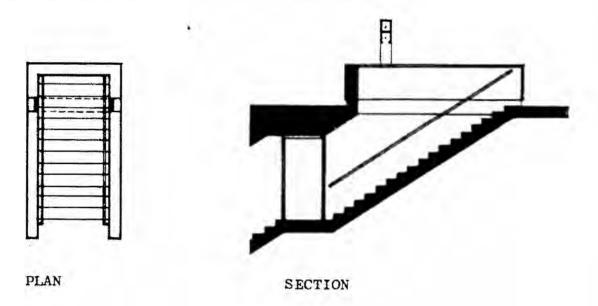


The Type 2 structure provides access to stations by means of a minimal surface structure. It should be used where the vaulted type would result in a physical or visual interference with surrounding elements.

Type 2 is normally used only with stairs, since escalators require overhead protection and surface level close-off. Parapet walls must be high enough to make sitting difficult.

LOW WALLED TYPE 2 scale 1/8" = 1'-0"

MASSACHUSETTS SAY TRANSPORTATION AUTHORITY	COMPONENTS	IV
MANUAL OF GUIDELINES AND STANDARDS.	SURFACE STRUCTURES	А3

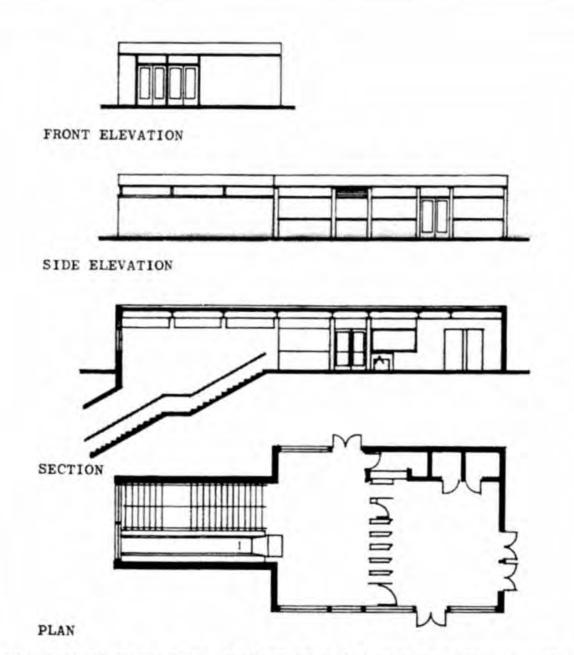


The Control House Type differs from the purely entrance and exit surface structures by the inclusion of a fare collection area. The dimensional recommendations contained in the section on fare collection apply.

This type is used in the design for North Station.

CONTROL HOUSE TYPE 3


MASSACHUSETTS BAY TRANSPORTATION AUTHORITY MARMIAL OF GUIDELINES AND STANDARDS	COMPONENTS	12 (
	SURFACE STRUCTURES	A4

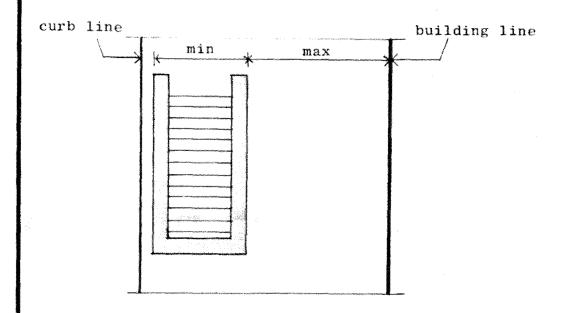


The following factors will control the choice of type and/or the dimensions of a surface structure.

Width of Sidewalk In situations with narrow sidewalks the minimum width of the surface structure should be selected so that sidewalk circulation will be least restricted. Approval of local traffic authorities is required.

CONTROLLING FACTORS scale 1/8" = 1'-0"




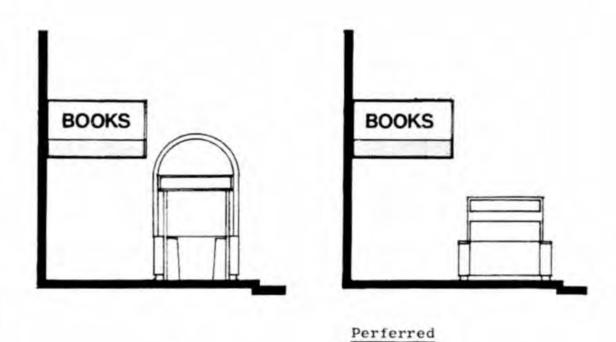

Building projections - existing signs, lights, and similar elements should be considered when selecting the surface structure. Close proximity or actual contact of MBTA structures with nearby elements should be avoided.


CONTROLLING FACTORS scale 1/8" = 1'-0"

MASSACHURETTS ANY TRANSPORTATION AUTHORITY MARUAL OF GLIDELINES AND STANDARDS	COMPONENTS	IV
	SURFACE STRUCTURES	A5.1

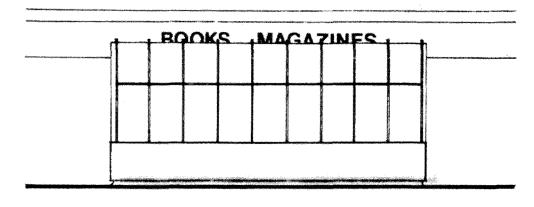

ELEVATION

BOOKS MAGAZINES



ELEVATION - Preferred

Visual Sight Lines - It is important that visual conflict between MBTA structures and surrounding signs and buildings be avoided. The architect should make the necessary field investigations to insure that no conflicts will exist the selected surface structure.

CONTROLLING FACTORS scale 1/8" = 1'-0"

T	MASSACHUSETTS SAT TRANSPORTATION AUTHORITY	COMPONENTS	IV
	MANUAL OF QUIDELIMES AND STANDARDS	SURFACE STRUCTURES	A5.2

The following situations apply only at certain stations. Proposed designs will require special review and approval by the Director, and often by local authorities.

Entrance Through Buildings

In many cases access to stations will be through existing or new structures. In this event the design will be largely determined by existing conditions.

Historical Area


Occasionally surface structures are located in areas of historical importance. In such cases the character and materials of the surrounding area will determine the design approach.


Multiple Use Structures

The design of surface structures for multiple use is desirable, provided that space is available, that the other use is suitable to a subway entrance, and that the identity of the MBTA elements is in no way compromised. Multiple use provides an active relationship between street and station, draws the public into the System, and furnishes full or part-time supervision by the concessionaire's personnel.

SPECIAL SITUATIONS

MASSACHUSETTS BAT THANSPORTATION AUTHORITY NANUAL OF GUIDELINE'S AND STANDARDS	COMPONENTS	IV
	SURFACE STRUCTURES	A6

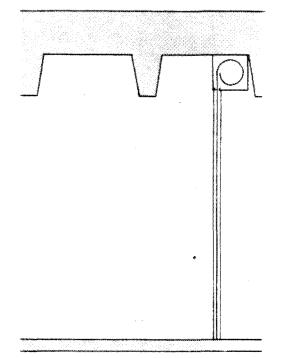

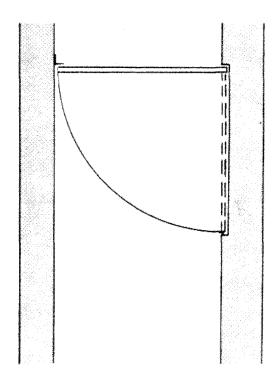

Overhead Door preferred


Swing Gate

All surface structures are closed off during non-operating hours. Existing closures vary, being, typically: hollow metal swing doors or roll-down overhead doors at street level for headhouses and control houses, and steel plate swing doors at the bottom of stairs for entrances.

In many cases, it will be possible to refurbish the existing closure. Otherwise the preferred closure is a roll down grille, and where overhead clearance is insufficient, a swing gate. Gates and grilles should be open to passage of air. In the open position the closure should be recessed, if possible, to minimize obstruction to traffic.

Pantograph gates have been found too insubstantial for use as closures. Closures should have locks capable of operation from either side.

STATION CLOSURES



Basic Fare Structure - Present System

The basic fare structure of the Massachusetts Bay Transportation Authority consists of a rapid transit rate and a surface rate. Therefore, transfer between surface and rapid transit lines requires the payment of an additional fare. However, free physical transfer is provided between all rapid transit lines.

The three rapid transit lines operate wholly within the rapid transit fare zones. Five street care lines, operating through the central subway, also charge the rapid transit rate while in the subway. When operating on the surface they are considered surface lines and charge the surface rate of fare.

A sixth car line, the Ashmont-Mattapan line, operates exclusively on private right-of-way in a suburban area as an extension of the Cambridge-Dorchester rapid transit line. A continuation ride on this line involves no additional fare. Local riding requires payment of a flat fare, equal to other surface lines of the system.

Fare paid within the street car subways are good for a ride as far as the first station outside the subway. The surface fare must be paid for riding beyond this point.

Basic Adult Rates of Fare

Urban Rapid Transit 25¢ Suburban Rapid Transit 50¢ Surface Bus * and Trackless Trolley 25¢ Surface Street Car 20¢ Highland Branch Express 50¢

*On Surface Bus, zone fares are changed on premium routes.

Discount Fares

Children Under 11 Students with T/Identification and Senior Citizens are one half the adult fare

Handicapped riders are one half adult fare except during rush hours. 7-9 a.m. and 4-6 p.m. when regular fare is charged.

Children under 11 and students are allowed free transfer by issuance of an identification check upon request.

EXPLANATION

MAJERACORDETTS SAY TRANSPORTATION AUTHORITY	COMPONENTS	12
STATE OF STOCKESS THE SAMEONES	FARE COLLECTION	B1

Methods of Collection

A fare transaction involves one of the two following methods of fare collection:

Station Collector

Collectors function primarily as change makers. Collectors do collect half fares, inspect children's identification badges, and free riding passes. There is a turnstile at each primary collection booth as well as an International registering, coin return fare box in which half fares must be deposited.

Rapid transit collectors are on duty from 5:00 a.m. to 1:00 a.m. daily. Street care subway collectors work approximately the same hours.

Turnstiles and Rotary Coinpassers


The use of turnstiles is the most common method of fare collection and is responsible for about 90% of all fares collected. Most turnstiles are of the two-way entrance-exit type and were supplied by either Perey General Electric.

Rotary coinpassers are installed at unmanned entrances. They accept a quarter.

Street Car Operator

All street cars are equipped with Keene registering fare boxes.


EXPLANATION



Design Criteria


- a. Selection of elements depends on:
 - 1. Whether paid or unpaid area
 - 2. Whether attended or unattended area
- b. Although paid areas must be physically separated from unpaid areas, it may be desirable to visually de-emphasize the separation (or design for visual continuity). Various types of fences, fence fabric and methods of installation can be selected by the architect to achieve the desired degree of transparency.
- c. The number of turnstiles or rotary coinpassers needed in any particular station will be determined by the MBTA Planning Dept.
- d. Low fencing should be used between paid and unpaid areas only where it will be in the normal field of observation from a primary collection booth; otherwise high fencing is required. High fencing should be at least 6'-10" high, and should extend to the ceiling in low headroom areas.
- e. A 9" high metal band appears at waist height (3'-2") in the turnstiles and on adjacent fencing. In fare collection lines, low fences should have a band of stainless steel, reflecting the adjacent turnstile band material and affording better durability in these high public contact areas. High fencing, if divided horizontally, should have a similar 9" band, painted with the fence frame, and set at the same 3'-2" elevation.
- f. Emergency gates and maintenance gates may be combined at major access and egress points. As long as the opening is 4'-0" or more, one gate is sufficient for both functions.
- g. Fences, gates, and solid barriers should be designed so that their height relates to the vertical dimensions established by the exit gates and other components.
- h. Rotary coinpassers present a considerable obstruction to traffic flow, and should be used only where a fare collection line with turnstiles and collection booth is out of the question.

DESIGN CRITERIA



COMPONENTS

IV

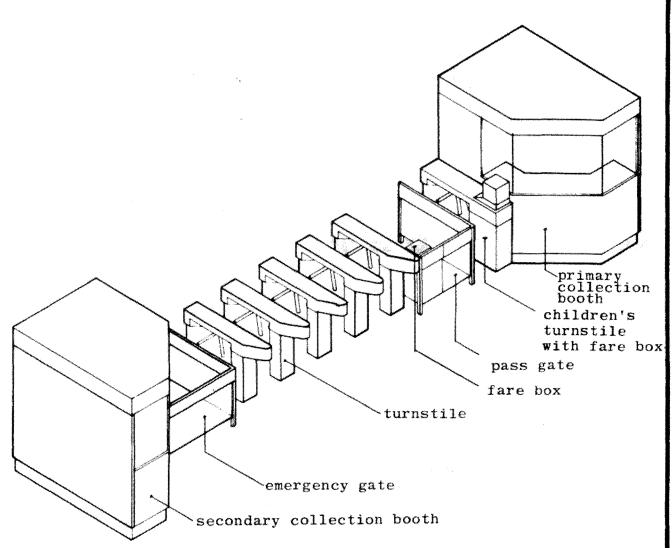

Fare Collection Sequence

The typical fare collection line consists of the following elements:


- a. Primary collection booth
- b. Children's turnstile and fare box
- c. Pass gate
- d. Token-operated turnstiles

Optional elements consist of a (1) secondary collection booth which generally operates during peak periods only and does not normally have a children's turnstile connected to it. (2) Emergency gate to provide access for emergency equipment and maintenance vehicles between the paid and unpaid areas. (3) Fare box used in conjunction with pass gate. The emergency gate does not normally occur in the fare collection line, but may be included when no other options exist.

DESIGN CRITERIA

MASSACHUSETTS BAY TRANSPORTATION AUTHORITY	COMPONENTS	IV
MARVAL OF GUIDELINES AND STANDARDS	FARE COLLECTION	B2.1

Paid Area

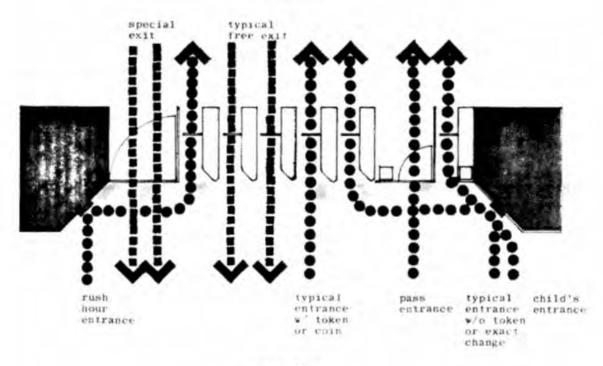

Free Area


Inner-City Station - Pay Enter, Free Exit

Fare Collection Circulation

The zones of typical circulation are shown and should be considered in any alteration of the typical line. Circulation paths should be kept clear and free from conflict.

Typical Layout

MASSACHUSETTE BAY TRANSPORTATION AUTHORITY MANUAL OF GUIDELINES AND STANDARDS REVISED 1977	COMPONENTS	IV (
	FARE COLLECTION	B2.2

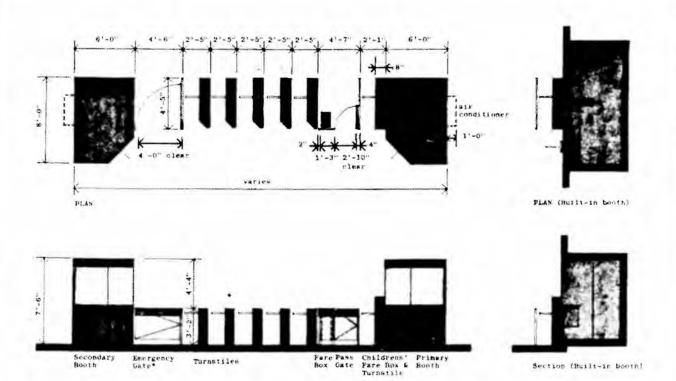


*Emergency gate included in line only if no alternative position exists

Inner City Station - Pay Enter, Free Exit

TYPICAL FARE COLLECTION LINE WITH DIMENSIONS

MARSACHUSETTS DAT TRANSPORTATION AUTHORITY MANUAL OF GUIDELINES AND STANDARDS REVISED 1977	COMPONENTS	IV
	FARE COLLECTION	B2.3

Paid Area

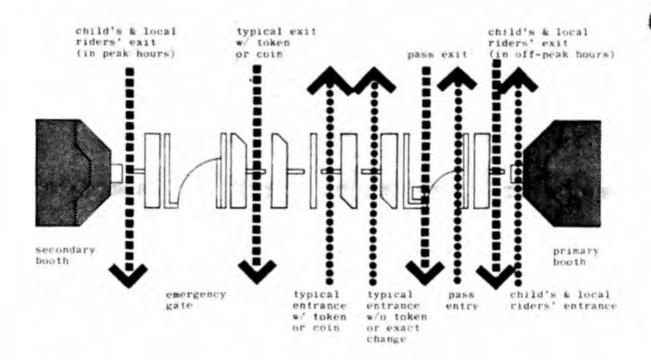

Free Area

Suburban Station - Pay Enter and Exit


Fare Collection Circulation

TYPICAL LAYOUT

MASSACHUSETTS BAY TRANSPORTATION AUTHORITY MANUAL OF GUIDELINES AND STANDARDS REVISED 1977	COMPONENTS	IV
	FARE COLLECTION	B2.4
HEVISES 1377	TAIL OOLLEOTION	

Paid Area

Number of turnstiles varies

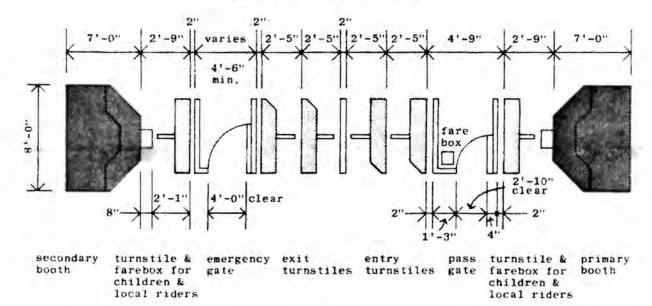



Free Area

Suburban Station - Pay Enter and Exit

TYPICAL FARE COLLECTION LINE WITH DIMENSIONS


MASSACHUSETTS BAY TRANSPORTATION AUTHORITY MANUAL OF GUIDELINES AND STANDARDS REVISED 1977	COMPONENTS	IV
	FARE COLLECTION	B2.5

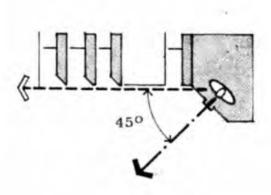

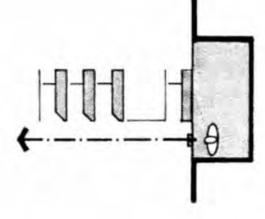

STANDARD BOOTH

BUILT-IN BOOTH

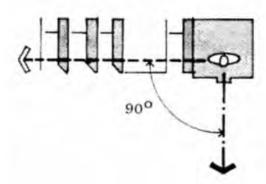


UNACCEPTABLE BOOTH

Fare Collector's Sight Lines

Variations on the fare collection line depend on the physical limitations of the station. In all cases the fare collector should be able to see clearly down the line of equipment with out moving his head more than 45° from the frontal position as in A and B above. An angle of more than 45° as in C above is unacceptable.

DESIGN CRITERIA

MASSAC MUNETYS THE PROPERTY AND THE PRO	COMPONENTS	IV (
MANUAL IA LOUIS PREVANCE STANDARUS	FARE COLLECTION	B2.7

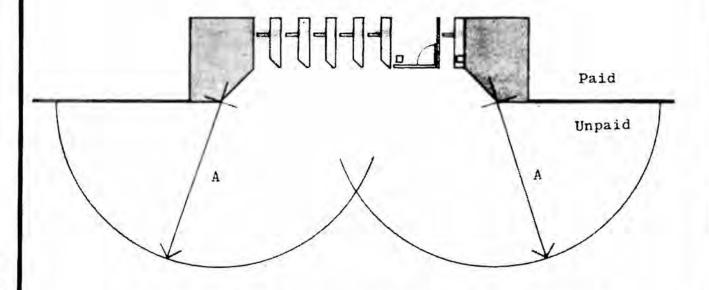

- 1. In general, the primary collection booth should be on the right, to permit right hand circulation. If circulation is thereby improved, it can be on the left.
- 2. Required queue space: Dimensions A (20' minimum at downtown stations, 15' minimum at suburban stations). This space is in addition to required runoffs for stairs and escalators, and to such space for through circulation as may be required by the station plan. Queue space is required at both booths.
- 3. Individual station plans and expected rush hour circulation patterns will establish the position queues will take. Queues must not prevent patrons already possessing tokens from direct access to the turnstiles, nor obstruct exiting from swing-type exit gates that many be opened during rush hours.

DESIGN CRITERIA - Queue space

MASSACHUBETTS BAY TRANSPORTATION AUTHORITY MANUAL OF GUIDELII	BAY TRANSPORTATION AUTHORITY	COMPONENTS	IV
	MANUAL OF GUIDELINES AND STANDARDS	FARE COLLECTION	B2.8

General Description

Collection booths are the major components in the fare collection line, and are required in every station. They are enclosures from which the collector sells tokens, and supervises the collection line. Booths are of two types, freestanding and built-in, with built-in preferred if circulation allows.

General Requirements

At each fare collection line there is one primary collection booth, which may be augmented by one or more other booths, callecd secondary collection booths. Secondary booths function only during peak circulation hours and do not usually have provision for the collection of children's fares. Secondary booths are also called token booths.


The location of the booth is of primary concern. It must be positioned to provide an easy and natural sequence from the purchase of tokens to the arrival at the platform.

The children's turnstile must be physically connected to the primary collection booth. In some heavy traffic situations, a children's turnstile may be installed with a secondary booth.

The collection booth requires special equipment consisting of controls, alarms, major switches, signal devices, public address equipment, and telephone. The primary booth contains a cash safe which the collector uses at the end of each shift. It may contain one or more TV monitors. When secondary collection booths are use, the operators of these booths use the cash safe in the primary collection booth.

Collection booths have floors raised by 4" or 6" above the mezzanine floor level, to permit better observation by the collector.

COLLECTION BOOTH



IV

General Description

Freestanding collection booths of bullet-resistant design will be furnished by the Authority or the Contractor, and set up in place either by the Authority or by the Contractor. Certain equipment will be furnished with the booth, and the Contractor shall provide and connect power and communication lines to serve this equipment, as well to serve other items of equipment furnished by him. secondary booth is similar to the primary except that certain items of equipment may be omitted, as explained below.

Equipment Furnished with the Booth

All conduit and pull for installed or anticipated Equipment, separate for AC, DC, and signal 1-Main Breaker Panel 1-Exterior Duplex Outlet 1-151 Watt Incandescent DC Emergency Fixture - 660 watt/600 Volt Socket, with Conduit and Junction Box 3-22 Watt Circular Flourescent Fixtures Lighting Fixture W/2 - 24" Flourescent Lamps Coinplate, Counter Tops, Cabinets, Coat Hooks Heating, Ventilation & Air Conditioning Equipment

Maintain 70° minimum in winter months. Maintain 78° maximum in summer months. Temperature:

Use water-cooled condensers below grade, and air-cooled condensers above grade with good ventilation. Heat pumps with supplemental

electric heat.

Humidity: Fifty percent maximum in summer months; use

electric reheat. No control in winter months.

Provide 20 to 25 CFM outside air. Ventilation: Maximum

residual air velocity in occupied area of 50 feet per minute. Maintain small positive pressure in room. All ventilation shall be mechanical and run when booth is occupied.

Equipment Furnished by the Contractor

(primary booth only, unless otherwise noted)

1-Telephone (primary and secondary booths)

1-ADT Alarm (if required)

1-Starters Call Button (primary and secondary booths)

1-Starters Call Bell (mounted on the primary booth)


1-or more TV Surveillance system monitor sets and controls (if required)


1-or more emergency exit alarms (if required) Sound System Equipment and Monitor Loudspeaker Other equipment and connections as may be required

COLLECTION BOOTH - Freestanding

Built-in booth has similar requirements

MASSACHUSETTS BAY TRANSPORTATION AUTHORITY	COMPONENTS	IV
MANUAL OF QUIDELINES AND STANDARDS	FARE COLLECTION	B3.1

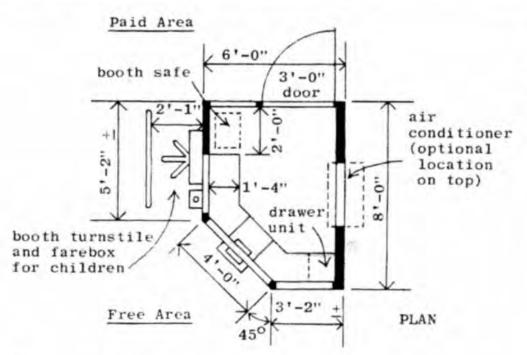

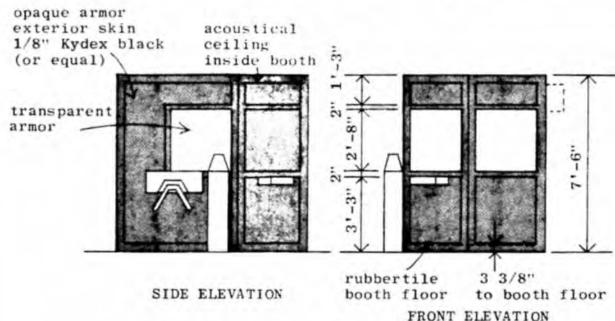



All metal trim and frames to be black anodized aluminum.

Reference: T Drawing M-a-24368

INNER CITY STATION - Pay Enter, Free Exit

COLLECTION BOOTH - Freestanding




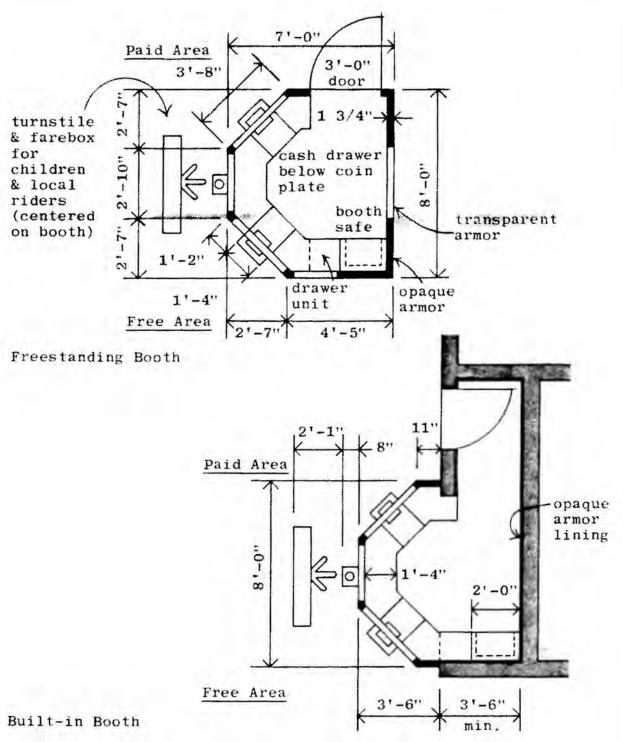


SUBURBAN STATION - Pay Enter and Exit

COLLECTION BOOTH - Freestanding and Built-in

T	MASSACHUSETTS BAY TRANSPORTATION AUTHORITY MANUAL OF GUIDELINES AND STANDARDS REVISED 1977	COMPONENTS	IV
		FARE COLLECTION	B3.3

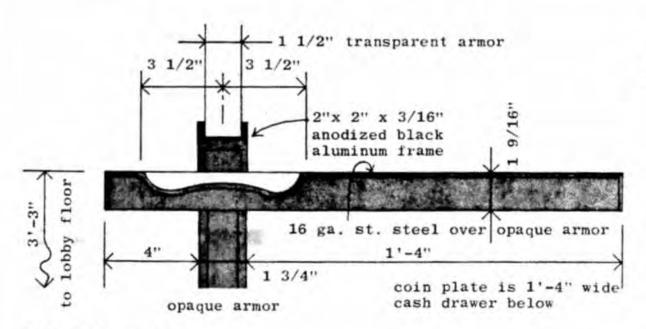

Coin Plate Detail

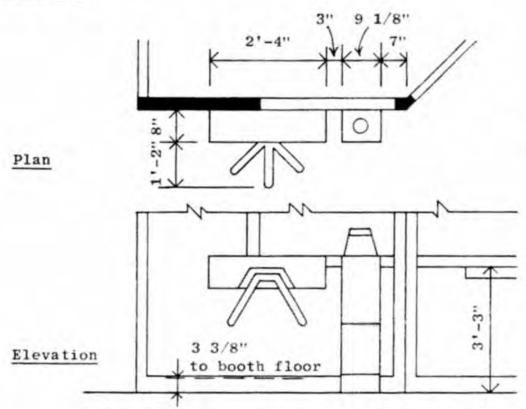

Booth Turnstile and Farebox - Inner City Station

COLLECTION BOOTH - Details

MASSACHUSETTS EAT TRANSPORTATION AUTHORITY	COMPONENTS	
REVISED 1977	FARE COLLECTION	B3.4

A. Environmental Control

1.	Exhaust	fan	*	in built-in booths, the
				Authority will furnish
				a counter mounted fan.

- 2. Lighting normal 1 Type N over counter and backlighting sign strip.
 Other fluorescent or incandescent as required.
- 3. Lighting emergency (DC) * 1 or more 151 w. down-light, equal to McPhilben 3-10B
- 4. Heater * 2 1000 w. equal to Chromolox HV 2411
- 5. Switches * one each for lighting and each heater
- 6. Convenience outlet * duplex
- 7. Fresh air supply * wall or door grille.6" max. in one dimension, or with steel protective grating

provide means of winter close off

B. Communication

- 1. Telephone wall type, connected to central MBTA switchboard
- 2. ADT alarm ** connected to cash safe and ADT headquarters, via telephone lines.
- 3. Emergency exit alarm ** buzzer actuated by opening of emergency exit
- 4. TV surveillance system monitor set(s) counter ** mounted
- 5. Sound system microphone, monitor loudspeaker, VU meter and variation control, volume control
- 6. Starters' call bell button actuating remote call bell

COLLECTION BOOTH EQUIPMENT

1	MASSACHUSETTS BAY TRANSPORTATION AUTHORITY MANUAL OF GUIDELINES AND STANDARDS	COMPONENTS	IV
	MANUAL OF GUIDELINES AND STANDANUS	FARE COLLECTION	B3.5

C. Operating Aids

- Coathook strip * (**) 3 hooks located away from public view
- Bulletin board * (**) door or wall mounted, away from public view
- Collection booth see sheet B3.8 cabinet *
- Cash safe (**) furnished by Authority
- 5. Children's turnstile furnished by Authority with pedal, coin return (**)


Refer to Sheet 3.4 for preferred equipment locations


- All equipment listed is to be furnished by the Contractor, except: * items are Authority furnished with the free-standing booth only. Remarks therefore apply only to built-in booth.
- All equipment listed is required in both primary and secondary booths, except:

 ** items are required in primary booth only.


COLLECTION BOOTH EQUIPMENT

T	WASSACHUSETTS BAY TRANSPORTATION AUTHORITY	COMPONENTS	IV (
	MANUAL OF GUIDELINES AND STANGARDS	FARE COLLECTION	B3.6

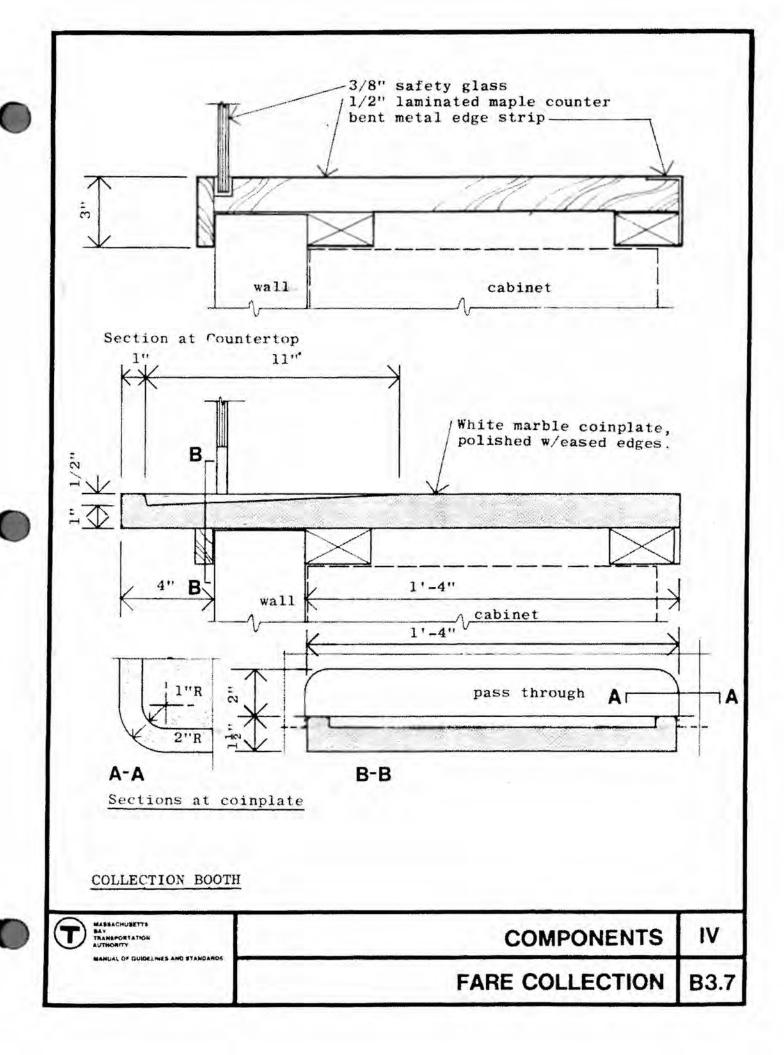

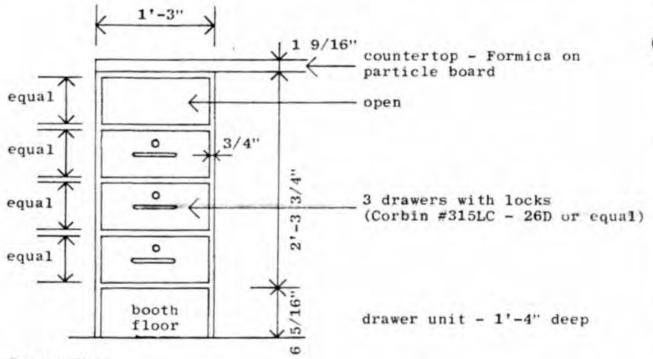

Drawer Unit

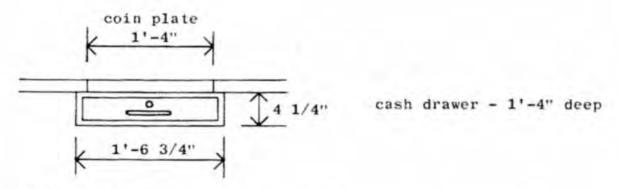


Cash Drawer

- All wood to be 3/4" hardwood or hardwood plywood, except drawer bottoms 1/2" and dividers 1/4".
- Construction to be equal to American Woodwork Institute, Custom Grade.
- 3. All drawers to have pulls and nylon slides.
- 4. Personal property drawers to have cylinder locks.
- 5. Cash drawer divided into 4 bill compartments.


COLLECTION BOOTH - Details

MASSACHUSETTS *** *** *** *** *** *** *** *** ***	COMPONENTS	IV (
REVISED 1977	FARE COLLECTION	B3.8

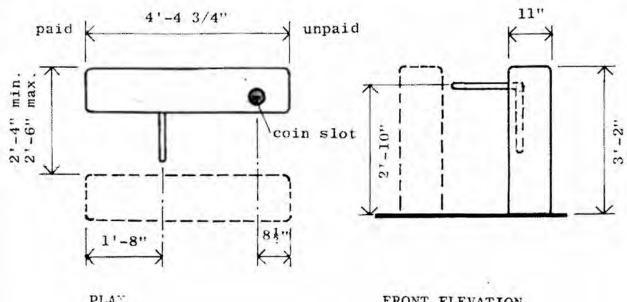

PLAY

FRONT ELEVATION

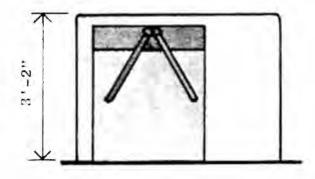


SIDE ELEVATION


Existing Turnstile

The coin-operated turnstile is the basic fare collection device in the transit system. Perey Model 97 Kompak Coinpasser turnstiles are used widely throughout the existing stations. Occasionally a station may have older electric GE turnstiles. The turnstiles are arranged for token operation in the entering direction and are free-turning in the existing direction. The mechanism is unlocked by an MBTA token only and requires no electrical connection.

TURNSTILES scale 1/2" = 1'-0"


MASSACHUSETTS BAY FEANSPRIATATION AUTHORITY	COMPONENTS	IV
MANUAL OF GUIDELINES AND STANDARDS	FARE COLLECTION	B4

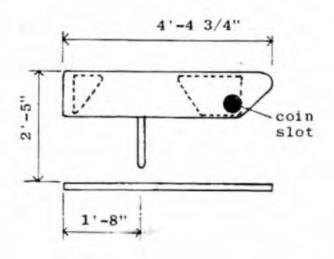

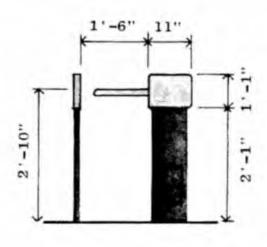

PLAN

FRONT ELEVATION

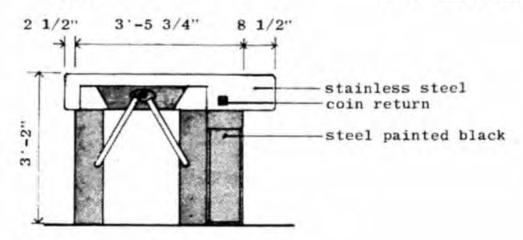

SIDE ELEVATION

New Turnstile

The coin-operated turnstile is the basic fare collection device in the transit system. Perey Model 97 Kompak Coin-passer turnstiles are used widely throughout the existing stations. Occasionally a station may have older electric GE turnstiles. Some modernized and new stations will have new turnstiles, as shown here. The turnstiles are arranged for token operation in the entering direction and are free-turning in the existing direction. The mechanism is unlocked by an MBTA token only and requires no electrical connection.


TURNSTILES


MASSACHUSETTS BAT TRANSPORTATION AUTHORITY	COMPONENTS	
REVISED 1977	FARE COLLECTION	B4.1


Turnstile Base Detail

Steel leg	
1/4" fillet weld	
Legs bolted into concrete with 1/2" expansion bolts - 4 in front leg, 3 in rear leg	
3/8" steel plate - drilled for bolts	
rubber flooring	
shim and grout as required	and the same of th
concrete	11 0 100
700 00	0 00000

TURNSTILES scale 3'' = 1'-0"



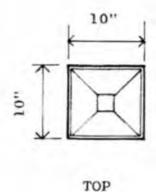


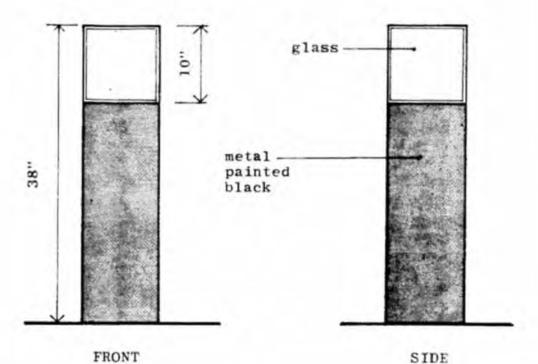



Fare Box

At certain times of heavy use the passgates are opened and used for fare collection. The fare is placed in free-standing fare boxes which have tops that allow attendants to visually check fares and spot illegal coins. Fare box requires electrical connection (120 v AC, 1/20 hp motor)

FARE BOX scale 1" = 1'-0"



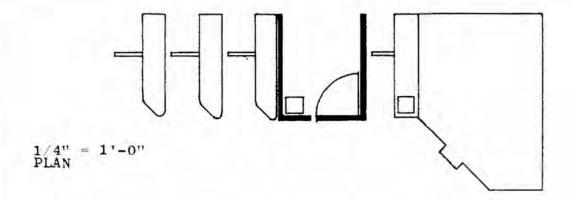

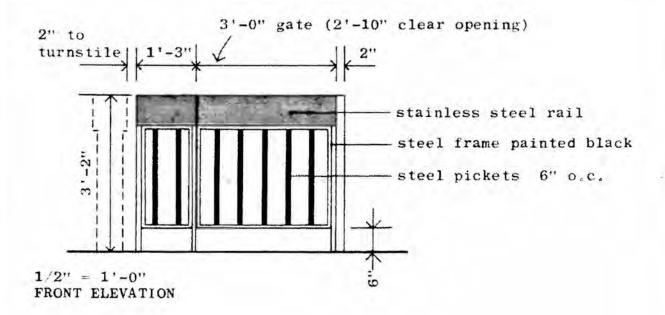


Pass Gate

On occasions such as sporting events or other peak circulation situations the pass gate may be opened and fares collected by an attendant with a fare box. This gate may also be used to facilitate exiting in circulation surges.

The gate must spring closed and the latch is always operated from paid side of gate. Install a hook and eye to hold the gate open.

MASSACHUSETTS BAY TAANSPORTATION AUTHORITY	COMPONENTS		
	REVISED 1977	FARE COLLECTION	В6

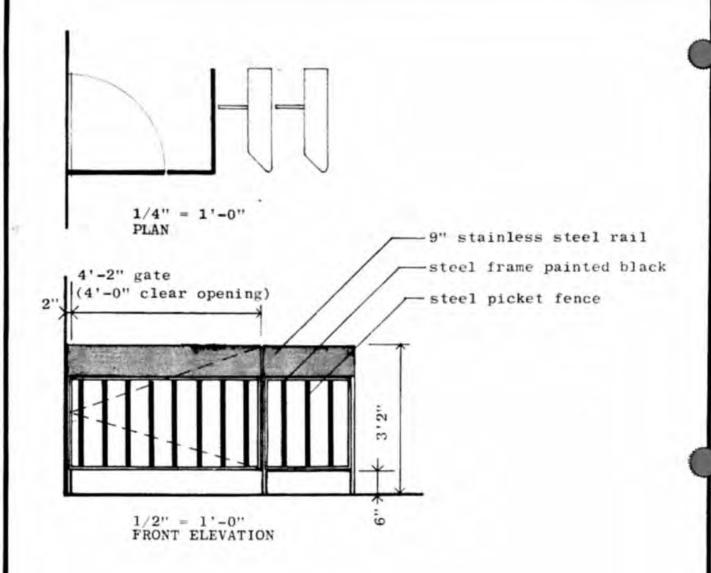



Emergency Gate - Low Type

Access for emergency and maintenance equipment must be provided from unpaid to paid area at or near every fare collection layout. Emergency gates are 4'-0" wide, clear, and are best located where they can be opened (and manned) for easy exiting during rush hours. Low type gates can be used only where they are in normal direct vision from collection booth.

Emergency gates should have a lock and a wall stop and holdback.


WASSACHUSETTS BAT TRANSPORTATION AUTHORITY MANUAL OF GUIDELINES AND STANDARDS REVISED 1977	COMPONENTS	IV
	FARE COLLECTION	B6.1

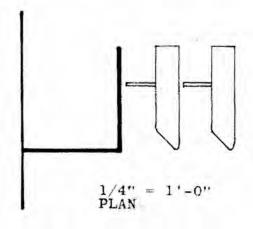


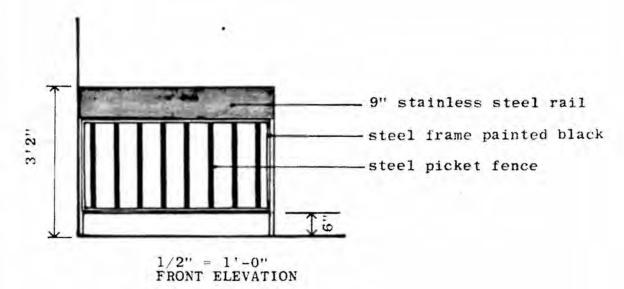

Fixed Barriers - Low Level

The low type barrier separates the paid area from the unpaid areas in the fare collection line or in other supervised situations. It must relate to other fare collection elements (see fare collection line).



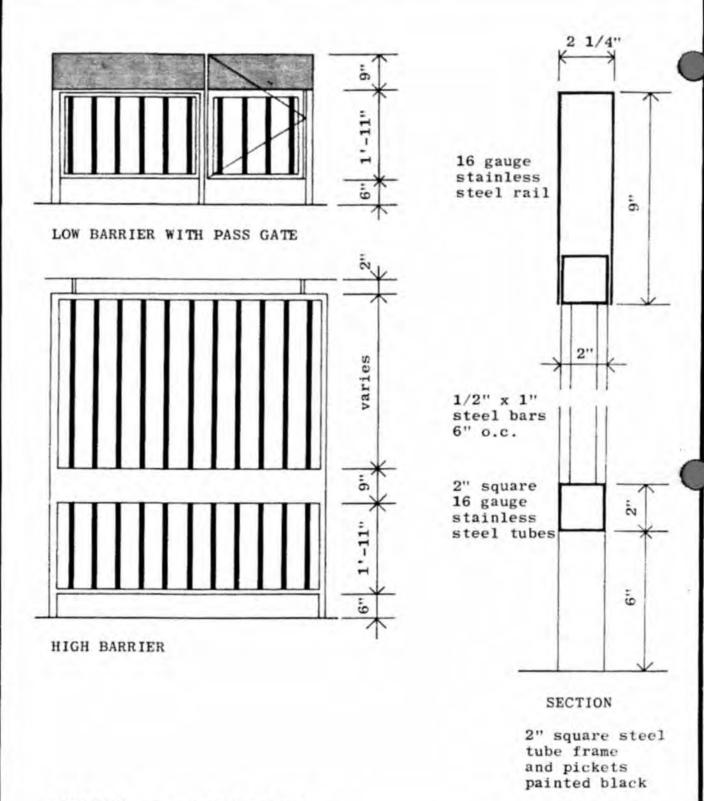

BARRIERS - Suggested Detail

WASSACHUSETTS BA- TRANSPORTATION AUTHORITY	COMPONENTS	IV
REVISED 1977	FARE COLLECTION	B6.3


Stainless Woven Wire


Stainless woven wire will be used only in fare collection barriers. All other fences will be the steel picket type. The following specifications should be used for stainless woven wire fences.

Woven wire panels, fare, and partition inserts, shall be fabricated of stainless steel, and shall consist of stainless steel wire diamond mesh of #12 stainless wire 1-1/8" wheels-diamond mesh, set in steel channel (not stainless steel) frames, sized as indicated. They shall be manufactured by Acorn Wire and Iron Works, Haskins-Haire Wire Works, Bellis Wire Works, or equal approved by the Authority.


Framing for woven wire partitions, to receive steel channel frames mentioned in the previous paragraph, shall be fabricated of steel sections (not stainless steel) as shown, in accordance with the details. Include all posts, mullions, rails, sills, tubular headers, flat-plate headers, steel rod hangers (to ceiling), angles, flat stock, and all necessary fastening devices and anchors. Use continuously welded, ground-smooth construction throughout except where other methods are shown. Secure stainless steel insets to steel framing by means of stainless steel flat head, bolts into tapped holes, following manufacturer's recommendations.

Stainless steel railing at low woven wire partitions shall be accurately formed to the dimensions shown, with welded-on end caps, and all welds ground smooth and finished to match the adjacent surface.



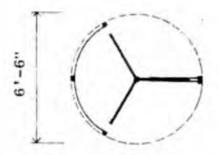

PLAN

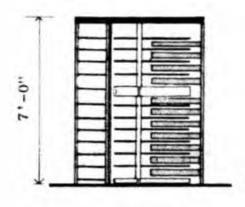

ELEVATION

Material:


Stainless steel and black painted steel. Floor material continuous under exit gate.

Rotary Exit Gate


In situations where exits are located out of direct visual supervision, rotary exit gates should be installed. The shaft with gate arms is free to rotate in only one direction, permitting continuous egress from the paid area without permitting unpaid admittance.

ROTARY EXIT GATE Scale 1/4" = 1'-0"

Ŧ	MASSACHUSETTS BAY TRANSPORTATION BUTMONITY	COMPONENTS	IV
	REVISED 1977	CIRCULATION ELEMENTS	C1

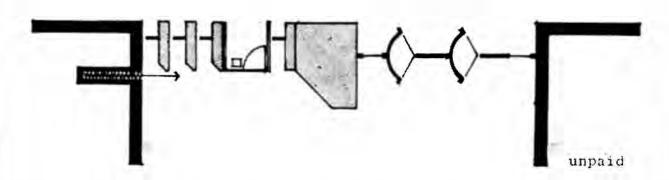

- a. PART TIME FARE COLLECTION LINE WITH ROTARY EXIT GATES
- b. ROTARY EXIT GATE REMOTE FROM FARE COLLECTION LINE

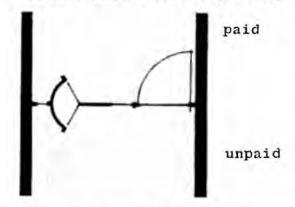


Special Rotary Exit Gate Installation


- a. At fare collection lines manned only during hours of peak traffic, rotary exit gates are installed to permit exiting at any hour. For such part-time collection lines, a rolldown or swing-out close-off must be provided to prevent access to the paid area.
- b. At instances where the fare collect on line is remote from an exit, and the line is manned only during peak hours, it is desirable to enclose as much of the corridor within the paid area as possible. In such cases a rotary exit gate would be installed close to the exit, with a swing gate which would be fixed open during the peak hours. No close-off at the collection line, as described in a. above would be required.

ROTARY EXIT GATE scale 1/4" = 1'-0"

MAZEACHUSETTE BAY TRANSPORTATION AUTHORITY	COMPONENTS	IV
MANUAL OF GLIDRE IMRE AND STAMDARDS	CIRCULATION ELEMENTS	C1.4

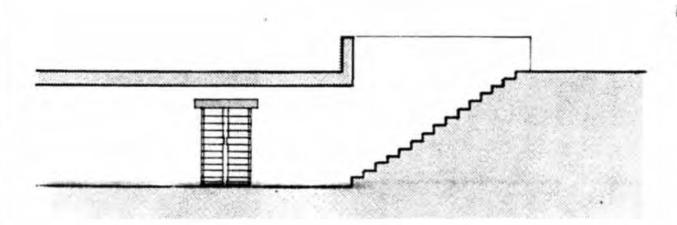


EXIT GATE VISIBLE FROM SURFACE - Preferred

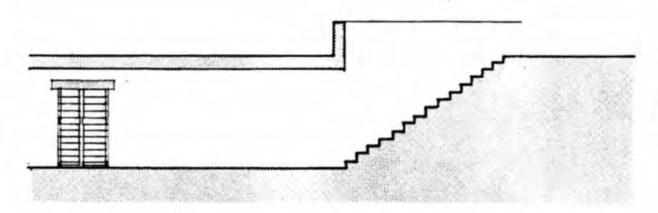

EXIT GATE NOT VISIBLE FROM SURFACE

where a surface structure is used as an exit, a rotary exit gate may be installed near the surface level. This prevents entrance from the street level and discourages loitering in the stairs and passageways by making them paid rather than unpaid areas

ROTARY EXIT GATE scale 1/8" = 1'-0"



Platform Lengths

- 1. Green Line: Existing stations vary from 135' to 440', Minimum length for 4 LRV's @ 73'/car plus 8'= 300'. Each station should be reviewed with the Authority for special conditions.
- 2. Red Line: Existing stations vary from 267' to 435'. New and lengthened stations will allow for 6 car trains @ 70'/car plus 20' = 440'.
- 3. Blue Line: Existing stations vary from 187' to 350', which will accommodate 4 car trains @ 50'/car. Ultimately longer trains may be necessary. New and lengthened stations will allow for 6 car trains @ 50'/car plus 20' = 320'.
- 4. Orange Line: Existing stations vary from 305' to 480' and are presently served by 4 car trains @ 55'/car. New and lengthened stations will allow for 6 car trains @ 65'/car plus 20' = 410'.
- 5. See IV E2 for emergency exit criteria applicable to all stations.

PLATFORM AREAS - Design Criteria


	MASSACHUSETTS BAY TRANSPORTATION AUTHORITY	COMPONENTS	IV
I	manual of Guidelines and Standards		
I	REVISED 1977	CIRCULATION ELEMENTS	C2.0

Minimum Headroom Requirements

- 1. Structure over tracks -- 15' from top of rail.
- Train platforms -- 9'-6" to structure, allowing 12'
 height for continuous lighting fixture at platform edge.
 See IV C2.2 for overhead clearance limitations where
 low ceiling over platform steps up to high ceiling over
 track.
- Structure over busway -- 13'-6" above roadway. See IV C2.3.
- Miscellaneous pedestrian circulation areas: for short distances (under beams, etc.) -- 7'-6", preferred minimum 8'-0".

PLATFORM AREAS - Design Criteria

WASSACHUSETTS BAY THANSACHITY AUTHORITY	COMPONENTS	IV
REVISED 1977	CIRCULATION ELEMENTS	C2.1

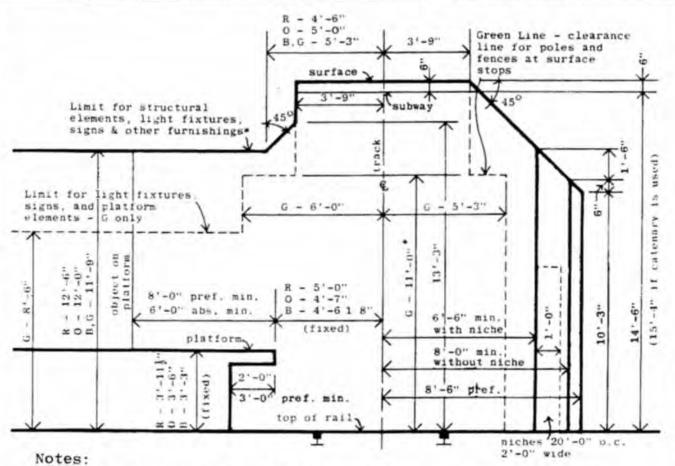

- All clearances are for tangent track. Horizontal clearances increase on curves.
- 2) Dimensions shown apply to all lines unless otherwise noted.
- 3) At all locations where walls or furnishings such as signs and lights, are less than 8'-0" from track centerline, niches 1'-0" deep, 2'-0" wide, and 7'-0" high will be provided at least 20'-0" on center.
- 4) At locations where a continuous walkway is provided across the track from the platform, furnishings such as signs and lights attached to the wall must be at least 6'-6" from track center line, and must be at least 7'-0" above the surface of the walkway. Maximum height of walkway above top of rail is 1'-0".
- Vertical clearances shown provide minimum of 8'-6" headroom over platform area.

Key:

R = Red Line

0 = Orange Line

B = Blue Line

G = Green Line

PLATFORM AREAS - Clearance Requirements - Red, Orange, Blue & Green Lines

MASSAC WORLD'S


BANSPORTATION

REVISED 1977

MANUAL OF SUIDELINES AND STANDARDS.

COMPONENTS IV

CIRCULATION ELEMENTS C2.2

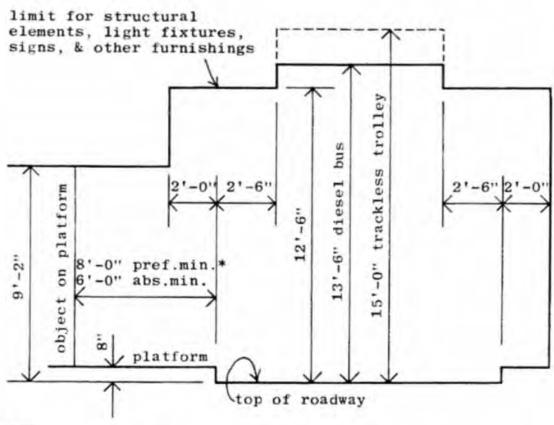

Notes:

*Bus stop signs may be located within this area, but sign panel should be at least 2'-0" from curb, and 7'-0" above platform.

PLATFORM AREAS - Clearance Requirements - Busways


WASSAL PUBETTS BATT TRANSPORTATION BUTNORITE	COMPONENTS	IV
REVISED 1977	CIRCULATION ELEMENTS	C2.3

Basic Objectives

Vertical circulation elements consist of stairs, escalators, ramps and elevators.

- a. Stairs at entrances should provide clear and direct access to the fare collection area, with a minimum of unused alcoves and hidden corners, and decision points.
- b. Stairs and escalators should be sized and located for expected traffic volumes and directions. Access to paid and unpaid areas should be clearly separated, with no possibility of cross connection within a station. It should be possible to correct a wrong turn, or to change directions between inbound and outbound, without crossing the paid-unpaid boundary.
- c. Existing stairs and passageways should be walled off, or removed, if no longer required and if the basic clarity of circulation is thereby improved.
- d. Existing stairs should be reconditioned and new treads and handrails installed.
- e. Elevators will be installed at selected locations to meet the requirements for handicapped accessibility. When possible ramps will be used instead of elevators.
- f. See IVE-2 for emergency exit criteria applicable to all stations.

VERTICAL CIRCULATION




Location

A minimum of two stairs is required to serve each platform or major public space. However in some stations one stair may be an emergency stair, or may be waived in favor of other means of egress, as determined by the Authority.

Design Criteria

- a. Maximum capacity for a stair is 20 persons per foot of width per minute and absolute maximum in emergencies is 25. Station occupancy loads and allowable times for emptying the station will be furnished by the Authority.
- Design capacity for a stair is 15 persons per foot of width per minute.
- c. A pedestrian lane has a minimum clear width of 1'-10" (22").

STAIRS



Landings

Landings shall have a minimum length of 4'-6", and width equal to the stair.

Minimum Run-off (clear space) at tops and bottoms of stairs:

- a. To a solid obstruction: Width x 1.7
- b. To edge of queue space: 10'
- c. To another stair or escalator: 30'

Note: run-off for stair and escalator in same well is the combined width x 1.7

Width and Headroom

- a. Minimum width for new stairs: 6'-0". Handrails may encroach on each side a maximum of 3 1/2".
- b. All stairs should have a minimum of 7'-0" clear headroom.

Treads and Risers

- a. All risers in any stair must have a uniform height.
- b. The minimum and maximum riser and tread shall be:


Minimum riser 6" Maximum tread 12 1/2" Maximum riser 7 1/2" Minimum tread 10"


- of two risers shall be proportioned so that the sum of two risers and one tread is not less than 24, not more than 25. Treads shall be measured from face to face of riser. Projecting nosings are not allowed.
- d. Long flights must be subdivided, with intermediate landings, so that no flight has a greater rise than 8'-0". Stairs without landings must not have more than 15 risers. Short flights must have at least 3 risers.

Treads on stairs exposed to the weather should be slightly pitched, for self-draining.

Where open riser stairs are used to permit through-visibility, treads must overlap each other at least 3". Such stairs can be used only when there is an optional route with closed riser stairs (or ramps) available.

STAIRS




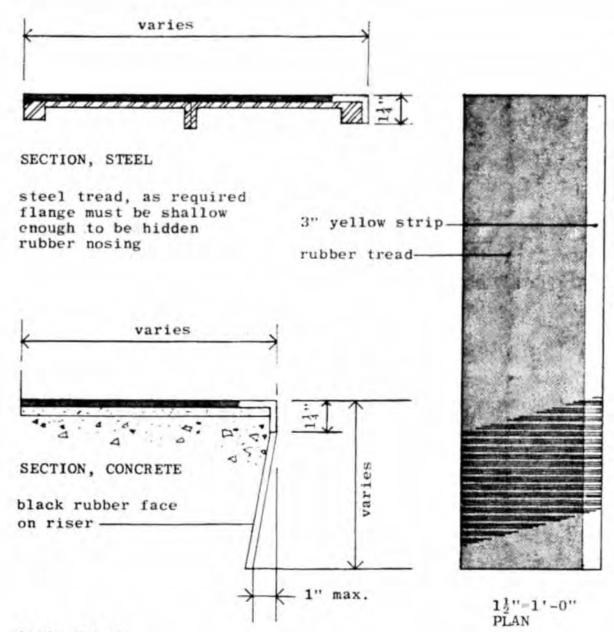

Stair Tread

Rubber Stair Treads: "Rub-Bub" Heavy Duty Safety Step Plates, consisting of rubber surfacing chemically and mechanically molded to a stainless steel backing plate with double ribbed "Dri-Foot" tread design, as manufactured by Ace Rubber Products, Inc., or equal approved by the Authority. Integral colored rubber strip in each tread shall be bright safety yellow color of dimension and position shown.

STAIRS scale 3" = 1'-0"



COMPONENTS


I۷

CIRCULATION ELEMENTS

C3.3


Handrails

- a. Height: 2'-9", measured vertically from the top of the tread at the nosing, to the top of the handrail. (3'-0" at landings and at top and bottom of runs).
- b. Handrails may extend a maximum of 3 1/2" into required stair width.
- c. At landings of 6' length and less, the handrails, both wall and post mounted, should continue across the landing without break, unless the swing of a close-off gate requires that a break be made.
- d. Wherever support conditions allow, each wall-mounted handrail should extend horizontally at a height of 3'-0" for
 a distance of 1'-6", at both top and bottom of runs. The
 purpose is to afford a firm grip before the ascent or descent
 begins.
- e. Handrails must be provided on both sides of all public stairs. Center handrails must be provided at all stairs wider than 7'-4", so that such stairs are divided into lanes between handrails of 7'-4" maximum width and 4'-0" minimum width.
- f. The sides of all stairs must be protected below handrail height. Steel pickets at 6" spacing may be used. Pipe rails, if used, should have an intermediate rail 1'-7" above the top of tread at the nosing, and a maximum opening between rails, or between rails and curb, of 10".
- g. Handrails must be shaped and sized so that they afford a firm grip to all users. The following designs are acceptable:

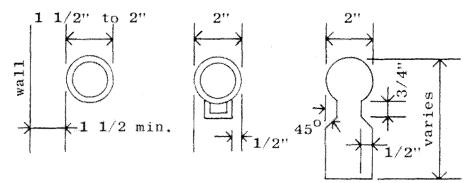


h. The handrail must be stainless steel or hardwood. The supporting structure may be stainless steel or black painted galvanized steel. All pipe rail joints must be welded and ground smooth.


STAIRS



Design Criteria


- a. Location and capacity: Up escalators should be used where the rise is 12' or more. Down escalators should be used where the rise is 24' or more. Maximum capacity for an escalator of 4'-0" nominal tread width and speed of 120' per minute is 135 persons per minute. *The absolute maximum in emergencies for a standing escalator is 90 persons per minute. Use 100 persons per minute for design capacity.
- b. Dimensions: 4'-0" nominal tread width, required in all new installations. Overall width varies 5'-8" to 6'-0". Slope 30° Minimum clear headroom 7'-0"
- c. Minimum Run-off (clear space) at tops and bottoms of escalators:
 - 1. To a solid obstruction: 15'
 - 2. To edge of queue space: 10'
 - 3. To another escalator or stair: 30'
- d. Moving sidewalks shall conform with the above requirements (maximum slope 150).
- e. Exposed metal (deckplates, interior panels, newels, etc.) shall be #4 finish stainless steel. When exterior paneling is required (i.e. when an escalator is open on one or both sides), it shall be stainless steel to match the other parts, and be of flush butt-jointed construction, with no exposed fasteners, and no battens or joint covers. Paneling should be adequately reinforced to prevent oil-canning, and noise-making when struck. Deck plates should meet the wall in a flush, gasketed detail to prevent dirt infiltration into the machinery. Stainless steel anti-slide knobs are required on the deckplates.
- f. Ventilation for machinery, and access for periodic maintenance must be provided, preferable from a room beneath the escalator. Floor pits will generally require a sump pump, and floor access doors must be designed to receive whatever floor material is used.
- g. All escalators will be the reversible type. Escalators shall be able to be operated down at a slower speed than up. Control switches should be located in a room beneath the escalator, or in another service room. The Authority has a standard specification covering all functional aspects of the escalator.
- h. Emergency shut-off switches are required at the head and base of each escalator. Typically they will be recessed in the wall construction. See sheet C 4.3 for this switch.
- i. See Part V: Graphics, for signing at escalators.



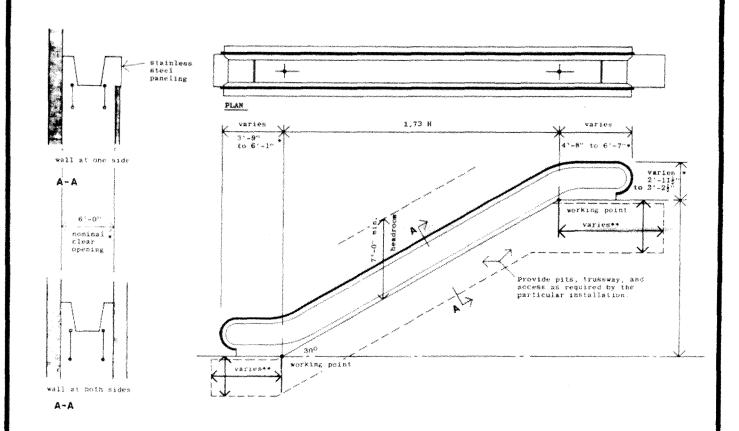

- *Consult manufacturers catalogues.
- **Escalator pits must be designed to fit any currently available escalator. The supporting beams will be located in the field after a particular machine has been obtained.


MASSACHUSETTS BAY TRANSPORTATION AUTHORITY	COMPONENTS	IV
MANUAL OF GUIDELINES AND STANDARDS	CIRCULATION ELEMENTS	C4.1

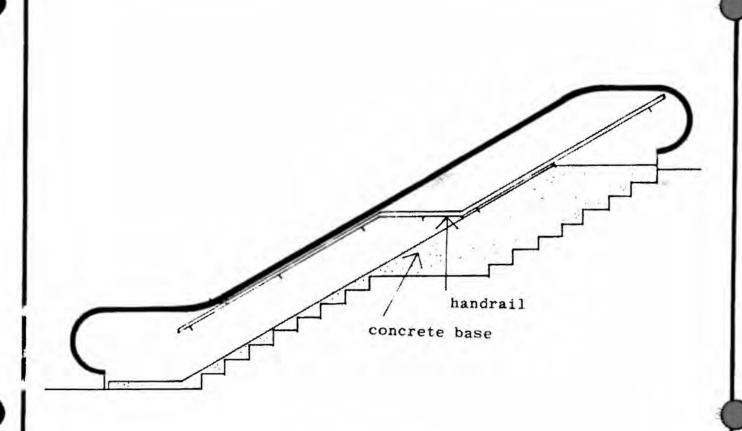

Stair - Escalator Relationship

Where stairs occur along side an escalator, the rise/run of the stair should be set to closely match the 30°escalator slope, and the stair itself so located that the handrail remains below the escalator deckplate.

T SALANDER TO SALA	COMPONENTS	IV
way at the subdivinery and standards	CIRCULATION ELEMENTS	C4.2

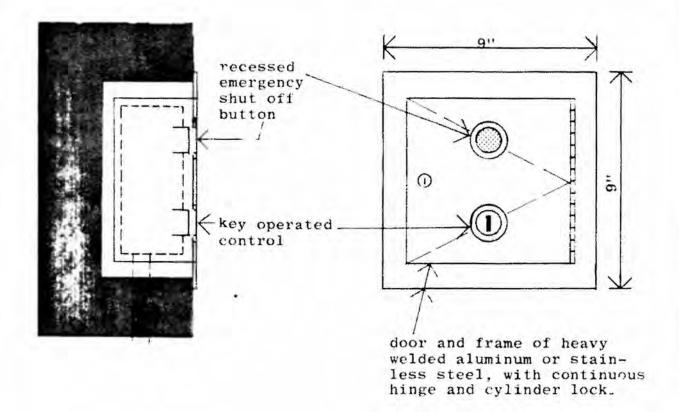

Emergency shut-off switch

Recess box in wall, at both top and bottom of escalator, maximum of 10' -0" from the escalator, and at a maximum of 5'-0" above the floor.


See Part V: Graphics, for required sign.

MASSACHUSETTS BAY TRANSPORTATION AUTHORITY MANUAL OF GUIDELINES AND STANDARDS	COMPONENTS	IV
	CIRCULATION ELEMENTS	C4.3

Escalator Control Criteria

The following criteria will apply to all new escalators used in Authority facilities. In addition, the design will meet the requirements of the "State Building Code", and planning criteria shown elsewhere in the Manual (see I-Guideline & Principles, other parts of IV Components, and X Site Planning & New Stations)

- All escalators will be reversible and will be operable in both directions at a speed of 90 and 120 feet per minute.
- 2) Control for the direction and speed of escalators will be in locked cabinets, duplicated at each end of the escalator, and located to facilitate supervision of the escalator when a change of direction is made. (Authority personnel could block persons from entering the escalator, then reverse when clear.)
- 3) Emergency stop buttons for public use will be located at each end of the escalator. They should be placed to prevent accidental actuation by the users of the escalator.
- 4) Escalator stop controls, and pilot lights indicating a stopped escalator, will be located at the primary collection booth and other locations designated by the Authority. Capability of a tie-in to the control center will be provided.
- 5) Escalator's feeding into a subway station platform or lobby should be tied-into the fire and smoke detection and other emergency alarm system's as required, so that they will be stopped when such systems are actuated. Escalators are acceptable means of emergency egress from a station.
- 6) At locations where locked doors or gates close-off access from an escalator, the control of the escalator must be interlocked with the locking system for the doors or gates to prevent operation of the escalator in a direction which could trap people.
- 7) At escalator's which are intended for reversible operation as a normal routine (say up in the morning rush and down in the evening), back-lit directional signs (See V Graphics) with latent display capability will be tied-into the escalator control.
- 8) Acceptance tests of completed escalator installations will include testing of the escalator in both directions of travel, at both speeds, and tests of all related control devices, interlocks, signs, etc.



DESIGN CRITERIA


- a) Elevators are used only when required to meet the requirement for handicapped accessibility. Normally they are located to connect a free area with a free area, or to connect a paid area with a paid area. In special situations a double door elevator may serve both these functions (see Oak Grove Station). In existing stations it may be necessary to connect a paid and free area, which requires special pass-reading equipment at the entry in the free area.
- b) It is desirable to locate elevators so that they can be observed directly by station personnel or by closed circuit television. Eelvators shall not be located where they would interfere with the normal pedestrian flow within the station.
- c) Doors to elevators in new stations shall provide a clear opening of 3'-0" minimum width. Doors to elevators in stations which are being altered, remodeled, or undergoing a change of use shall provide a clear opening of 2'-8" minimum width, only if 3'-0" is not possible.
- d) Cab size: minimum interior dimensions of the elevator cab measured wall to wall (excluding the rub rail) shall be 4'-0" wide by 4'-6" deep minimum in new construction; and 4'-0" x 4'-0" minimum in existing construction.
- e) Controls (including emergency telephone) of automatic elevators shall be located no higher than 5'-0" and no lower than 3'-2" above the floor of the elevator. Numbers and letters shall be large raised or recessed for use by visually handicapped.
- f) All controls for the elevators shall have large raised or recessed numbers/letters and light on dark background for use by the visually handicapped; and there shall be no ashtrays or other obstacles placed directly below or above. Audible signals shall be provided and the "up" signal shall be different from the "down" signal. Floor numbers shall be provided at each level on the elevator entrance jamb located on the right side when exiting and shall be raised or recessed and light on dark background.
- g) Rub rails shall be secured to all walls of the cab and located 3'-0'' above the cab floor.
- h) Doors shall have a sensitive <u>safety edge</u>. Doors shall have a <u>sensing device</u> to prevent closing while entering or exiting. Doors shall be set to close in not less than six (6) seconds.

ELEVATORS



COMPONENTS

IV

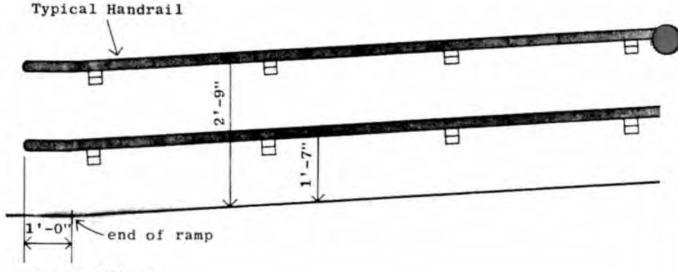

Design Criteria


1. Passages:

a. 10' preferred minimum width in new construction, but in no case less than that of stairs served. Absolute minimum width 6'-0".

2. Ramps:

- a. Should be used at small changes in level in preference to short runs of stairs, and for long inclines where the desired slope is attainable without resort to stairs.
- Provide same minimum run-offs as with stairs. Minimum clear width is 4'-0"
- c. Absolute maximum slope 1:12 (8.33%)
- d. At slopes steeper than 1:20 wall mounted handrails should be provided, on both sides of the ramp.
- e. Ramps steeper than 1:20 require landing of 5'-0" min. length every 34' of run.
- Maximum capacity of passages and ramps is 25 persons per foot of width per minute, and absolute maximum in emergencies is 30.
- g. Design capacity is 20 persons per foot of width per minute.


RAMPS AND PASSAGES



Fence components include low and high fences, and guard rails. Fences consist of a horizontal rail, and either balusters or infill panels. Guard rails consist of only a horizontal rail, and posts if required.


- a. Fences are used to separate paid and unpaid areas, and to prevent accidents where a change in level occurs. When separating paid and unpaid areas, low fences may be used only where continuous supervision by Authority personnel is available.
- b. Guard rails are used to control circulation patterns within the paid or unpaid areas, to prevent track crossing, and to prevent accidental trepass onto danger areas. They are a less emphatic barrier than fences, and are intended simply to serve notice of forbidden access, not to physically prevent it.

FENCE - Description




- a. The following fence constructions are approved by use, both in low (3'-2") and high (6'-10" or to ceiling) types.
 - 1. Steel picket
 - 2. Others subject to approval by Authority
- b. Low fencing at or near the fare collection line should incorporate a 9" deep band of stainless steel, set at the same height as the matching band on the turnstiles. Nearby high fencing, if divided horizontally, should have a similar 9" band, painted with the fence frame, and set at the same 3'-2" height.
- c. One type of fence should be used consistently throughout a station, or area of a station. The Authority will consider other fence constructions provided that the requirements of strength, durability, and maintainability are adequately met, and that the fence material is suitable in scale and transparency. Many spaces within the subway are small, and contorted in plan; therefore additional screens (fencing) set within these spaces should detract as little as possible from clarity of circulation, and ease of maintenance and surveillance.
- d. Present fencing is typically of the picket type. In many places, it can be converted by installing a 9" metal band, as shown on Sheet C-6.3.
- e. Parapets or external railings of overhead walkways, balconies, or open parking garages should be 3'-0" high with minimum opening of 10".
- f. Where overhead walkways or mezzanine structures cross tracks, barriers or fences must be at least 7'-0" high. Minimum opening is 6".
- g. Where smoke barriers are required, see IV E1.2, wire glass may be used. Maximum size of individual glazing elements is 9 sq. ft.

FENCE CONSTRUCTION




C6.1

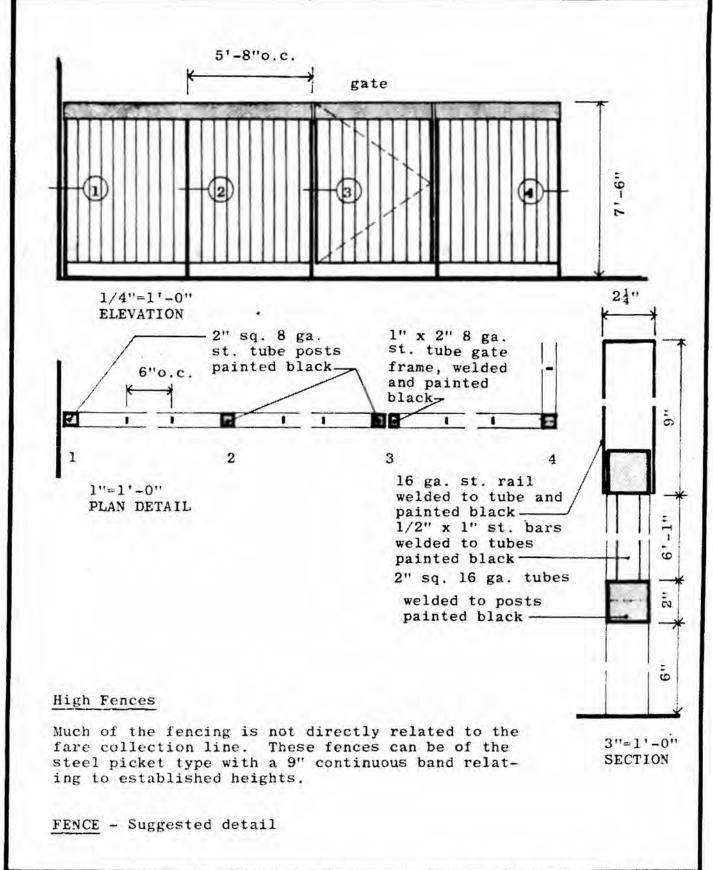


MARSACHUSETYS
ANY PRANSPORTATION
AUTHORITY

MANUAL DF GUIDELINES AND STANDARDS


CIRCULATION ELEMENTS C6.2

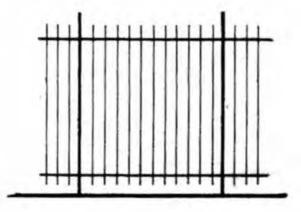


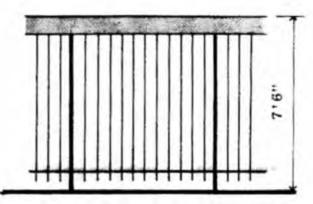

EXISTING HIGH FENCE

MODIFIED HIGH FENCE









MODIFIED LOW FENCE


Existing Picket Fence Modification

Where an extensive amount of wrought iron fence exists, this may be simply painted, or modified and relocated as shown in schematic station design.

FENCE scale 1/4" = 1'-0"



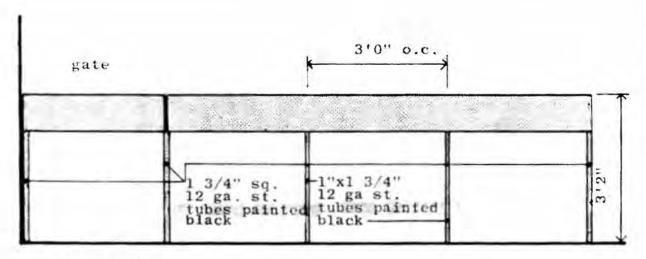


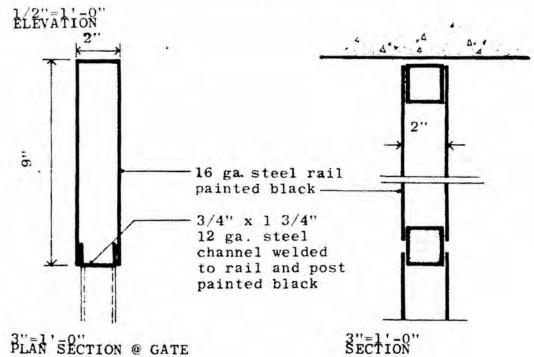


Guard rails are used to separate low level platforms, closures beneath stairs, restricted areas.

GUARD RAILS - Suggested detail

MASSACHUSETTS BAT TRANSPORTATION AUTHORITY MANUAL OF CAMPS HATS AND STANDARDS	COMPONENTS	IV
MANUAL DF GUNDELINES AND STANDARDS	CIRCULATION ELEMENTS	C7

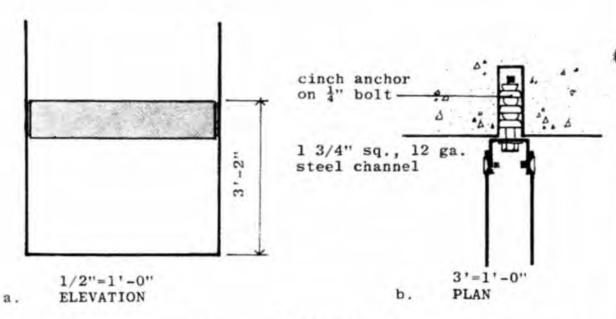


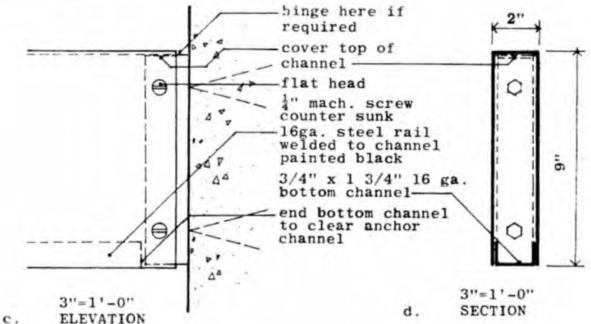

Guard rails Between Walls

- a. Between walls or columns
- b. Section at wall
- c. Elevation at wall
- d. Cross section

GUARD RAILS - suggested detail



Public Convenience Facilities

This section covers all components that are generally considered to be "public convenience facilities". There are essentially two types of facilities:


- a. Station furnishings which are provided and maintained by the Authority.
- b. Commercial facilities, which may or may not be provided by the Authority, but which are operated and maintained by a concessionaire.


Station furnishings will be provided at every station for the use of waiting passengers. Commercial facilities will be located within stations only after market analysis by the Authority.

Commercial facilities should be planned adjacent to the traffic flow, but with sufficient space for people to move out of active circulation. They should never be permitted to interfere with the normal flow of circulation even at rush hour, nor with information graphics, and should never occur on platforms in positions where they might interfere with circulation to and from trains.


Platform components have been selected and/or designed to relate vertically to other elements, especially on platform sidewalls, and where such components occur, the design of platform sidewalls (e.g. the location of the station identity band) should be modified to accommodate them.

Refer to Part IX: Service Facilities, for public toilets.



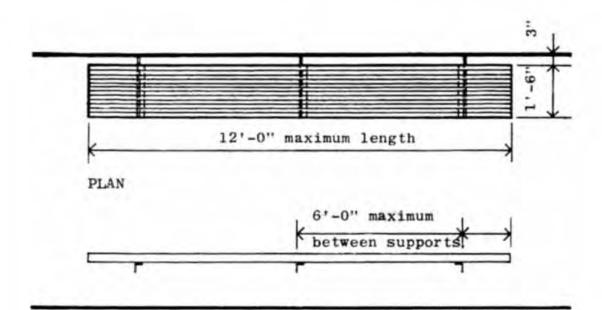

FRONT ELEVATION

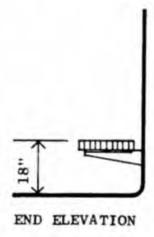


Wall-mounted

Wall-mounted laminated wood benches are the preferred type. Cantilever support facilitates cleaning, but requires secure anchorage into a concrete wall.

Benches should be located, in general, only at platform level, and concentrated where trains normally stop during all hours.

BENCHES

MARSACHURETTYS BAY TRANSPORTATION AUTHORITY MANUAL OF GUIDELINES AND STANDARDS	MASSACHUSETTS SAY TRANSPORTATION AUTHORITY	COMPONENTS	IV 4
	STATION FURNISHINGS	D2	

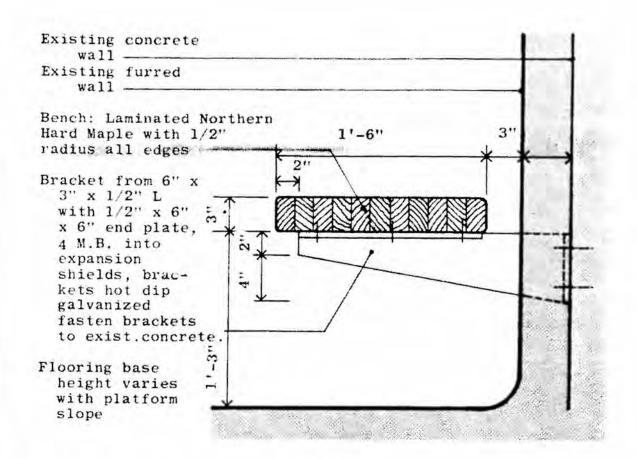



Installation Detail


natural finish, heavy duty varnish

BENCHES scale 1 1/2" = 1'-0"

MASSACHUSETTS SAY TRANSPORTATION AUTHORITY	COMPONENTS	IV
MANUAL OF GUIDELINES AND STANDARDS	STATION FURNISHINGS	D2.1

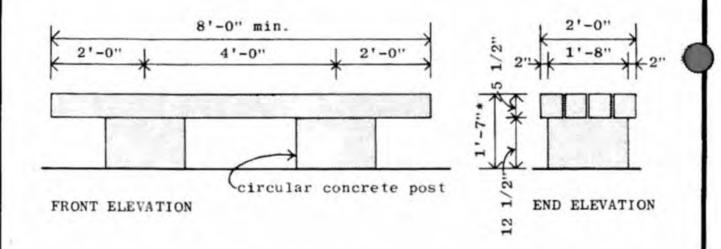

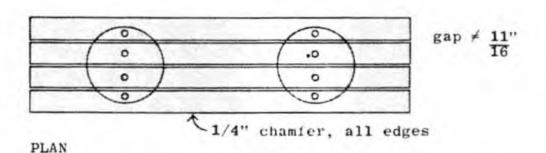



ELEVATION 1/4" = 1'-0"

Heavy Timber Bench

Used in areas exposed to rainfall. When long continuous bench is used, timber joints should be staggered.

*On sloping sites, or where many benches are available, height may be varied.

BENCHES Scale 1/2" = 1'-0" Suggested detail

WASSACHUSETTE BAY TRANSPORTATION AUTHORITY	COMPONENTS	
REVISED 1977	STATION FURNISHINGS	D2.2

Design Criteria

Commercial Facilities occur in many stations. They generally consist of the following:


- a. Newsstands
- b. Lockers (Coin-operated)
- c. Public telephones


Other commercial enterprises, or concessions, occur in certain stations but are not typical. The inclusion of such enterprises within stations is desirable, provided that adequate space is available, that the proposed enterprise is suitable in terms of appearance, clientele, and function to a station, and that the identity of MBTA elements is in no way impaired. Inclusion of new or different enterprises will depend on a market analysis by the Authority and on the availability of interested concessionaires.

MASSACHUSETTS MAY TELASAORTATION AUTHORITY	COMPONENTS	IV (
MANUAL OF GUERLINES AND SPENDARDS	STATION FURNISHINGS	D6

Newsstands

- a. The number and location of newsstands will vary.
 Smaller stations may have only newsboys or coin
 operated racks; larger stations may require several
 newsstands, both inside and outside the paid area.
- b. Most newsstands sell magazines, newspapers, candy, tobacco, and similar items. The area required varies considerably.
- c. Newsstands must be specially designed, or modernized, for each different installation. The design intention is that they be compact, without clutter or fussiness, and constructed of black metal and stainless steel, as are most other components. Where mewsstands can be built in, they should utilize the adjacent wall materials, and be designed to fit with the other wall elements.
- d. Since most newsstands operate only during rush hours, a system of demountable or sliding security panels must be provided for closing during non-operating hours.
- e. Newsstands should be highly illuminated, and include an electric heater.
- f. Newsstand graphics, see Part V, Graphics. The 9" fascia band will incorporate an illuminated sign, to match similar sign situations in other components.
- g. Design and location of newsstands must be carried out in collaboration with the Concessionaire and the MBTA Planning Dept.




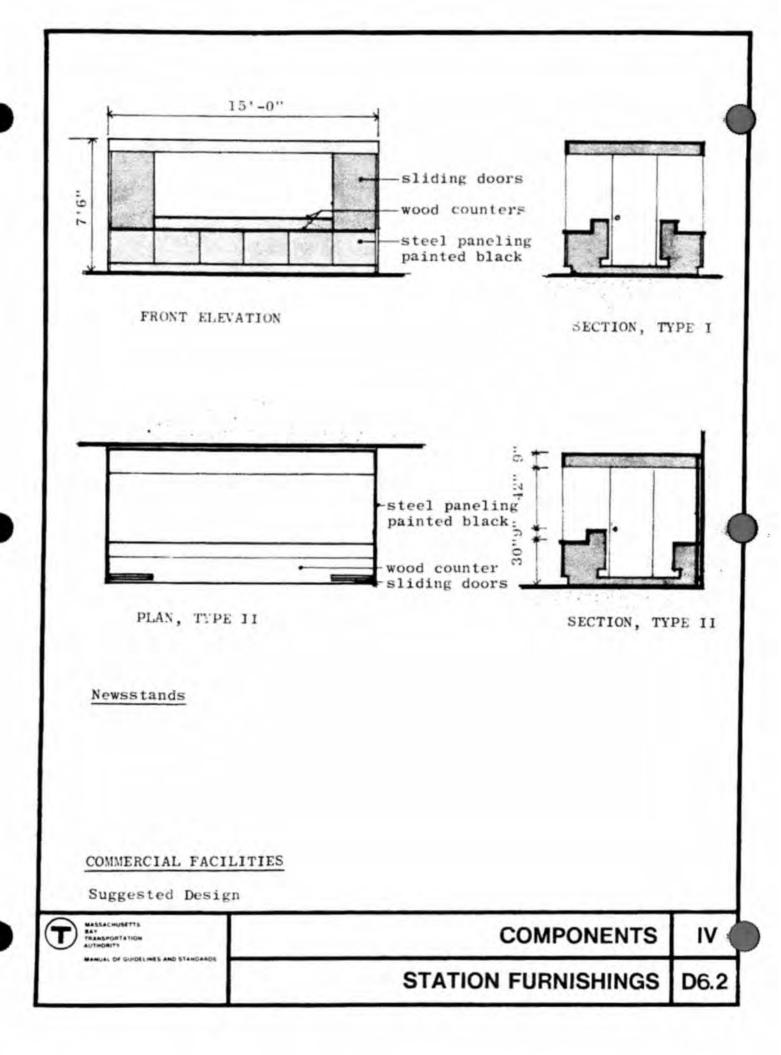

Telephone Booths

Design Criteria


- a. Use of wall-mounted telephones in the subway system is currently discouraged. Glazed booths, without shelves or seats, are recommended. These may be freestanding, mounted against a wall or recessed.
- b. Booths should be located where they will receive maximum public exposure, but not where they will actually interfere with circulation. They must be under continuous observation by Authority personnel, which will mean that in most cases they will occur only in mezzanines, near the fare collection line.
- c. Where close to components such as collection booths and exit gates, the telephone booths should receive a black metal cap, which will strengthen them and relate them to the other tall components with similar caps.
- d. If possible, booths should serve paid and unpaid areas. Failing that, serving the paid area is preferable.
- e. Building-in of booths is desirable. If this is not practicable, they should be located to minimize small, hard to clean spaces behind and between booths.
- f. Booth installation and maintenance is by the Telephone Company. Raceways should be provided either in the floor, overhead within lighting fixtures, or within walls, so that exposed wiring is, at most, a simple straight run.



Other Commercial Facilities

Concessions such as bakeries, flower shops, quick-lunch stands, etc. require such different facilities and occur in such a variety of situations that each must be treated as a separate problem, and specially designed, in accordance with the following guidelines.

- Where more than one concessions (including newsstands) occur in a station, they should be located together for mutual reinforcement.
- Concessions should be located where they will have maximum exposure to the public, especially to the public while waiting for trains, but should not interfere with station circulation. In many cases this will severely limit their size and shape.
- 3. Where concessions can be built-in, they whould utilize the adjacent wall material, and be designed to fit with the other wall elements. Free-standing concessions should be constructed of the same black metal and stainless steel as are most other non-built-in components, and incorporate the same 9" high fascia.
- 4. Each concession must have a means of secure closure for non-operating hours. This closure should leave none of the concessionaire's graphics, glass display windows or other materials exposed to view or vandalism, when closed. It should, furthermore, minimize the dirty and deserted appearance of a concession not presently rented.
- The 9" fascia would contain an appropriate sign, backlighted by the lighting within the concession. This, unlighted, would be the only sign exposed to view when the concession is closed.
- The concession itself, and its internal graphics should be highly illuminated, during operating hours.
- 7. All appliances, for cooking, space heating, etc., must be electrical. Location for concessions, and internal subdivisions therein, must take into consideration delivery requirements, waste storage and disposal, as well as the ease of providing water supply and drainage, if required.



List of Items

A number of items dealing with safety, emergencies, and control occur consistently throughout the stations, and may be considered as components. These items are more precisely described in other parts of the Manual. The following list is intended as a brief introduction and referral.

Safety/Emergencies

- a. Emergency lighting required throughout each station. Refer to Part VI.
- b. Emergency egress Refer to this part.
- c. Platform edge strip (safety yellow color) Refer to Part VII. Strip 1'-6" wide. Surface texture must contrast with that of adjacent flooring.
- d. Fire Extinguishers required in electrical rooms, Refer to Part IX.
- e. Dry standpipe system with connections at each lobby and platform.
- f. Sprinklers and detector heads not presently in use. Circumstances may require them in special areas.
- g. Fire alarms and police call boxes use as directed by the Authority.
- h. ADT alarm required on safe in primary collection booth. Refer to Part IX.
- i. Escalator safety switches required at top and bottom of escalators. Refer to this Part.
- j. "B switch" to disconnect 3rd rail in station area located at leaving end of each platform.
- k. Warning and forbidden access signs Refer to Part V.

Control

a. Television surveillance system - required at some stations Refer to Part IX.

K	MASSACHUSETTS BAY TRANSPORTATION AUTHORITY	COMPONENTS	IV
l	MANUAL OF GUIDELINES AND STANDARDS	EMERGENCY REQUIREMENTS	E1
L			

- Paging and announcing system required in all stations.
 Refer to Part XIII.
- Starters call bell system required in all stations.
 Refer to Part IX.
- Emergency exit alarm required on all emergency exits.
 Refer to Part IX.

Introduction

Authority facilities are subject to the requirement of the "State Building Code", though the code does not have provisions which apply specifically to rapid transit stations. In order to adequately handle emergencies involving fire and smoke in subway stations, the following criteria have been developed by the Authority in coordination with the Massachusetts Department of Public Safety and will be utilized in the design of new facilities.


Egress Requirement for Subway Stations:

Use of this method will provide egress facilities which will have sufficient capacity to provide safe, fast egress from the station under the worst combination of circumstances.

- Determine net area of platform in square feet, deducting the space occupied by stairways, escalators elevators, structure, furnishings, concession or service spaces, and the 1'-6" platform edge safety stripe.
- Divide the net area of the platform by 3 sq. ft. per person to determine the population to be evacuated.
- 3) Allow 3 minutes' time to clear the platform.
- 4) Assume a maximum rate of flow for emergency situations for vertical circulation elements including stairs, escalators, and ramps, of 45 persons per minute per 22 inch (1'-10") egress unit. (Horiz. passage, 60 p.p.m.)

Sample Calculation:

Net area of platform 9000
9000 sq. ft. ÷ 3 sq. ft per person = 3000 people
3000 people ÷ 3 minutes = 1000 persons per minute
1000 persons per minute ÷ 45 persons per minute = 22.2
say 22.5 egress units (at 22 inches)




As a shortcut, divide the net area of the platform by 405 to obtain the number of egress units. Note that one half an egress unit must be 12 inches or more in width.

<u>Criteria for Location and Design of Egress Facilities for Subway Station</u>

Vertical and horizontal circulation elements will be designed to meet the requirements of this manual (see Vol. IV Components) and the "State Building Code", as interpreted in this section to apply to subway stations.

- 1) Maximum distance on a platform to an exit is 150 feet, assuming no sprinkler system. (Thus, the maximum distance between exits equals 300 feet) The track tunnel is not counted as an exit.
- 2) "Dead end" spaces at the end of a platform exceeding 20 feet in length are not permitted, thus there must be a normal or emergency exit at each end of a platform.
- 3) End of station emergency exits should be easily accessible to the platform and tunnel but separated from them by walls and doors having a 2-hour rating. Such exits may also connect with lobby areas, but also require a 2-hour rated separation. When emergency exits are combined with vent shafts, they must be separated by a 2-hour rated wall.
- 4) A station lobby (mezzanine) must have access to the outside of sufficient capacity to handle the emergency flow fed to it from the train platforms.
- 5) A mezzanine may be <u>open</u> to the platform and trainway if its area is less than one-third of the platform and trainway which it covers. If there are two separate mezzanines, their total area should not exceed one-third of the area covered below.
- 6) Exits from a lobby (mezzanine) to the outside should be capable of being closed-off-at the lobby level to prevent intrusion of smoke in emergency situations. (For security, a means of closing entrances at surface level is also required.) When mezzanines are larger than stated in item 5 above, they must be separated from the platform, preferably with doors at the platform level.
- 7) Absolute minimum width of an emergency exit stair is two



22 inch egress units or 44" (3'-8") wall to wall. Preferred minimum is 3 egress units or 5'-6", which allows enough space for easy maneuvering of stretchers and other emergency gear. The absolute minimum width of stairs for normal use is 5"-6" wall to wall. Actual width should be designed to meet requirements of peak traffic flow and emergency egress criteria.

- 8) At all subway stations with connecting underground busways or other vehicular circulation elements, or with connecting passageways to other uses, such as stores or office buildings, a separation between the train platform/lobby complex and these other activities will be provided to prevent intrusion of smoke.
- All construction of service rooms and concessions within the station complex should meet a 2-hour rating.

Related Mechanical Systems for Subway Stations

Ventilation and fire detection, alarm, and supression systems are described elsewhere in the Manual (see IX Service Facilities and XI Ventilation), and in the "IRT Handbook for Subway Ventilation". The foregoing criteria for egress assumes that the following facilities or systems are provided:

- 1) A mechanically operated exhaust system for the station operating independently of that provided in the tunnels. In the train and platform area exhaust inlets should be spaced along the platform so that smoke does not have to be drawn a long distance through an occupied area. At high platform stations (Red, Orange, Blue Line) the preferred location of the exhaust duct is under the platform. At low platform (Green Line) stations other locations are possible. This system will be used for both emergency and normal ventilation and will be both locally and remotely controlled. Exhaust ducts or fans may be required at other locations within the platform and lobby complex.
- 2) A mechanically operated fresh air supply system for the station is also required. In emergencies it should be able to supply 50 percent more air than the exhaust system can remove, thus pressurizing the occupied space. As in the case of the exhaust system, local and remote control is required.




- 3) A smoke and fire detection system will be provided in the train tunnel, and in stations. In addition to the trainway, this system should be installed in concession areas, service rooms, and mechanical/electrical rooms where fires could occur. All systems will be tied to the control center.
- 4) A dry standpipe system will be installed in the train tunnel and in stations, with connections at 100 foot intervals.
- 5) A fire alarm system connected to the Authority control center and to local fire departments will be provided at all stations.


Egress Requirements for Outdoor Stations:

Stations located in open cut, at grade, or on viaduct structures do not experience the same exposure to fire and smoke hazards that subway stations are subjected to. Therefore, platforms with or without canopy or windbreak structures will be considered to be outdoor areas and not subject to the egress criteria for subways. Enclosed lobbies above or below the track level should be treated as occupied spaces and have egress with sufficient capacity to handle a maximum occupancy at 3 sq. ft. per person spread over the net floor area of the lobby, and a maximum evacuation time of 3 minutes. The platform, being outside, would be considered as a safe area. Lobby spaces in these stations are normally closed off from the platform and outdoor areas for security and weather protection. Smoke and fire detection systems, and a mechanical ventilation system will be provided for the lobby and other enclosed service spaces. At outdoor stations where platform areas are not directly accessible to fire apparatus (for example, due to presence of walls, structures, main line railroad tracks, etc.) a dry standpipe system will be provided.

Exceptions to this Criteria


In situations where severe restraints occur which make it impossible to meet the criteria described in this section, the appeal process may be used.







MASSACHUSETTS
BAY
TRANSPORTATION
AUTHORITY
GUIDELINES AND STANDARDS
PART V
GRAPHICS
REVISED 1977



MANUAL OF GUIDELINES AND STANDARDS

PART I GUIDELINES AND PRINCIPLES

PART II STATION RECONNAISSANCE

PART III STATION MODERNIZATION PROGRAM

PART IV COMPONENTS

PART V GRAPHICS

PART VI LIGHTING

PART VII MATERIALS

PART VIII ACOUSTICS

PART IX SERVICE FACILITIES

PART X SITE PLANNING AND NEW STATIONS

PART XI VENTILATION

Part VI of the Manual describes the basic design goals for station lighting. It diagrams typical station lighting situations, and fixture types to accommodate them.

Each Station Architect is responsible for a lighting layout designed in conformance with the Basic Goals, and utilizing, insofar as practicable and unless directed otherwise, the standardized fixture types.

MASSACHUBETTS ANT TRANSPORTATION AUTHORITY	LIGHTING	VI
REVISED 1974		2

PART VI LIGHTING

A. STATION LIGHTING

- 1 Interior Lighting Standards
- 1.1 Interior Lighting Standards
- 1.2 Interior Lighting Concept
- 2 Exterior Lighting Standards
- 2.1 Exterior Lighting Concept
- 3 Distribution System
- 4 Pit & Service Area Lighting

B. FIXTURE TYPES AND TYPICAL USE

- 1 Fixture Types and Typical Use
- 2 Lighting Fixture Standards
- 2.1 Lighting Fixture Standards
- 3 Standard Fluorescent Fixture
- 3.1 High Platform Station
- 3.2 Low Platform Station
- 3.3 Passageway
- 3.4 Fare Collection Area
- 3.5 Wall Mounted Graphics
- 3.6 Exterior Entry Stair
- 4 Misc. Fixture Details
- 4.1 Misc. Fixture Details

Adequate lighting denotes well being. It is perhaps the single most important element in the revitalization of the subway. Low lighting levels, without appreciable variation or contrast, and mazes of unorganized conduit and unrelated fixtures are characteristic of many existing stations. The following basic goals have been adopted for the lighting design of new and modernized stations.

1. General Illumination

Minimum lighting level in public areas should be twenty (20) footcandles, maintained at floor level.

General illumination should not be designed on the basis of a uniform level throughout the station, but rather with variations in level as may be required by the particular station layout.

High Lighting of Danger/Decision Areas

High levels of directed light should occur at potential danger areas (stairs, escalators, platform edges, hidden corners), and at decision areas (fare collection equipment, information graphics).

Spatial Definition

Many stations have a basic clarity of form that can be emphasized by properly designed lighting.


Exterior/Interior Transition

Abrupt differences in lighting levels between exterior and interior should be eliminated.

Orientation

In general, maximum contact with surface features should be carried into the station, in order to maintain orientation to the above ground world. In many cases, it will be possible to open up portions of the overhead to bring natural light into stairways, mezzanines, or even platform levels. Where skylight shafts are used, night time illumination should be provided to substitute for daylight.

INTERIOR LIGHTING STANDARDS



Differences in lighting levels can be used to improve orientation within the station proper. Intense levels will draw the patron and forewarn him of decisions to be made.

6. Special Emphasis

Certain orientation features, such as color coded walls, or graphic elements, such as murals or advertising, should in most cases be given special accent lighting.

7. Elimination of Clutter


Lighting installations should be designed with layout appearance as well as simple coverage in mind, and conduit should be concealed. In existing stations where this is impossible, fixtures should be designed to incorporate raceways wherever practicable. Exposed conduit runs should be held to a minimum, and definitely located by the Station Architect.

8. Emergency Lighting

Emergency lighting will be required in all stations, located to provide a general level of illumination of 4 footcandles, with concentrations at danger areas.

Existing subway stations should utilize existing D.C. sources, incandescent lamps five in series on 600 volts D.C. and normally energized.

New stations should be provided with a natural gas driven engine/generator for emergency power. Emergency lights shall be fed from panels normally fed from normal power source with transfer to generator on normal power failure.

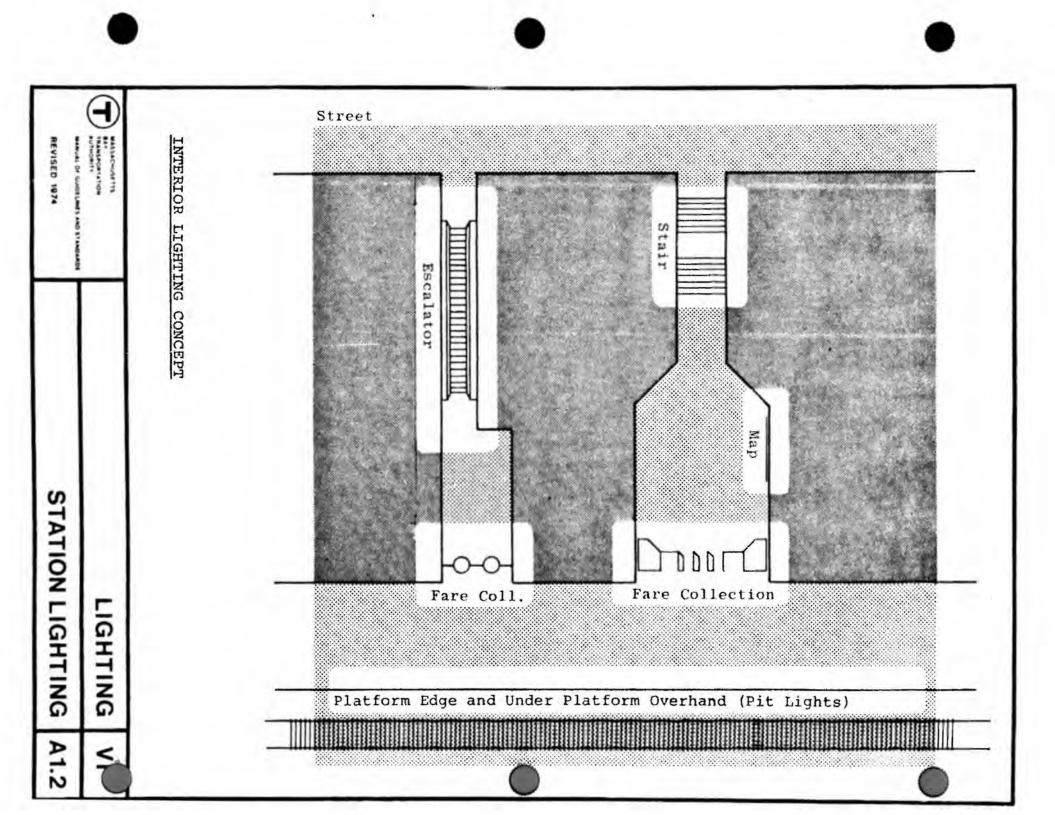

The type of lighting and the light intensity will be determined by the function of the area.

Lighting for the pedestrian should be in scale to the human figure. Rows of lights may be used to indicate direction or define paths. Lighting in parking areas should be of a quality and intensity, preferably high pressure sodium, to impart a sense of safety. Self-parking areas and paths require one footcandle of illumination. Large parking areas should be 2-3 foot candles.

Direction and information signs may be brightly backlit for contrast. Surface illuminated sign boards need fifty foot-candles on dark surfaces. Backlit signs should be used whenever possible as they are more easily seen at night than surface illuminated signs. Care in placement, color selection, and intensity of light will be necessary to avoid washing out colors and graphics.

Light fixtures should be as vandal resistant as possible, with polycarbonate or high impact acrylic diffusers, particularly those which might be within reach of pedestrians.

Poles should be heavy gauge, extremely rigid, with hand hole and fixed base.

All wiring for exterior lighting fixtures should be buried in plastic coated rigid steel conduit. Overhead wiring will not be permitted.


For large areas, parking, train and bus storage, etc., serious consideration should be given to high mast lighting to minimize number of poles and luminaires. High mast installations should be of type that permits lowering of the luminaire assembly to ground level for servicing.

Maximum mounting height of fixed luminaires shall be forty (40) feet to permit servicing by bucket truck, where truck access is available.

Ease of maintenance of all fixtures is of prime concern.

EXTERIOR LIGHTING STANDARDS

MASSACHUSETTS BAY TRANSPORTATION AUTHORITY	LIGHTING	VI
MANUAL OF GUIDELINES AND STANDARDS	STATION LIGHTING	A2

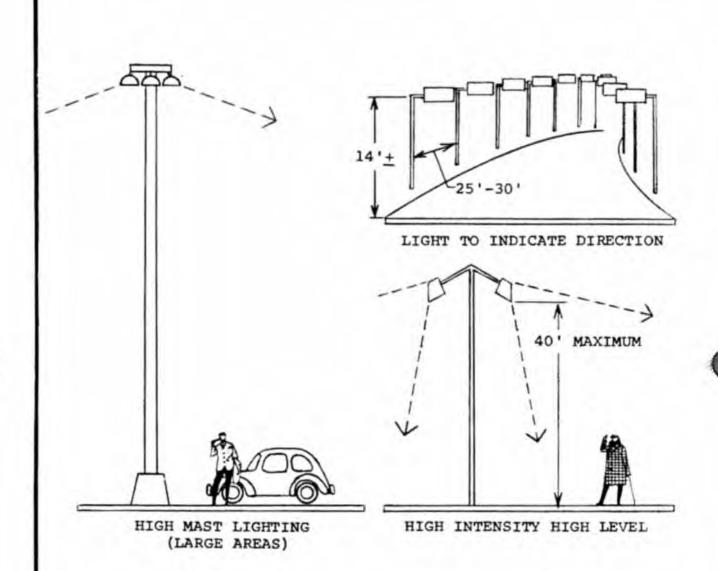

EXTERIOR LIGHTING CONCEPT

MASSACHUSETTS BAY TRANSPORTATION AUTHORITY	LIGHTING	٧
REVISED 1974	STATION LIGHTING	A2.1

1. Present distribution system

All station lighting at present is supplied from the Authority's 600 volt direct current lines, run on the tunnel walls. There is one power cable and one light cable in each direction, i.e.: North Bound Power, North Bound Light, South Bound Power, South Bound Light. event of a power cable failure, the load can be transferred manually. In event of a complete D.C. failure, the light cables are transferred to 550 volt AC at substations to provide emergency lighting. All lighting is incandescent, generally 101 watt, 151 watt and 201 watt street railway lamps, wired five in series. Lamps on any one circuit are distributed about the station and circuits are apportioned between power and light cable panelboards so that either circuit failures or cable failures will not darken any one area. This distribution feature constitutes the present emergency system.

2. New distribution system

After a review of present power and re-lamping costs, the Authority has determined that new and modernized stations shall have new service entrances, from the public utility, or T traction substation, and that all normal lighting will be on alternating current. In some cases groups of stations will be served by one entrance, and transformers installed to step voltage up and down for distribution within the tunnel between stations.

At new surface stations provide emergency power by natural gase engine-generator sets or other methods; however the difficulty in venting engines and the time lag in shifting over to such an emergency system prohibits its use in underground stations. For the time being, an emergency system separate from the AC normal system will have to be provided, consisting of five-lamp 600 volt DC series circuits as at present. Separate conduit must be provided for AC and DC wiring. Emergency lighting will normally be energized to provide visual indication that D.C. system is operational.

DISTRIBUTION SYSTEM

MASSACHUSETTS BAY TRANSPORTATION AUTHORITY	LIGHTING	VI
MAHUAL OF GUIDELINES AND STANDARDS	STATION LIGHTING	А3

1. Pit Lighting

In existing rapid transit stations, there are lights mounted beneath the platform overhang. Lights are incandescent, mounted about 15' on center, wired five-inseries on DC, and are normally ON. This lighting is used by work crews and in emergencies and should be renewed as part of the Station Modernization.

New rapid transit station pits should be illuminated by four foot H/O, gasketed fluorescent fixtures, single lamp, mounted under platform overhang on twenty foot centers. Pit lights should be fed from emergency panel boards and should be normally ON.

2. Lighting of Service Areas

Lighting for other than public areas, public toilets, and built-in collection booths shall be selected for economy and suitability for the area to be lighted. Most service areas will require both normal and emergency lighting.

PIT & SERVICE AREA LIGHTING

MASSACHUSETTS SAY TRANSPORTATION AUTHORITY MAMUAL OF GUIDELINES AND STANDARDS REVISED 1974	LIGHTING	VI
	STATION LIGHTING	A4

The Fixture Use Diagrams illustrate lighting situations frequently encountered in new and existing stations, and show schematic sections of the fixture types which have been selected to meet such situations.

The basic fixture types shown on the Fixture Use Diagrams are commercially available fixtures, modified as may be necessary to meet the criteria for fixtures. Finish is typically baked enamel, matte black color.

FIXTURE TYPES AND TYPICAL USE

MASSACHUSETTS BAY TRANSPORTATION AUTHORITY	LIGHTING	VI
MANUAL OF GUIDELINES AND STANDARDS	FIXTURE TYPES	B1

INTERIOR LIGHTING


- In general, lighting fixtures in new and existing stations should be located to minimize their number and bulk. General lighting should be fluorescent. Accent lighting should be High Intensity Discharge (H.I.D.).
- Accent lighting should occur only at graphics, danger and decision areas, and other special emphasis elements.
- 3. In both new and existing stations, certain lighting can be controlled by time switches for use only during peak hours or can be controlled by photo-electric devices when daylight falls below minimum levels.
- 4. It is expected that certain less-busy existing stations will receive little or no new lighting treatment. In these stations the existing normal and emergency DC lighting system will remain, with perhaps new fixtures substituted for old.
- Fluorescent fixtures in public areas shall use "warm white" lamps.
- Incandescent fixtures shall be kept to an absolute minimum.
- In high ceiling areas fixtures must be mounted at height that will permit servicing and relamping without scaffolds or stagings.

EXTERIOR LIGHTING

- All exterior lighting should utilize H.I.D. lamps, preferably high pressure sodium, wherever possible, for most efficient energy use.
- Poles for walkway lighting shall be fixed base type with handholes and shall be of heavy gauge and rigidity to withstand extreme vandalism.
- Fixed poles for large areas, parking, train or bus storage, etc., shall have a maximum luminaire mounting height of forty feet, for servicing by bucket truck, where truck access is available.

Serious consideration should be given to high mast lighting for large areas to minimize number of poles and luminaires. High mast installations should be of the type that permits lowering of luminaire assembly to ground level for servicing.

LIGHTING FIXTURE STANDARDS





LIGHTIN	IG
---------	----

In general, lighting fixtures for use within the Authority's environment should satisfy the following criteria.

- 1. Fixtures shall function as effective lighting units for a minimum life of 20 years under arduous conditions of weather, vandalism and vibration.
- 2. Fixtures shall be enclosed and gasketed, wherever possible, to operate effectively in an atmosphere containing sticky abrasive brakeshoe dust, which tends to foul lampholder contacts and makes cleaning of fixtures and their reflective surfaces difficult without scratching, and at a temperature range of -20° to 90°F.
- 3. The support and installation of fixtures in long continuous runs shall allow for expansion and contraction in an ambient temperature range of -20° to 90°F.
- 4. In general, through wiring shall be carried in raceways external to the fixture, permitting fixture removal without cutting of wires.
- 5. Methods of installation should be thoughtfully prepared to accommodate a wide variety of job conditions such as irregularities of wall and ceiling surface, and to minimize errors by untrained personnel.
- 6. Parts, lamp types, and lengths should be standardized to the greatest extent possible.
- 7. Non-corroding metal should be used, with adequate protection against galvanic action between dissimilar metals.
- 8. Replacement of lamps and ballasts should be easily accomplished.
- 9. Where open cylindrical fixtures are used, they must be vented at top for heat dissipation.
- 10. Use of incandescent fixtures shall be kept to the absolute minimum.
- 11. Fluorescent fixtures should be tightly gasketed to prevent dust infiltration.

LIGHTING FIXTURE STANDARDS




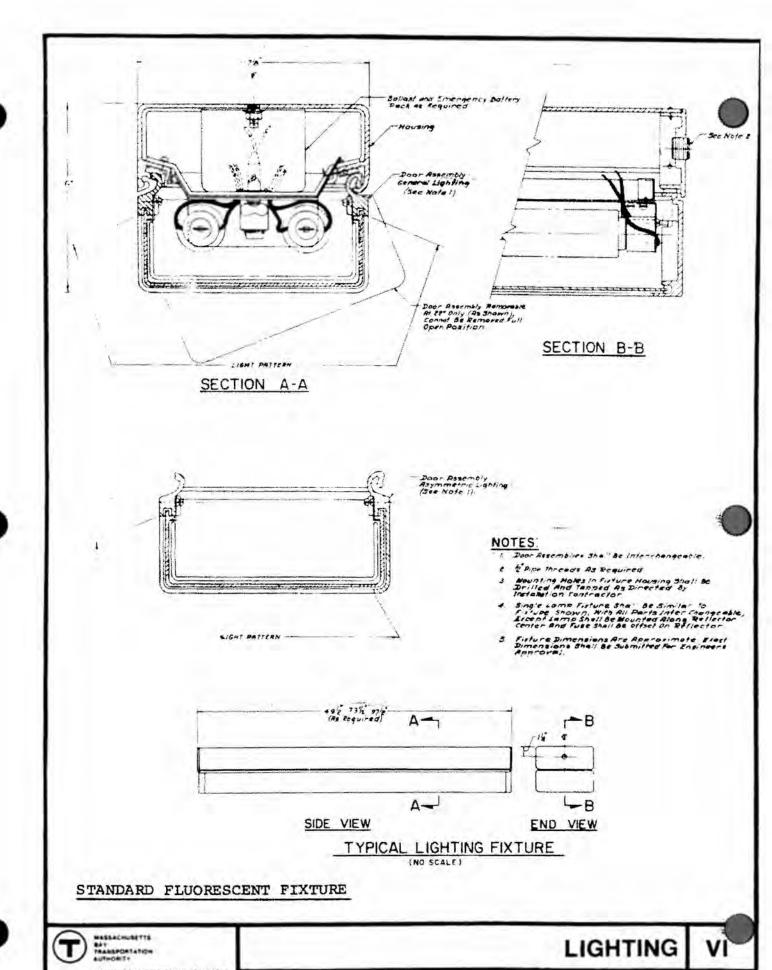

REVISED 1974

FIXTURE TYPES

B3

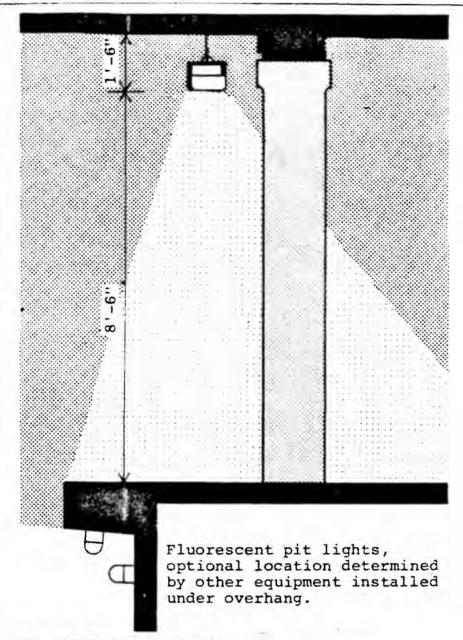

CONTINUOUS FLUORESCENT STRIP


Continuous or intermittent ceiling mounted fluorescent strip, cutoff at platform edge by use of asymmetrical lens. Emergency lights integral with fluorescent strip.

FLUORESCENT PIT LIGHT

4 foot single lamp H/O, enclosed and gasketed fluorescent fixtures mounted 20 ft. on centers

HIGH PLATFORM STATION

T	MASSACHUSETTS. BAY TANSPORTATION AUTHORITY MANUAL OF QUIDELINES AND STANDARDS REVISED 1974	LIGHTING	VI
		FIXTURE TYPES	B3.1

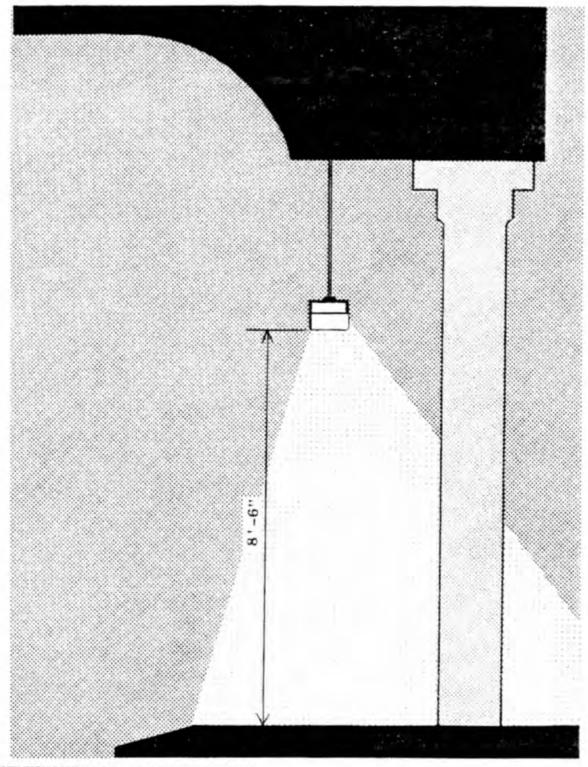


CONTINUOUS FLUORESCENT STRIP

Continuous suspended fluorescent strip, with cutoff at platform edge. Integral emergency lights.

LOW PLATFORM STATION

MASSACHUSETTS BAY TRANSPORTATION AUTHORITY	LIGHTING	VI
REVISED 1974	FIXTURE TYPES	B3.2

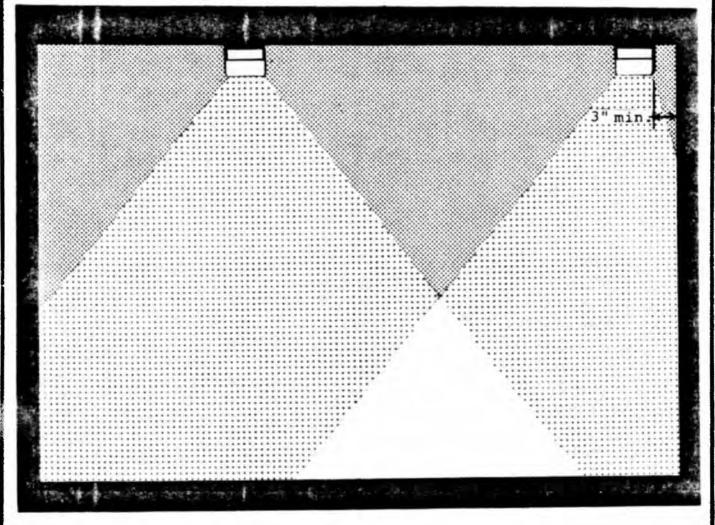


Continuous Fluorescent Fixture

Symmetrical fixture for area lighting.

Asymmetrical fixture for wall wash.

PASSAGEWAY


LIGHTING	VI
FIXTURE TYPES	B3.3
	LIGHTING FIXTURE TYPES

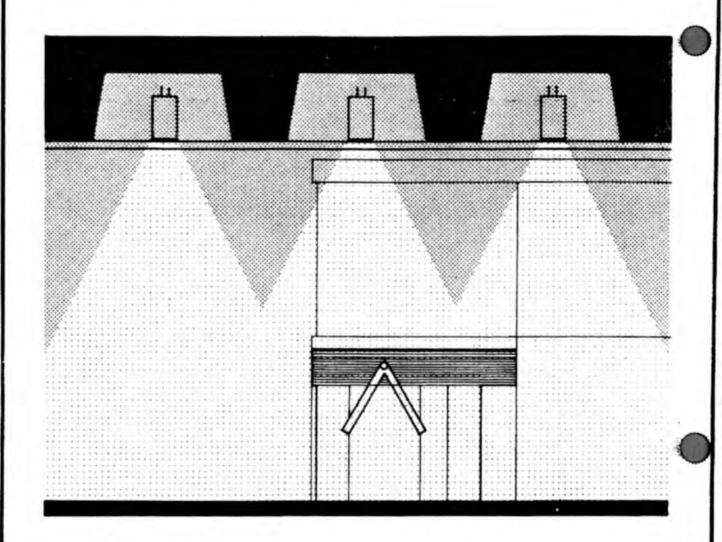

Raceway - supported High Intensity Discharge downlights.

FARE COLLECTION AREA


MAKSACHUSHTTS BAY TANKSPORTATION AUTHORITY	LIGHTING	VI
MANUAL OF GUIDELINES AND STANDARDS	FIXTURE TYPES	B3.4

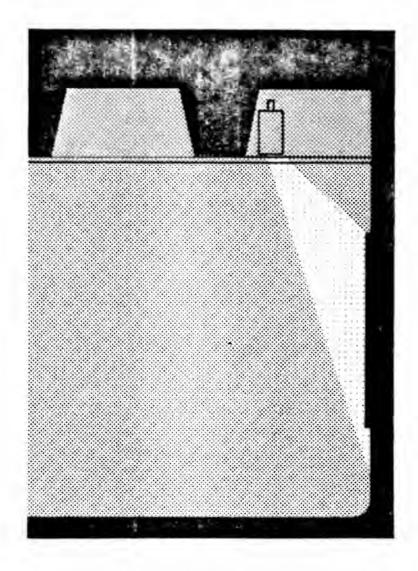

Raceway - supported High Intensity Discharge wall washer. Blanked out reflectors as required.

WALL MOUNTED GRAPHICS

MAGRACHUSETTE BAY THANSPORTATION AUTHORITY	LIGHTING	VI
MANUAL OF GUIDELINES AND STANDARDS	FIXTURE TYPES	B3.5

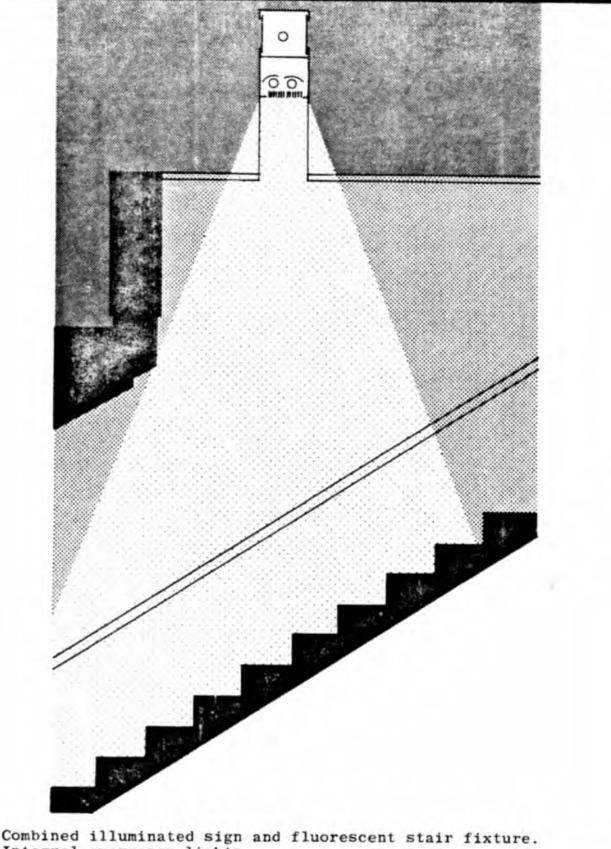

Combined illuminated sign and fluorescent stair fixture. Integral emergency lights.

EXTERIOR ENTRY STAIR

MASSACHUSETTS BAY TAMMSPORTATION AUTHORITY	LIGHTING	VI	
	MANUAL OF GUIDELINES AND STANDARDS		B3 6
	REVISED 1974		B3.6



MASSACHUSETTS
BAY
TRANSPORTATION
AUTHORITY
GUIDELINES AND STANDARDS
PART VII
MATERIALS
REVISED 1977

MANUAL OF GUIDELINES AND STANDARDS

PART I GUIDELINES AND PRINCIPLES

PART II STATION RECONNAISSANCE (Discontinued)

PART III STATION MODERNIZATION PROGRAM (Discontinued)

PART IV COMPONENTS

PART V GRAPHICS

PART VI LIGHTING

PART VII MATERIALS

PART VIII ACOUSTICS

PART IX SERVICE FACILITIES

PART X SITE PLANNING AND NEW STATIONS

PART XI VENTILATION

GENERAL INTRODUCTION

The Massachusetts Bay Transportation Authority has found it both necessary and possible to concentrate attention on the complex needs of people. Programs to improve service must now include a new emphasis on the quality of the transportation experience. In effect, transportation engineering has been joined by human engineering and environmental design.

This manual provides a framework for the continued coordination of all those elements in the system that affect human comfort.

Many of the criteria involved are common to all environments, such as the control of light, noise, humidity, temperature, wind, and odors, or the need for orderliness, through clear and easy circulation and clean appearance. Other criteria that are more specific to the transportation environment are such needs as safety, traffic handling capability, spatial variety, consistently available information, and orientation.

The most important single criterion that has guided the preparation of this manual is the need for orientation. The rider must not only be physically comfortable, he must also know in the fullest sense where he is and where he is going.

Since to the layman a public transportation system is to a large extent an invisible skeleton of the city and metropolitan region, the comprehension of that structure generates an awareness and appreciation of the city itself, and an appreciation of travel through it.


There are many aspects to achieving this orientation. Circulation at all points must be direct and open. Spaces should relate visually to their surrounding environment, either through direct openings to adjacent spaces and structures, or in the case of platforms, by graphic reflection through photographic murals.

Above all, the need for orientation places great emphasis on maps and a consistent system of identification and directional signing. Graphics then emerges as a major factor in the design of each environment, a factor that must be given high priority in the early design phases of each project.

It is hoped that all participants in all programs will familiarize themselves with the entire manual, so that the implications of each decision can be understood in a system-wide context.

The standards and guidelines presented here are not inflexible rules. They are a framework for meaningful development and variety, and offer no restriction to the capacity of each participant to evolve better solutions to old or new problems.

As new solutions are developed and approved, revised and additional pages for the manual will be issued to all participants.



Part VII of the Manual establishes standards by which materials and finishes proposed for use in the System will be judged. It lists a number of materials and finishes which have been already approved, subject to review by the Director of exact specifications and area of intended installation.

This part provides information on materials and details in use for standardized wall elevations, built-in graphics and other repetitive elements, and includes design standards for the printing of modernized and yet-to-be modernized stations.

For detailed layout requirements of graphic elements, refer to Part V, Graphics. For information regarding acoustic materials, refer to Part VIII, Acoustics. For laterials requirement in specific non-public rooms, refer to Part IX, Service Facilities.

INTRODUCTION

1	MASSACHUSETTS BAT TRANSPORTATION AUTHORITY	MATERIALS	VII
	MANUAL OF GUIDELINES AND STANDARDS		2

PART VII MATERIALS

A. Approved Materials

- 1. Criteria For Materials
- 1.1 Criteria For Materials
- 1.2 Criteria For Materials
- 2. Existing Stations Special Conditions
- Review of Unlisted Materials
- 4. Approved Materials Floors, interior
- 4.1 Approved Materials Floors, exterior
- 4.2 Approved Materials Walls, interior
- 4.3 Approved Materials Walls, exterior
- 4.4 Approved Materials Ceiling
- 4.5 Approved Materials Miscellaneous

B. Use of Materials

- 1. Typical Wall at Platform
- 1.2 Typical Wall Other Than Platform
- 2. Safety Strip at Platform
- 2.1 Safety Strip at Platform
- Doors and Frames (Page 1.1 Deleted)

C. Painting

- 1. General Principles
- 2. Major Surfaces
- 2.1 Major Surfaces
- 2.2 Major Surfaces
- 3. Structural Members
- Components (Page 2.3 Deleted)

See also Part, Graphics, Section 0: Fabrication and Installation It is the intent of the Authority to utilize materials and finishes throughout the System that will satisfy necessary standards of safety, durability, maintainability, and economy, while at the same time contribute substantially to a station environment that is, in fact and in appearance, clean, dry, odorless, well-lit, physically safe, as quiet and as comfortable as is reasonable consistent with station function, and above all, that affords a basic clarity of station form and user orientation.

The following criteria pertain to materials and finishes used in public areas only, including public lavatories, built-in collection booths, and service rooms into which the public can normally see. Materials and finishes for service areas not normally exposed to public view shall be judged solely on the basis of economy, and suitability for the use intended. See Part IX for functional requirements of lavatories and other service facilities.

Criteria

1) Safety

In general all materials and finishes used in the system shall be incombustible, although certain minor elements may be of wood, rubber, or plastic. Plastic or rubber materials used over any significant area shall be of a composition that does not support its own combustion, when in place.

All materials and their attachments shall be designed to adequately withstand normal operational vibration, the effects of aging, and especially the extreme demands placed on Authority property by theft and vandalism.

Materials and finishes shall be selected that provide adequate slip-resistance, glare-resistance, and other qualities that recognize the frequent presence of crowds, and of the handicapped and infirm.

2) Durability

Materials and finishes shall be used that provide long useful life, without decay, corrosion, weakening, decline in appearance, or other failure under normal conditions of use.

CRITERIA FOR MATERIALS

MASSACHUSETTS BAY TRANSPORTATION AUTHORITY	MATERIALS	VII
manual of Guidelines and Standards	APPROVED MATERIALS	A1

3) Maintainability

Specification of materials and finishes shall recognize that frequent high quality maintenance cannot be depended upon; and therefore materials with impervious surfaces that resist soiling, and, having been soiled, that tend to hide the soil, will go far to counteract deficiencies in maintenance. By the same token, materials and details that complicate cleaning operation, or which provide unnecessary surfaces to collect dirt, must be avoided. Joints between units shall be minimized, and made of the most durable materials.

Specific soiling conditions include:

Airborne dirt
Tracked-in water and dirt
Tracked-in salt (in winter)
Greasy brakeshoe dust from train
Water brought in by wet trains
Materials discarded by subway users
Many varieties of Vandalism

Materials should be specified which, in event of damage, can be repaired or replaced without untoward disruption of station function, and without calling attention to repaired areas.

4) Environmental Effects

Materials and finishes shall be selected for environmental effect as seems most appropriate to the Station Architect, subject only to the following two requirements:

- a) All colors shall be compatible with the Authority standard color coded graphics.
 - Walls and ceilings shall, in general, be light in tone, in order to decrease lighting costs by increasing reflectivity.
- b) Certain repetitive station elements are required to be of particular materials or colors, in order to lend unity to the System as a whole, to solve particular functional problems, and to permit large scale purchasing. These elements are described under this Part Seven, and include the following:

CRITERIA FOR MATERIALS

T	MASSACHESTYS Ext TRUBAPORTATION AUTHORITY	MATERIALS	VII (
	BARCAL OF CHIEF CARE A STREET	APPROVED MATERIALS	A1.1

- Platform safety strip (Sheets C 2 and C-2.1)
- 2. Doors and frames (Sheet C 3)

For other standardized elements, see Part Four: Components and Part Five: Graphics.

5) Economy

Each material and finish proposed for use shall be subject to an informal cost benefit analysis, which will equate its advantages in light of criteria 1-4 above, with its initial and long term costs.

CRITERIA FOR MATERIALS

MASSACHUSETTS BAY TRANSPORTATION AUTHORITY	MATERIALS	VII
MANUAL OF GUIDEUMES AND STANDARDS	APPROVED MATERIALS	A1.2

The criteria listed for materials and finishes pertain to both new stations and to modernized existing stations; however conditions in existing stations may preclude use of certain of the approved materials.

- Space limitations: In many cases, existing corridors, stairways, and platforms will be found to be too narrow to accommodate new facing materials of any significant thickness. The height of platform above top of rail at existing stations being remodeled must be held as close as possible to the Authority standards. This restricts selection of floor finishes in cases where platform structure or track elevation cannot be altered.
- 2) Seepage: In some existing stations, uncontrollable seepage through walls and/or ceilings may necessitate the use of new cavity walls, built in drains, waterproofing treatments or other special materials or details. Correction and prevention of seepage is of primary importance. In new stations, seepage can be expected at certain locations, such as expansion joints, so drip pans and other methods of handling water should be built-into the station.
- 3) Void areas: If large areas of furred or closed-off space are required, these must be adequately vented and drained to prevent build up of leaking gas, water seepage and condensation. Furred ceilings must be capable of withstanding the positive pressure induced by passing trains.
- 4) Continuing operations: The necessity that existing stations be kept in operation during modernization will require that setting times of materials, and required protection be considered. In order to minimize overtime costs, prefabrication should be seriously explored.
- 5) Budgetary limitations: In certain less-busy stations, modernization will necessarily involve only improved graphics, lighting circulation and fare collection equipment, together with a minimum of surface repair and renewal. Limited budgets for these stations will require that the most economical acceptable materials be used.

EXISTING STATIONS - Special Conditions

The Station Architect may propose unlisted materials and finishes, submitting samples and technical information as may be required. These will be reviewed by the Authority for safety, durability, maintainability, economy, and environmental effect, as well as conformance to the system of standardized elements.

No strength tests for vandal resistance have been adopted, the serviceability of a given material being related to its particular situation. Proposed materials and finishes shall, in general, show no permanent discoloration when tested with methylene blue, lipstick, mercurochrome, or flet-tipped markers. Scratching with a jack knife should be very difficult, and not noticeably reduce resistance to discoloration.

REVIEW OF UNLISTED MATERIALS

MASSACHUSETTS BAY TRANSFORTATION AUTHORITY	MATERIALS	VII
MANUAL OF GUIDELIMES AND STANDARDS	APPROVED MATERIALS	АЗ

The following types of materials are approved for use in the system, subject to the restrictions noted, and subject to Authority approval for each specific installation.

monolithic


Concrete granolithic topping Bituminous concrete (track area only)

unit materials

Quarry tile
Paver brick
Slate
Heavy-duty rubber sheet or tile flooring
Unglazed ceramic tile (lavatories only)

(unit materials used in lavatories shall have joints of chemical-resistant grout)

APPROVED MATERIALS - Floors, Interior



The following types of materials are approved for use in the system, subject to the restrictions noted, and, subject to Authority approval for each specific installation.


monolithic

Concrete - broom finish, Heavy duty synthetic resin toppings Bituminous concrete

unit materials

Paver brick Slate Granite Setts Asphalt block Precast concrete pavers

APPROVED MATERIALS - Floors, Exterior



The follwing types of materials are approved for use in the system, subject to the restrictions noted, and subject to the Director's approval for each specific installation.

monolithic

Concrete - smooth forms only (above vandal height only)

unit materials

Brick
Structural glased tile
Glazed ceramic tile
Architectural terra cotta
Natural stone - smooth faced, polished
Glazed brick
Procelain enamel
Non-corroding metals
Portland Cement plaster (above vandal height only)
Overlaid plywood (supervised areas only)
High pressure plastic laminates (supervised areas only)
(unit materials used in toilets must have joints of a

surface finishes

chemical-resistant material)

Heavy-duty epoxy coatings Inorganic glazed coatings Heavy-duty standard paints (above vandal ehight only)

APPROVED MATERIALS - Walls, Interior



MATERIALS

VII

The folliwng types of materials are approved for use in the system, subject to the restrictions noted, and subject to Authority approval for each specific installation.

monolithic

Concrete - no restriction on forms

unit materials

Brick
Structural glazed tile - frostproof
Glazed ceramic tile - frostproof
Architectural terra cotta
Natural stone
Heavy-duty glass
Procelain enamel
Non-corroding metals
Acrylic or polycarbonate plastic (above vandal height only)
Pre-cast concrete
Weathering steel - use with caution

MASSACHUSETTS BAY TANASPOBITATION AUTHORITY MANUAL OF GUIDELINES AND STANDARDS	MATERIALS	VII
MANUAL UP GUIDELINES AND STANDARIS	APPROVED MATERIALS	A4.3

The following types of materials are approved for use in the system, subject to the restrictions noted, and subject to Authority approval for each specific installation.


monlithic

Concrete - smooth finish, unpainted preferred Portland cement plaster - smooth finish, painted Gypsum plaster - smooth finish, painted

unit materials

Prefab concrete Wood fiber panels - painted Panels of non-corroding metals

APPROVED MATERIALS - Ceilings





The following types of materials are approved for use in the system, subject to the restrictions noted, and subject to the Director's approval for each specific installation.

- 1. Wall base
 Concrete smooth finish, painted
 Terrazzo
 Rubber flooring coved to form base
 Glazed wall material (if of dark color)
 Troweled-on cement plaster
 Same material as wall or floor finish, such as brick, quarry tile
- 2. Stair treads
 Rubber bonded to stainless steel with saftey yellow edge for interior stairs
 Concrete, stone, for exterior stairs
- 3. Stair bases and risers
 Concrete smooth finish, painted
 Sheet rubber
- 4. Hollow metal, Miscellaneous Iron and Steel Heavy-duty epoxy or nitrocellulose coatings Heavy-duty standard paints
 Baked-on enamel
- 5. Non-corroding metals
 Aluminum visible parts shall be anodized,
 one half hour minimum
 Stainless steel course brushed finish
- 6. Safety strip at Platform Edge
 Troweled on abrasive coatings
 Heavy-duty floor paint
 Sheet rubber
- 7. Wood
 Heavy-duty paint
 Clear polyurethane varnish
 Stain exterior locations
- 8. Caulking Polysulfide or silicone types where exposed to vandals.
- 9. Hardware Chrome, stainless steel, anodized aluminum all in brushed finishes

APPROVED MATERIALS - Miscellaneous Materials and Finishes

MASSACHUSETTS BAY TRANSPORTATION AUTHORITY	MATERIALS	VII
manual of guidelines and standard	APPROVED MATERIALS	A4.5

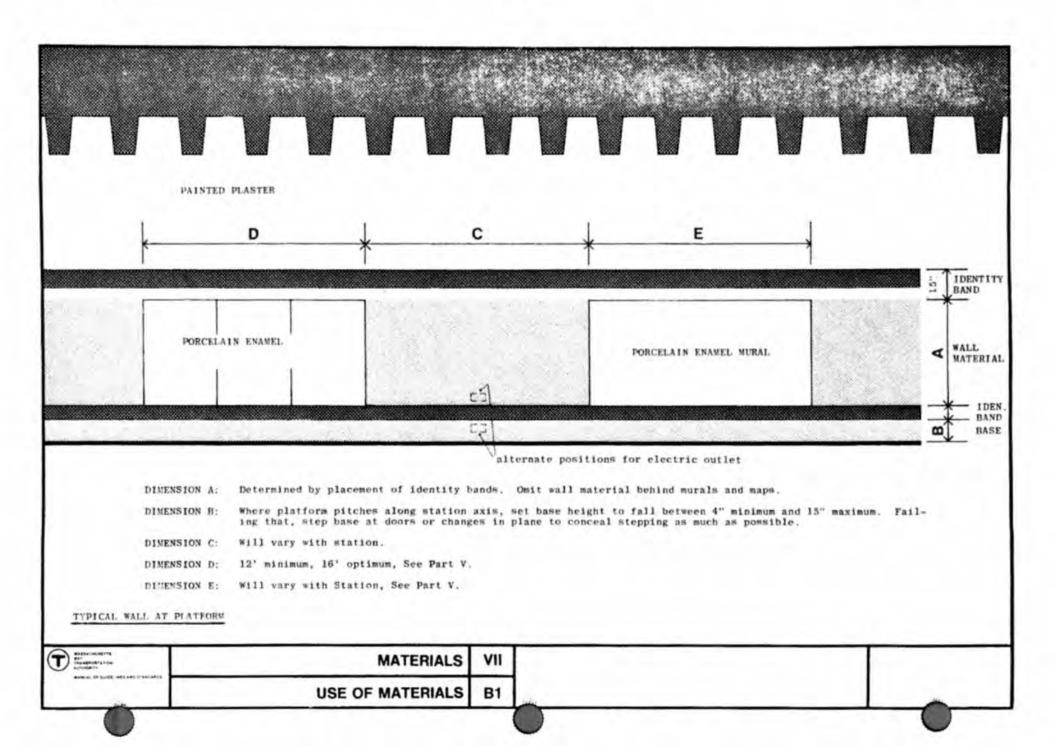

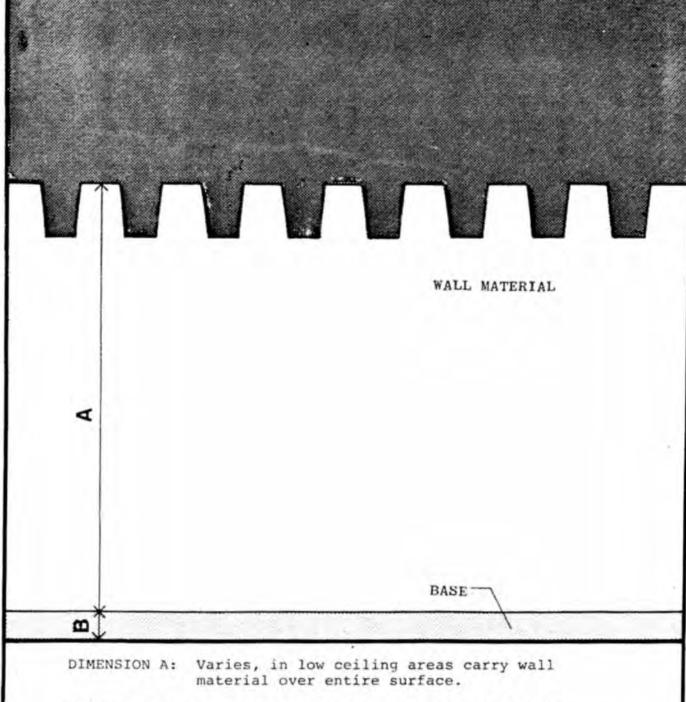

DIMENSION B: In general, keep base at constant height


above floor, throughout any one space. If pitch or coursing forbids, treat base as at platform walls. Wall or floor material

may also be used instead of a separate

base material

TYPICAL WALL (OTHER THAN PLATFORM)

MASSACHUSETTS BAY BANSACHTATION AUTHORITE	MATERIALS	VII
MANUAL DE GUIDEL MES AND STANDARDS	USE OF MATERIALS	B1.2

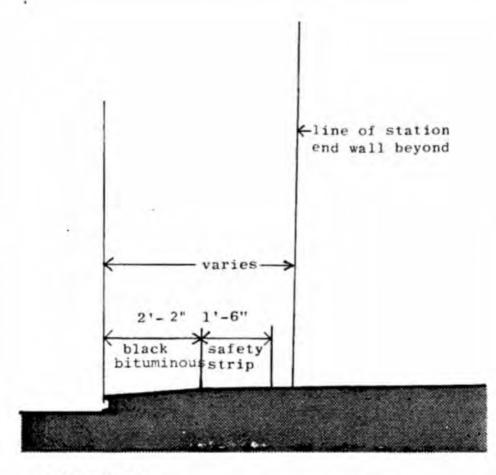

Safety Strip Material : Heavy-duty abrasive coating

Heavy-duty paint, sheet rubber


Color:

Safety yellow


Note that surface texture of yellow safety strip should contract with the platform finish to aid the blind.


SAFETY STRIP AT PLATFORM Streetcar lines


\odot	T MASSACHUSETTS TRANSPORTATION ANTHORITY MATERIALS	VII	
MANUAL DF GUIDE, WILL AND STANDARDS	MANUAL OF GUIDE (WILLS AND STANDARDS	USE OF MATERIALS	B2

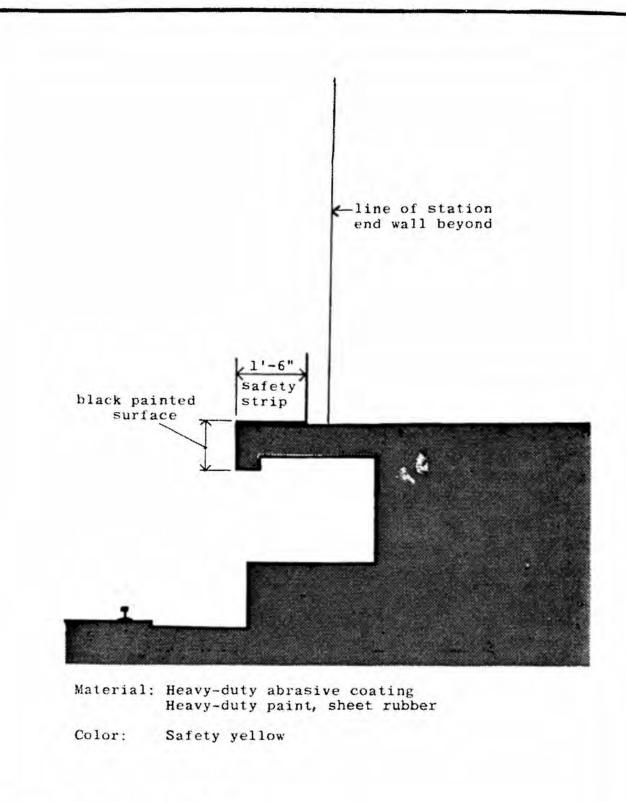

SAFETY STRIP AT PLATFORM Rapid Transit Lines



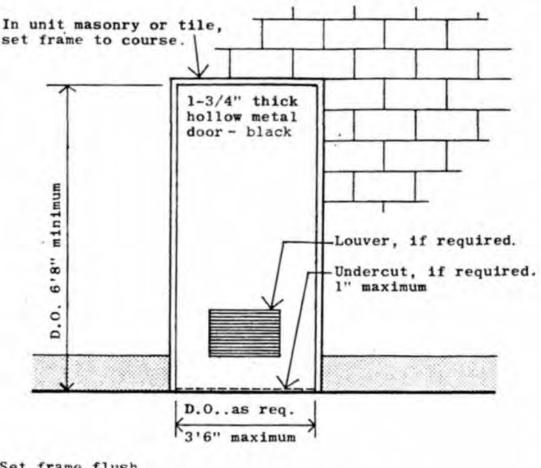

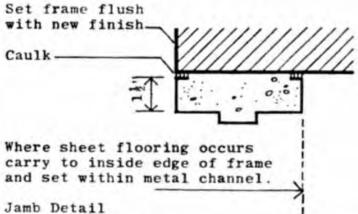

Refer to Part IX for door requirements for each room. Master keying and required make of cylinder will be established by the Director for each station.

DOORS AND FRAMES - Service Rooms

MASSACH-198715 64* TAMISHOW FATIGM AUTHORITY	MATERIALS	VI
MANUAL OF BUIDELINES AND STANDARDS	USE OF MATERIALS	ВЗ

In general, surfaces exposed to public contact are presently cald in some sort of heavy-duty glazed material that resists marking and damage, and permits easy maintenance. It is anticipated that such existing surfaces will be retained or replaced in kind and that new stations will be constructed of similar heavy duty materials. Acceptable materials are listed under Section A of this Part VII.


However, certain existing stations have public contact surfaces of painted plaster or concrete. Budgetary limitations may require that some of these stations not receive new glazed wall surfacings, but simply be repainted. There are also stations for which final plans cannot yet be made, and which will be repainted in the interim. Finally, all stations will require a certain amount of painting of walls, ceilings, and structure above public ontact areas. This Section C establishes guidelines for use in all three of these cases.

The guidelines are based on four principles:

- 1. Major surfaces, structural members, and components should be painted colors -- which are compatible with the Authority standard color coded graphics.
- 2. Major surfaces, structural members, and components should not be cut into parts by color changes, except where absolutely necessary as at bases, or as otherwise noted hereafter.
- 3. Minor surface elements, such as conduit runs, etc., should be painted out with the surface. This treatment should be used, however, only where they cannot be removed, or relocated.
- 4. Visible diret-catching elements which are inaccessible for cleaning should be painted dark to minimize the effects of soiling.

GENERAL PRINCIPLES

MASSACHUSETTS BAY TRANSPORTATION AUTHORITY	MATERIALS	VII
manual of Guidelines and Standards	PAINTING	C1

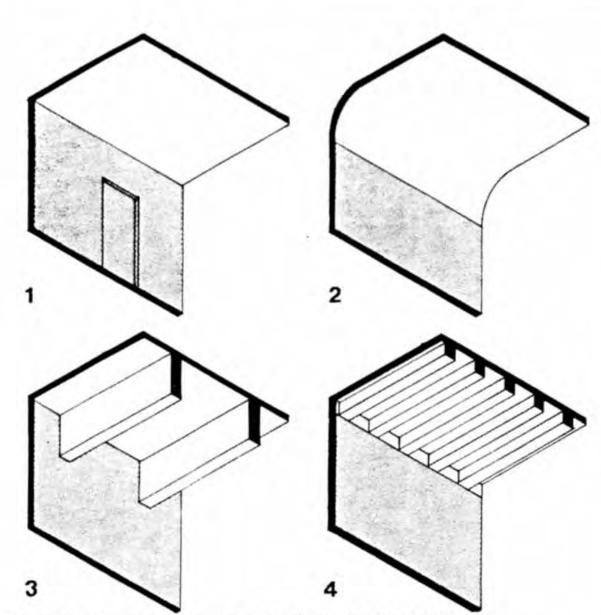



All ceilings are to be painted white or light color.


All walls exposed to public contact are to be painted with heavy dutey paint or approved synthetic coating.

- Color change occurs at intersection of two planes. Doors to service rooms are to painted black.
- 2. Wall color stops at spring line.
- 3. Wall color continues between wide-spaced beams.
- Wall color stops at underside of closely-spaced beams.

MAJOR SURFACES



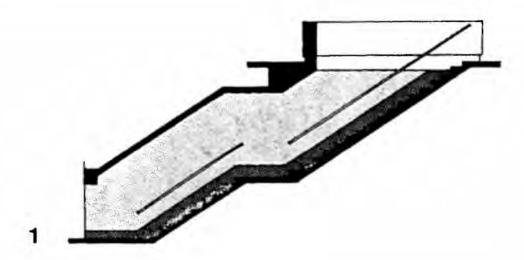

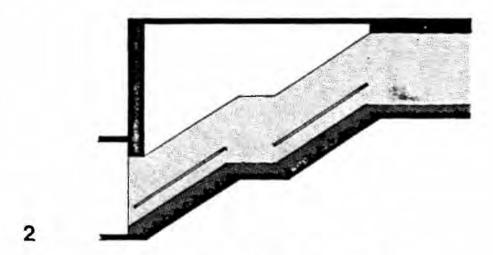



All exposed walls on stairways are to be painted with heavy duty paint or approved synthetic coating.

- Wall color terminates at exterior finish materials.
- 2. At very high walls above stairways, the wall color can be held down to a high wainscot running parallel to the stair slope. Wainscot height will be determined by actual conditions, but must extend above normal public contact.

MAJOR SURFACES

1	MASSACHUSETTS BAY TRANSPORTATION AUTHORITY	MATERIALS	VII
	MANUAL OF GUIDELINES AND STANDARDS	PAINTING	C2.1

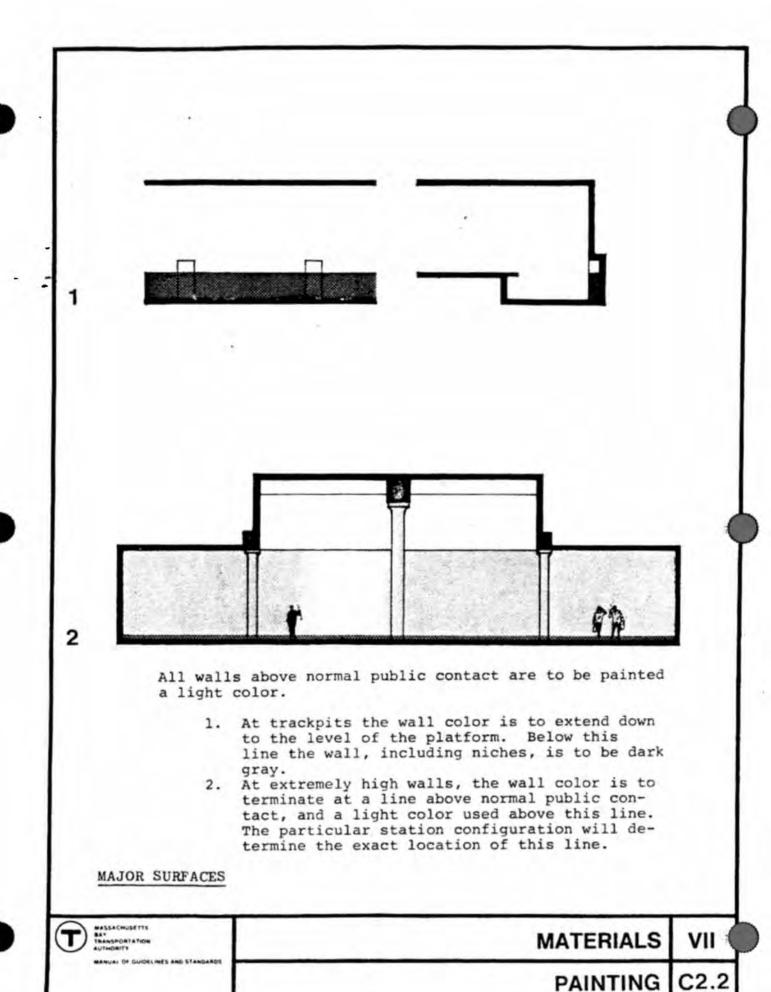

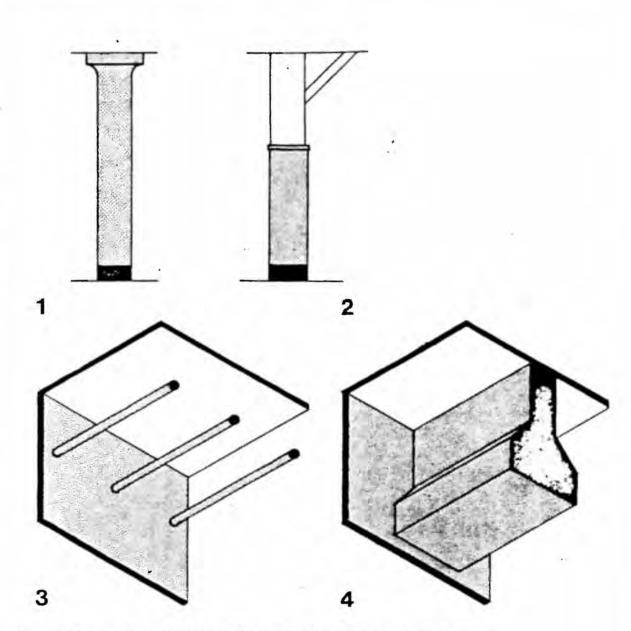

- 1. Columns are to be painted with wall color full height including capital.
- Exception: when column is partially sheathed, the part above the sheath is to be painted 2. another color.
- Tie rods are to be painted wall color.
 Members with horizontal dirt catching surfaces within public view are to be painted wall color.

STRUCTURAL MEMBERS


MASSACHUSETTS SAY TRANSPORTATION AUTHORITY	MATERIALS	VII
MANUAL OF GLEDGE, INTE AND STANDARDS	PAINTING	СЗ

- Where practicable, existing wood benches and existing handrails may be sanded down, and refinished in heavy duty varnish.
- All components are to be painted black. Where they are exposed to public contact, the paint shall be a heavy duty type, or an approved synthetic coating.

For painting purposes, the following are to be regarded as components.


Free-standing collection booths (types presently in use, only)
Turnstiles (types presently in use, only)
Exit gates (types presently in use, only)
Rotary Coinpassers (types presently in use, only)
Fences and Guardrails
Commerical facilities, not including factory finished telephone booths and lockers
Advertising frames
Exposed switch boxes and panel board enclosures
Exposed fire hose cabinets
Exposed sand and salt boxes
Metal stairs
Bases of existing benches

COMPONENTS





MASSACHUSETTS
BAY
TRANSPORTATION
AUTHORITY
GUIDELINES AND STANDARDS
PART VIII
ACOUSTICS
REVISED 1977



MANUAL OF GUIDELINES AND STANDARDS

PART I GUIDELINES AND PRINCIPLES

PART II STATION RECONNAISSANCE (Discontinued)

PART III STATION MODERNIZATION PROGRAM (Discontinued)

PART IV COMPONENTS

PART V GRAPHICS

PART VI LIGHTING


PART VII MATERIALS

PART VIII ACOUSTICS

PART IX SERVICE FACILITIES

PART X SITE PLANNING AND NEW STATIONS

PART XI VENTILATION



GENERAL INTRODUCTION

The Massachusetts Bay Transportation Authority has found it both necessary and possible to concentrate attention on the complex needs of people. Programs to improve service must now include a new emphasis on the quality of the transportation experience. In effect, transportation engineering has been joined by human engineering and environmental design.

This manual provides a framework for the continued coordination of all those elements in the system that affect human comfort.

Many of the criteria involved are common to all environments, such as the control of light, noise, humidity, temperature, wind, and odors, or the need for orderliness, through clear and easy circulation and clean appearance. Other criteria that are more specific to the transportation environment are such needs as safety, traffic handling capability, spatial variety, consistently available information, and orientation.

The most important single criterion that has guided the preparation of this manual is the need for orientation. The rider must not only be physically comfortable, he must also know in the fullest sense where he is going.

Since to the layman a public transportation system is to a large extent an invisible skeleton of the city and metropolitan region, the comprehension of that structure generates an awareness and appreciation of the city itself, and an appreciation of travel through it.

There are many aspects to achieving this orientation. Circulation at all points must be direct and open. Spaces should relate visually to their surrounding environment, either through direct openings to adjacent spaces and structures, or in the case of platforms, by graphic reflection through photographic murals.

Above all, the need for orientation places great emphasis on maps and a consistent system of identification and directional signing. Graphics then emerges as a major factor in the design of each environment, a factor that must be given high priority in the early design phases of each project.

It is hoped that all participants in all programs will familiarize themselves with the entire manual, so that the implications of each decision can be understood in a system-wide context.

The standards and guidelines presented here are not inflexible rules. They are a framework for meaningful development and variety, and offer no restriction to the capacity of each participant to evolve better solutions to old or new problems.

As new solutions are developed and approved, revised and additional pages for the manual will be issued to all participants.



INTRODUCTION

Part VIII of the Manual provides the designer with a brief discussion of: the rail transit noise environment, suggested noise criteria, and possible approaches to noise abatement in stations and along the right-of-way. The primary purpose is to make the designer sufficiently aware of the scope of the problems and their possible solutions, to insure that proper attention and resources are devoted to this area in the design process.

Rail transit noise affects three groups of receivers (persons subjected to noise): persons waiting in stations, persons along the right-of-way, and persons on the trains. This volume will deal primarily with those aspects of noise environment and control which affect the various receivers, which lie within the province of the station and facility designer.

This section supersedes the entire ACOUSTICS Section of the original issue of the Manual of Guidelines and Standards.

T	MASKACHIJSETTS BAY FRAMSPORTATION AITHORITY	ACOUSTICS	VIII
	REVISED 1973		1

PART	VIII. ACOUSTICS	Page No.
Α.	The Rail Transit Noise Environment	2
	1. Noise and How It Is Measured	3
	2. The Characteristics of Rail Transit Noise	5
	a. Sources, Paths, and Receiversb. Loudness or 'Sound Power"c. Prequency Content	
	3. Noise at Stations	16
В.	Noise Criteria for Modernization and New Design	23
	1. Types of Noise Criteria	25
	2. Rail Transit Noise and Vibration Criteria	36
	 Criteria for Community Exposure to Transit Nois Vibration 	se and 28
c.	Suggested Methods of Noise and Vibration Abatement	34
	 Noise and Vibration Reduction at the Source - 'Design 	Track 35
	2. Noise Reduction by Isolation	39
	3. Noise Reduction by Absorption	48
	4. Noise and Vibration Reduction by Damping	56
	5. Other Methods of Noise and Vibration Abatement	57
D.	Station Sound System	59
	1. System Requirement	59
	2. Consultant's Report	50
	3. System Specification	62
E.	Bibliography	63

#45040 more of 17%. #400 Incompanyor a time: as of manufactor and a time: as of manuf		ACOUSTICS	VIII
REVISEL 1973	PARENTE IN		2

A. The Rail Transit Noise Environment

The subject of noise and means of controlling it are covered in considerable depth in text books and technical reports in the field of acoustics. The purpose of this section is to give the designer some basic background in acoustics as applied to rail transit noise problems. There are many popular misconceptions about noise and its control, and hopefully some of these may be disposed of.

1) Noise and How It Is Measured

- Noise, which really means a disagreeable sound, consists of rapid fluctuations of pressure, which travel outward from the source through the atmosphere, to a location where they are detected by the ear.
- Noise, or pressure fluctuations, are created by a vibrating object, such as a violin string or a moving railroad car wheel.
- Noise is measured in decibels, giving an indication
 of the sound pressure level, on a logarithmic scale.
 This is done because of the wide range of sound
 pressure levels.

MACSACHISETTS R4' THAMSPORTATION AUTHORITY MAN 4 1 1 SPELIMES AND \$1 ENDARDS	ACOUSTICS	VIII
REVISED 1973		3

- The frequency of the pressure fluctuations determines
 the pitch of the sound with higher frequencies
 corresponding to higher pitch sounds.
- measuring devices called sound level meters can be compensated for this electronically to give the "loudness level" or "noise level" in decibels in the A scale, normally expressed as dBA. This is a reasonable approximation of loudness of a sound as heard by the average person, and will be used throughout this report, except where otherwise noted.
- A change in noise level must be at least 5 dB to be definitely perceptible to the average person.
- A change in noise level to 10 dA is equivalent to an apparent doubling, or reduction by one-half, of a sound.
- A very low noise level, such as a soft whisper at a distance of 5 feet is 34 dBA, an average residential area at night has a noise level of 40 to 45 dBA, while inside a factory, punch presses may create a noise level of over 110 dBA. Normal conversation is at a level of 60 dBA.

De CASE MINISTER. ALL THE MANAGEMENT OF THE CASE ASSESSMENT OF THE C	ACOUSTICS	VIII
REVISED 1973		4

2) The Characteristics of Rail Transit Noise

Rail transit noise must be discussed from the standpoint of its:

- Sources, Paths and Receivers
- Loudness or "Sound Power"
- Frequency Content

All of these must be considered by the designer in order to define the problems and develop their solutions.

a) Sources, Paths, and Receivers:

Sources:

Rail transit noise and vibration is greatest by a number of primary sources, with the most dominant one originating at the interface between wheel and rail. Other sources of noise radiation are equipment installed on vehicles or the wayside. The primary sources are as follows:

Wheel-on-rail noise which includes that caused by:

Rolling

Side slippage of the wheel across the railhead

Wheel slippage across and along the railhead on curves

Wheel flange bearing on the restraining rail and side of the running rail

Impact at built-in irregularities such as rail joints, switch and crossing frogs

T	МИЧБАСИНБЕТТБ ВА* ТРАДИБРОЯТАТІОМ БЭТИЙЯТТ	ACOUSTICS	VIII
	MANUAL OF CHIDELINES AND STANDARDS		5

Impact at rail defects such as rail corrugation, burns, or cracks

Impact at wheel defects such as flats and spalling

Current Collector noise which includes that caused by:

Sliding of the collector over the 3rd rail or overhead trolley

Impact at irregularities such as ramps at rail ends and joints

 Vehicle-mounted equipment noise which includes that caused by:

Traction motors (windage and bearings)

Gears

Brake shoes bearing on wheel treads, discs or rail surface

Air compressors

Motor-generator or alternator sets

Air Conditioning condensor and ventilating fans and refrigerant compressors

Flourescent light ballast

Doors (operator noise plus bands and rattles)

Couplings, and Pantograph Gates (rattles)

Brake valve air venting

Ventilation ducts, inlets, outlets, and louvers

Vehicle slip-stream

Mary National Prof. And Inc. Inc. Assemble in 1970. and Inc. Inc. Inc. Inc. Inc. Inc. Inc. Inc.	ACOUSTICS	VIII
REYISED 1973		6

Structure borne paths which include:

Vehicle suspension system

Auxiliary equipment suspension system (on vehicles)

Vehicle structure

Track and station supporting structure

Ground borne vibration path

Certain paths for the transmission of noise and vibration may in turn become radiators of audible noise. These secondary radiators include:

- Vehicle walls and ceilings
- Bridges and viaducts
- Station structures
- Adjacent building structures

Receivers:

The receivers of rail transit noise and vibration include:

- System users and employees on trains and in or around stations
- Wayside community

These receivers may be effected by noise and vibration in a number of ways:

T	MARRATHURZZZE RAY THANSPORTA! ON ALFMIRITY	ACOUSTICS	VIII
	REVISEO 1973		7

Wayside equipment noise which includes that caused by:

Ventilating fans

Ventilating shafts (moving air noise and train noise)

Substation transformers (60 hz hum)

Substation rotary converters

Pumps and ejectors

Switch machines

Fare collection equipment

Escalators

Air conditioning equipment

 Other sources including people, motor vehicles, buses, airplanes, etc., which effect the acoustical environment of the transit system user

Paths and Secondary Radiators:

The paths between source and receiver include the

following:

Airborne paths which include:

Directly radiated sound

Reflected sound

Reverberation in tunnels

Reverberation in stations

Reverberation in vehicles

- Psychological effects including annoyance and interference with conversation, rest, and work performance
- Physiological effects including discomfort, temporary or permanent hearing loss, and other general effects on health
- Economic effects such as decreased property values
 or interference with commercial activities
 These effects in combination can help create an image
 of the rail transit system which discourages its ridership and
 community acceptance.

b) Loudness or "Sound Power of Noise":

Investigation of the acoustical environment normally begin with measurements of the loudness of the sounds, or "sound power" (sound pressure level). Some typical noise levels and characteristics of transportation noise are described below.

Comparison of average peak noise levels generated by modern transportation vehicles, measured at a distance of 50' (from center of vehicle), out of doors at ear level, with speeds of 35 to 50 mph, are as follows:

Automobiles in traffic 70 to 80 dBA

Two Car MBTA Rapid Transit
Train on surface track with
welded rail

81 to 91 dBA

Diesel Bus 80 to 88 dBA

T	MASSACHISETTS BAT THANSPORTATION AITHORITY	ACOUSTICS	VIII
	REVISED 1973		9

Diesel Locomotive

90 to 104 dBA

Passenger and Freight trains excl. locomotive

83 to 96 dBA

• The effect of speed on noise generated by rapid transit trains running in the normal range of operating speeds (above 35 mph) is as follows:

Increase of speed by 25% increases noise by $\neq 3.5$ dB Increase of speed by 50% increases noise by $\neq 5$ dB Increase of speed by 100% increases noise by $\neq 9$ dB

- The number of cars in a train makes slight

 difference in the apparent loudness at 50 ft. from

 the tracks and a speed of 45 to 50 mph doubling from

 2 to 4 cars increases the noise by ≠2 dB. One also

 hears the noise for a slightly longer time.
- Doubling the distance from the train will reduce the noise level by ≠3 dB for distances less than 1/3 the train length, and by ≠6 dB for distances greater than 1/3 the train length.

Wayside noise levels measured by DOT Transportation Systems

Center (TSC) at various residential areas along surface and

elevated sections of "T" rapid transit lines at distances from

50 to 100 feet from the line are as follows:

(T)	erreductionspring man Disagli statistics applications
	eros a resimulant and transaction
	neviato 1673

(1) Blue 1	Line	84	to	89	dba
------------	------	----	----	----	-----

(2)	Orange	Line	88 .to	100	dBA
-----	--------	------	--------	-----	-----

(3) Red Line 80 to 92 dBA

The range of noise level at wayside at 50 ft. was found to be 80 to 95 dBA, in stations 80 to 95 dBA, and in the cars 70 to 95 dBA. These are judged to be typical of rail rapid transit systems in the U.S.

Noise levels measured by TSC on the Red Line South Shore Extension near Tenean Street on April 1972 were as follows:

	Train Length	Speed	Peak RMS No at 25 ft.	at 50 ft.	dBA at 100 ft.
Range:	2 car	47.4 to 51.3	74 to 100	81 to 96	7 3 to 90
Average	e: 2 car	49.9	89.5	86.5	79.8
Range:	4 car	48.6 to 56.4	87 to 102	82 to 97	77 to 90
Average	e: 4 car	50.1	95.2	88.4	83.6

These measurements were made on welded rail on concrete ties. Due to excessive wheel flats and wheel spalling they are at least 5 dB higher than would be expected with this type of equipment and roadbed. (Installation of a modern wheel-truing machine in the new South Bay shop will cause a major improvement in this area.)

c) Frequency Content of Noise:

The loudness or level of noise as expressed by the A-weighted level does not give sufficient information to the designer when

1	組成与集化(利258年795) 発表で 予助会員を伊持するヤバル よって列の集団ヤ	ACOUSTICS	VIII
	REVISED 1973		11


methods of noise abatement are under detailed study. It is necessary to consider the frequency content of the sound. Normally these are plotted by one-third octave band center frequencies. Typical wayside noise spectra for the South Shore Line measurements are shown on Figure 1 and 2.


When dealing with specific problems such as wheel-squeal, frequency analysis is particularly important. Measurements made at Government Center subway station are shown on Figure 3.


Note the very intense peaks at the high end of the scale.

The designer may require analysis of this type, as well as other more extensive measurements and analyses of noise and vibration to solve the problems of individual location.

Barstan minds for San Transplant to final Antrophilin's	ACOUSTICS	VIII
REVISED 1973		12

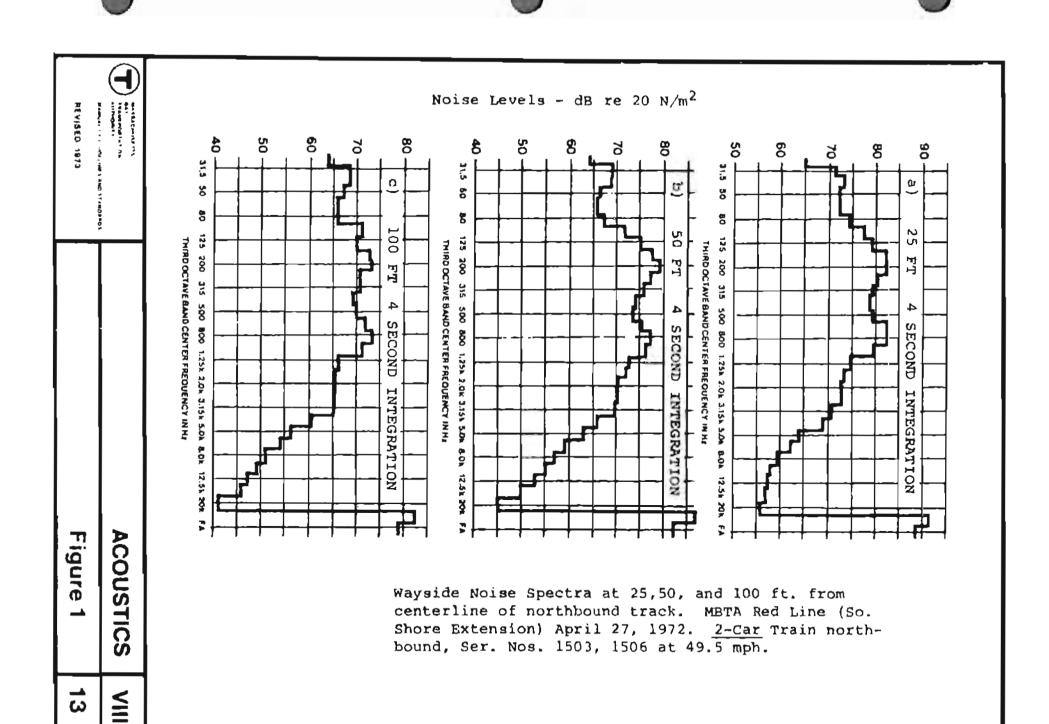

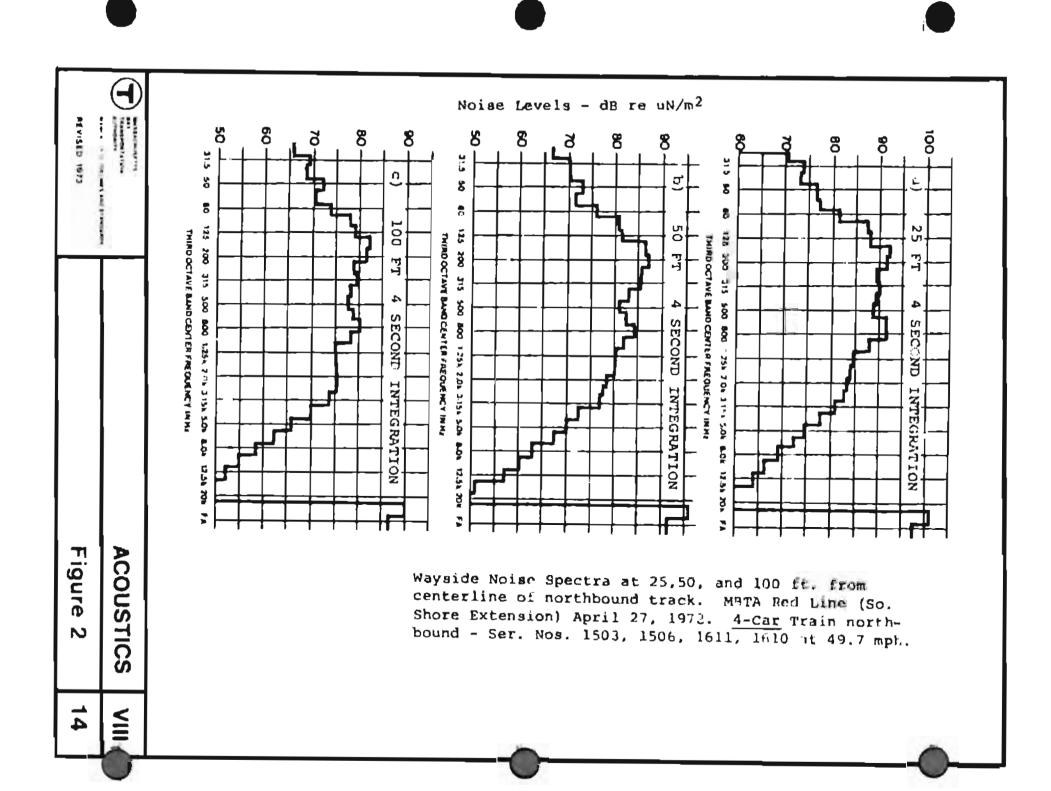

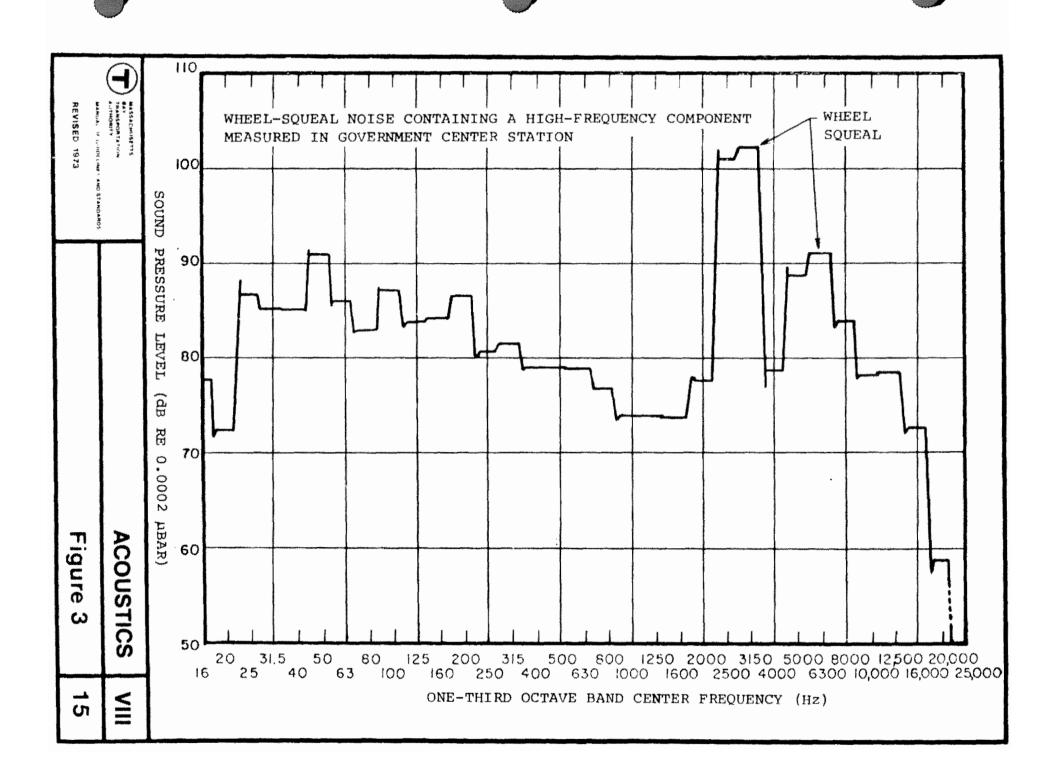

Noise at Stations

Noise level on station platforms varies with the type and condition of equipment and roadbed, maximum speed of trains entering and leaving the station, to what degree the station is enclosed (subway station versus un-roofed surface station), the nature of the enclosing surfaces, and the configuration of the track geometry approaching and within the station.

The preliminary report "Rapid Transit Noise Assessment and Abatement/Cost Requirements" by U. S. DOT Transportation Systems Center (TSC) of March 1973 covers a measurement program done on MBTA rail rapid transit lines. It describes station noise as follows:

"In the absence of any train, waiting patrons hear ambient noise due to station machinery and, if the station is above ground, from traffic and aircraft. As a train arrives the awaiting patrons hear low frequency noise. Usually the noise level reaches a peak in about six to eight seconds and drops rapidly during the next several seconds to a rough noise plateau as the train stops. Frequently, the mechanical tread-braking produces a short screech prior to the stop. In the worst cases, the following effects then occur in rapid succession: (1) Door slam; (2) Brake air release hiss: (3) auxiliary equipment such as ventilation and motor-generators produce a steady noise. As the train departs another sequence of door slam and brake hiss noises

Williamedity And Andrews	ACOUSTICS	VIR
MARRIE 1037		16

occur followed by the low frequency rumble of the departing train." This sequence of events is shown on Figure 4.

A comparison of subway station platform noise levels for various rail transit systems is shown below:

T.	ABLE SUBWA	Y STATION PLATFORM NOISE LEVELS Passby Speed	
Car Type		and Conditions	Noise Level
Car Type	•	and conditions	NOTSE HEVET
BART		0 mph	63-64 dBA
		20	77
		40	87
		55	90
		Entering & Leaving	70-75
TTC		Entering & Leaving -	
		No acoustical treatment	85-91
		With acoustical treatment	70-8 0
PATCO Li	ndenwold	Entering & Leaving -	
		No acoustical treatment	79-89
Paris Me	tro New	20 mph	75-82
Steel Wh	eel	40	89-91
		Entering & Leaving	80-86
Paris Me	tro Rubber	20 mph	73
Tire		40	86
		Entering & Leaving	80-85
Paris RE	R	Entering & Leaving	79- 80
CTA		Tunnel Stations with Concrete Trackbed	103-110
		Subway Stations with	

MASSACHUSETTS RAI THANSPORTATION AUTHORITY MANGALIAL IN COUDELINES AND STANDARDS	ACOUSTICS	VIII
REVISED 1973		17


platform lines Entering & Leaving

Ballast & Tie Track

MBTA - high

90-95

84-93

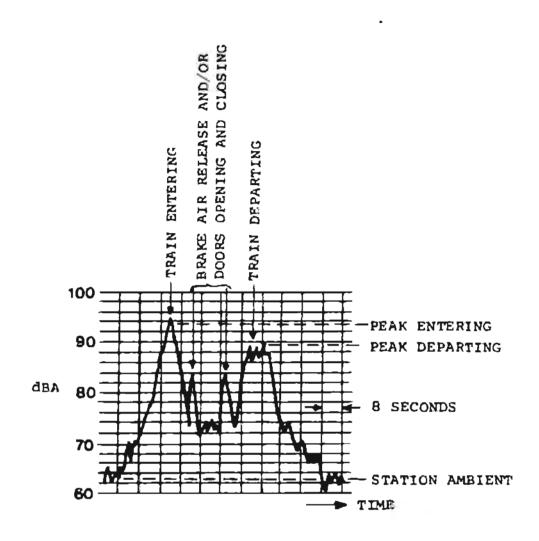

Sample Time History of Stat:on Platform Noise Levels (dBA)

manufacturing TYC that result of the control of the	ACOUSTICS	VIII
MENISEC, 1673	Figure 4	18

The TSC measurement program in Boston included platform noise level measurements in eighteen of the forty-four stations of the three rapid transit lines. In some cases continuous recordings were made and in others a series of rapid hand held meter readings were obtained. The microphone or meter was placed about ten feet back from the platform edge at a typical waiting location. The average of the arriving and departing peaks in the A-weighted sound levels was chosen as a simple measure of the severity of noise in stations.

Based on the measurements, noise levels were estimated for all the remaining stations on these lines. Measured and estimated values are shown below:

a) <u>Blue Line</u> Station	Туре	Avg. of Entering & Leaving peaks (dBA)	Ambient Level (dBA)	Comments
l. Bowdoin	Subway	90	55	Measured
2. Govt. Center	Subway	89	62	Measured
3. State	Subway	90	55	Measured
4. Aquarium	Subway	85	45	Measured
5. Maverick	Subway	88	53	Measured
6. Airport	Surface	90	58	Measured
7. Wood Island	Surface	88-92	, salain.	Estimated
8. Orient Hghts.	Surface	83-87	-	Estimated

MANGACHUSEFFE BAY THAMEHORTATION AUTHORITE MANGACIUS CUDELIMPLAND STANDARDS	ACOUSTICS	VIII
REVISED 1973		19

9. Suffolk Downs	Surface	92	54	Measured
10. Beachmont	Elevated	88-92	-	Estimated
11. Revere Beach	Surface	88-92	-	Estimated
12. Wonderland	Surface	88-92	-	Estimated
b) Orange Line				
Station	Туре	Avg. of Entering & Leaving peaks (dbA)	Ambient Level (dBA)	Comments
l. Everett	Surface	78-82	-	Estimated
2. Sullivan	Elevated	83-87	-	Estimated
خ. Thompson	Elevated	78-82	-	Estimated
4. City Square	Elevated	83-87	~	Estimated
5. North Sta.	Elevated	87	66	Measur ed
6. Haymarket	Subway	83-87	-	Estimated
7. State	Subway	83-87	-	Estimated
8. Washington	Subway	84	60	Measured
9. Essex	Subway	87	55	Measured
10. Dover	Elevated	78-82	-	Estimated
11. Northampton	Elevated	78-82	-	Estimated
12. Dudley	Elevated	80	64	Measured
13. Egleston	Elevated	78-82	-	Estimated
14. Green	Elevated	78-82	-	Estimated
15. Forest Rills	Elevated	78-82	-	Estimated

Washington of the Control of the Con	ACOUSTICS	VIII
REVISES 1613		20

c)	Red	Line
- A	We distribute about	March Aller At A March

Station	Туре	Avg. of Entering & Leaving peaks (dBA)	Ambient Level (dBA)	Comments
1. Harvard	Subway	88-92		Estimated
2. Central	Subway	93-97	*	Estimated
3. Kendall	Subway	93	55	Measured
4. Charles	Elevated	83-87	-	Estimated
5. Park	Subway	89	62	Measured
6. Washington	Subway	88-92	***	Estimated
7. South Sta.	Subway	88-92	-	Estimated
8. Broadway	Subway	88-92	-	Estimated
9. Andrew	Subway	90	62	Measured
10. Columbia	Surface	83-87	****	Estimated
ll. Savin Hill	Surface	85	72	Measured
l2. Fields Corner	Surface	83	50	Measured
13. Shawmut	Subway	88-92	_	Estimated
14. Ashmont	Subway/Surf	. 88-92	-	Estimated
15. North Quincy	Surface	83-87	****	Estimated
16. Wollaston	Surface	83-87	-	Estimated
17. Quincy Ctr.	Subway	83-87	Mande	Estimat ed

The noise level for MBTA high platform subway stations was measured or estimated within a range of 84 to 93 dBA, surface stations 78 to 92 dBA, and elevated stations 78 to 87 dBA.

	MASSACHUSETTS BAS TRANSPORTATION AUTHORITY	ACOUSTICS	VIII
I	MANGAL OF GUITELINES AND \$54MDARGS		
	REVISED 1973		21

A study by Bolt Beranek and Newman "The Acoustical Treatment of Stations to Alleviate Wheel-Squeal Noise" of October 1970 included measurements at 3 Green Line subway stations where small radius curves created extreme noise levels:

1.	Government Center:	93-105 dBA 97-109 dBA	Entering Southbound Leaving Southbound
2.	Park Street:	95-114	Entering Southbound
3.	Boylston: (curve)	93-105 95-98	Entering Northbound Leaving Westbound

Noise levels in areas of stations other than platforms will vary with the distance from the tracks, and the shape and composition of openings, passageways, or barriers between the tracks and the area in question. The designers should have measurements made at locations where noise problems are apparent. At locations in the station where personnel are on duty, such as collector's booths adjacent to subway platforms, a health hazard due to excessive noise may be possible. Preliminary study by TSC has indicated that the present facilities lie within present OSHA criteria, but in some cases the margin is small.

Noise levels in bus terminal areas of enclosed stations, such as Fields Corner or Ashmont, may reach 80 to 88 dBA. Generally the bus noise is less of a problem at stations than the train noise.

①	MERCES TO THE TIME THE SECOND STATE THE SECOND STATE SE	ACOUSTICS	VIII
	MENISED 1973		22

Exterior noise levels at surface or elevated stations will depend on the location of tracks with respect to the receivers, and the physical design of the structure supporting and/or enclosing the station.

Noise levels adjacent to platforms at open surface stations, such as North Quincy, is similar to levels on the platform, except that the sound will be attenuated with increasing distance from the track. Noise adjacent to station approaches is similar to that on line sections of the same geometric configuration for speeds in the area of 30 to 50 mph (the higher speed being further from the station). At stations with sharply curved track approaches, wheel squeal can be expected, which can cause annoyance to station users or neighbors.

Along subway sections vent shafts occur, often in the vicinity of stations. Depending on their configuration and location with respect to wayside receivers, vent shafts may create problems.

Therefore acoustical studies of modernized or new subway stations should include consideration of vent shafts.

B. Noise Criteria for Modernization and New Design

The purpose of these criteria is to establish guidelines for good practice for the designers of new facilities. These

MASSACHUSETTS BAY THANSPORTATION JUTHORITY	ACOUSTICS	VIII
MANUAL OF COUDSTANDARDS REVISED 1973		23

of Rapid Transit Facilities" by the Institute for Rapid Transit, draft of June 1972.

Because of the built-in characteristics of existing facilities and equipment, it is not practical to expect that modernized stations and structures will be able to meet these standards. The designer for modernization projects should consider these criteria as a desirable "ideal" goal while in the process of seeking means of making a sign:ficant improvement over the existing noise environment.

The IRT guideline criteria are not intended to be, nor are they to be confused with, noise abatement controls of the type enacted or proposed by various communities or public agencies.

1) Types of Noise Criteria

There are two principle types of noise criteria which are based on some measure of human response to noise. They are:

Criteria Based On Ambient Noise Levels. This type of criterion uses limits based on the difference between the noise in question and the prevailing ambient noise. Criteria based on ambient noise levels are often used to set objectives for remedial design in existing systems. They are generally applicable in problems relating to the system impact on the community.

T	MACHINET TO A LA STANDARD TO THE LA STANDARD TO THE	ACOUSTICS	VIII
	REVISED 1971		24

Ambient noise levels in the community have been rising rapidly in recent years. Criteria based on ambient levels should be reviewed periodically to determine whether or not the ambients will have any significant effect on the public.

Absolute Limit Criteria. These criteria use absolute limits related to measurable physical quantities. They usually deal with hearing damage and protection, speech communication or interference with other tasks and subjective reactions such as annoyance and are used in ensuring an acceptable acoustical environment for passengers and employees of the system.

The use of absolute criteria in design problems relating to system impact on the community should be considered carefully. There is a wide variation in public reaction that can occur even at the same noise levels.

Factors which may affect public reaction to noise, besides the fact that a noise is new and higher than existing ambient level, include high socio-economic status, property ownership, duration and frequency of noise, previous community exposure, nature of the community and its previous success with complaints.

T	MASSACHISETTS BAT THAMSPORTATION ALTHORITY	ACOUSTICS	VIII
	MANUAL OF COURSE INFO AND STANDARDS		25

However, the primary objective in good transit design should therefore be to reduce annoyance rather than simply reduce complaints.

- The following assumptions are made in stating the criteria herein:
 - Noise, or sound pressure levels, are measured with a sound level meter which meets the Type 2 requirements of American National Standard (ANS) S1.4-1971, Specification for Sound Level Meters.
 - All noise levels are in decibels referred to 0.0002
 microbar. (0.002 bar)
 - The "slow" meter response is assumed for all noise level measurements except those involving measurements of moving and transient sources such as exterior train noise, train noise from vent shafts and car door operation. The latter sources should be measured using "fast" meter response.

RAIL TRANSIT NOISE AND VIBRATION CRITERIA FOR NEW DESIGN

		<u> Item</u>		Criteria
a)	TRANSIT V	EHICLES, NOISE AND VIBRATIO	<u>NS</u>	
	•	Vehicle Interior Noise Lev	els (Empty car)	
		In open (ties and ballast)	at maximum speed	68 dBA
		In open (concrete trackbed) at maximum speed	72 dBA
		In tunnels at maximum spee	đ	78 dBA
		All auxiliaries operating,	car stationary	65 dBA
		One auxiliary system opera stationary	ting, car	60 dBA
		Door operation		65 dBA
	•	Vehicle Exterior Noise Lev from T & B Track)	<u>els</u> (50 ft.	
		Car stationary, auxiliarie	s operating	60 dBA
		Two-car train at max. spee	d (70 mph)	83 dBA
	•	Vehicle Equipment Noise Le from car)	<u>vels</u> (15 ft.	
		Propulsion system at equiv	alent to max. speed	90 dBA
		Car stationary, auxiliarie	s operating	65 dBA
		Decrease in criteria for p tones	resence of pure	3 dBA
	•	Vibration Levels		
		Measurements taken on car noted. Displacements meas and acceleration are:		

T	MARRACHISETTS BA: TRAMSPORTATION AUTHORITY	ACOUSTICS	VIII
	MANUAL MICHIGANES AND STANDARDS REVISED 1973		27

<u>Item</u>	Criteria
Maximum amplitude	0.10 in.
Maximum acceleration, up to 10 Hz.	0.01 g.
Maximum velocity, 19 Hz. and over	0.03 in/sec.
Maximum amplitude on detached traction motors	0.0015 in.

b) STATION NOISE

Underground Station Noise Levels

Platform level, trains entering and leaving	80 dBA
Platform level, trains passing through	85 dBA
Platform level, trains stationary	67 dBA
Maximum train room reverbervation time	1.6 to 2 sec.
Platform level, only station ventilation system operating	55 dBA
In station attendants booths	45 dBA

Surface or Elevated Station Noise Levels (Interior)

70-75 dBA

Platform level, trains entering and leaving

3) <u>Criteria for Community Exposure to Rail Transit Noise and Vibration</u>

The criteria for vehicle exterior noise levels of 85 dBA included in section 2 above represent the maximum noise level permitted at a distance of 50 feet from a train at speed on modern

Mark Sand House Title 61: The expendence of the first April of Transport of Transpo	ACOUSTICS	VIII
REVISED 1973		28

track. It is necessary, however, that the designer consider the noise and vibration generated by trains, fixed equipment, and by motor vehicles at terminals, as felt by the actual receivers along the wayside.

a) Airborne Noise

Community noise levels may be considered in five general categories according to ambient sound levels at night:

Typical Community Ambient Noise Levels

Area Category	Area Descriptions	Ambient Noise
The second secon		Levels at Night
1	Quiet urban residential, open space park, suburban residential or recreational area. No nearby highways or boulevards.	35-40 dBA
2	Average urban residential, quiet apartments and hotels, open space, suburban residential, or occupied outdoor area near busy streets.	40-45 dBA
3	<pre>Busy urban residential, average semi- residential/commercial areas</pre>	45-55 dBA
4	Commercial areas with office build- ings, retail stores, etc., with daytime occupancy only. Open space parks, suburban areas near highways or high speed boulevards, distant residential buildings.	Over 55 dBA
5	Industrial or Highway Corridors with either residential or commercial areas adjacent.	Over 60 dBA

MASSACHUSETTS BAT TRANSPORTATION AUTHORITY	ACOUSTICS	VIII
MANUA, OF CORDECIMES AND STANCARDS		29

Airborne noise from above-ground train operations should be considered in relation to the nature of the adjacent community.

In view of the transient nature of train operational noise, community acceptance should be expected provided that noise levels do not exceed the following criteria:

NOISE CRITERIA FOR TRAIN OPERATIONS

	Area Category	Transit Noise Level Criteria
1.	Quiet residential	70 dBA
2.	Average residential	75 dBA
3.	Busy residential/semi-commercial	80 dBA
4.	Commercial/open	65 dBA
5.	Industrial and Highway Corridor	85-90 dBA

These criteria are referenced to a point 50 feet from track centre line. In cases where buildings or occupied areas are further from the transit line the criteria may be referenced to the building or area being considered.

It is obvious that to meet these criteria, or more stringent criteria which may be necessary when the right-of-way is close to special uses such as schools, theatres, etc., the designer must provide further means of reducing wayside noise, as will be discussed in the section on noise abatement measures.

Airborne noise from wayside transit facilities such as vent shafts and substations, should meet the below listed criteria. Note that in the case of vent shafts the transient

T	DAY CHAMPOORT ATTEM ACTIONATE	ACOUSTICS	VIII
	REVISED 1973		30

criteria apply to the sound created by passing trains, and in the case of fan shafts, pumping stations, and substations, the steady state criteria apply. Transient noises are acceptable at higher levels than steady-state noises particularly when the latter contain pure tones.

CRITERIA FOR NOISE FROM WAYSIDE TRANSIT FACILITIES

	Area Category	Noise Level Transient	Criteria Steady-State
1.	Quiet residential	45 dBA	40 dBA
2.	Average residential	50 dBA	45 dBA
3.	Busy residential, semi-commercial	55 dBA	50 dBA
4.	Commercial/open	60 dBA	55 dBA

b) Groundborne Noise and Vibration

Vibration levels from modern transit cars and track are below the threshold of perception in most circumstances. However, these levels are still sufficient to generate a low frequency rumbling noise which can signal the passage of a train. This noise level is frequently of sufficient loudness to create a significant intrusion or annoyance.

The principal noise sources in modern buildings are the air conditioning and ventilating systems and background noises transmitted into the building from street traffic. Noise and vibration from these sources will often exceed those generated by transit operations.

T	競点性格を呼いばきが生化 数点 工具高校等所の用するでごうね 走に子州の押ITV	ACOUSTICS	VIII
	MANUAC OF CORDESINES AND STANDARDS	•	31

The most critical locations where noise could create intrusion are sleeping rooms and auditoriums. Since sleeping rooms are most common and found in various classes of residences, interior noise criteria relating to these areas should be considered in the same area categories as airborne noise from wayside transit equipment.

For three categories of residential area the background noise in sleeping spaces is generally different, and the allowable noise level can be greater in the noisier areas. The table below indicates the range of levels for transient noise generated by mechanical vibration of the building structures, which should be acceptable to the community if not exceeded. It would be unreasonable in most cases to design for a noise level that is undetectable by occupants. The low level transient noises generated by ground-borne vibrations from passing trains must be made unobtrusive but not necessarily undetectable.

NOISE CRITERIA FOR INTERIOR SLEEPING AREAS

Area Category		Evilding Type And Sleeping Space Description	Groundborne Noise Level Criteria		
1.	Quiet residential	Private residences Apartments	25 to 30 to	-	
2.	Average residential	Private residences Apartments Hotels	30 to 35 to 40 to	40	dBA
3.	Busy residential	Private residences Apartments Hotels	35 to 40 to 40 to	45	dBA

DesCORPORATES Discorporation Discorporation	ACOUSTICS	VIII
REVISED 1573		32

The table below presents generally acceptable noise levels in occupied spaces of various types of buildings. This Table is not intended to be all inclusive but may be a convenient general guide to the designer.

MIS CELLANEOUS ROOM NOISE CRITERIA

Type of Building or Room	Groundborne Noise Level Criteria
Auditoriums or Concert Halls	25-30 dBA
Churches and Theaters	30-35 dBA
Music Rooms and TV Studios	30-35 dBA
Hospital Sleeping Rooms	35-40 dBA
Courtrooms	35-40 dBA
Schools	35-40 dBA
University Buildings	35-40 dBA
Offices	40-45 dBA
Commercial Buildings	45-50 dBA

Noise caused by the vibrations which meets the design criteria listed above will not be inaudible in all cases, however, the level will be sufficiently low that no significant intrusion or annoyance should occur. In most cases, there will be noise from street traffic, other occupants of a building, or other sources, which will create intrusion that is greater in level than the noise from transit trains passing by in adjacent tunnels.

MASSACHUSETTS BAT TRANSPORTATION ALLIMORETY	ACOUSTICS	VIII
MAN-AL N. CHRISTINIS AND STANDARDS REVISED 1973		33

C. Suggested Methods for Noise and Vibration Abatement

The designer is expected to explore a number of methods of noise and vibration control. Analysis of the noise problem at particular locations may require a combination of several solutions, some of which may be incorporated in the station or facility construction or modernization project, while others may be made a part of other improvement or maintenance projects carried out by Authority forces or outside contractors. The definition of project responsibility for specific noise abatement measures will be made by the Authority at the conclusion of the preliminary design phase.

The designer should consider the prevailing acoustic environment and the noise and vibration criteria when deciding how improvement can best be attained. In some situations, the retention of an Acoustical Consultant may be necessary. Materials and methods not described herein may be proposed, and will be approved by the Authority provided they meet acceptable standards of safety, durability, maintainability, appearance, and economy.

There are several principal means of abating rail transit noise:

• The most effective way of lessening rail transit noise is in the <u>reduction</u> of sound at its source. This can be achieved through:

BATANESHISATTO BIS TRANSPORTS ATTENDED TO SERVICE STATE TO SE	ACOUSTICS	Ville
REVISED 1975		34

- (1) Basic design of the cars themselves in order to reduce noise creating movement.
- (2) Resilient mounting of track and welding of rails
- (3) A continuing program of wheel truing and other car maintenance procedures
- A second method of noise control is isolation, whereby barriers are introduced between the sound source and the receiver.
- A third method is absorption of the sound within a space.
- A fourth method is <u>damping</u> of resonant surfaces.

The first method involves design of cars which is beyond the scope of station and structure designers. The question of track design is covered extensively in the literature and will be only briefly reviewed here. Should noise measurements at particular sites indicate car or track related problems, these should be discussed in the consultant's report. The other methods of noise control will be covered in greater detail as they may be applied by the station or structure designer.

1. Noise and Vibration Reduction at the Source - Track Design

Measures for noise and vibration reduction as applied to

track concern rail joints, rail support and rail lubrication.

MASSACHUSETTS BATTANSPORTATION AUTHORITY	ACOUSTICS	VIII
MANGAL CONTINUES AND STANDARDS		35

a) Rail Joints

Rail joints can create noise levels as high as 8 or 10 dB above the normal rolling noise. Welding of joints eliminates this problem though the grinding of the joint must be carefully done to be an effective noise reduction measure.

On lines with older signal systems insulated joints are necessary (Green, Orange and Blue lines) at the ends of track circuits. Normally these occur near the ends of stations. Lines with modern cab signal systems such as the Red Line do not require insulated joints except at interlockings.

"Frozen joints" created by glued or Huck bolted joint bars with no space left between rail ends do not substantially reduce noise compared with a normal bolted joint.

b; Rail Support

The conventional form of track construction on MBTA lines consists of rail resting on the plates and secured to wooden these with cut or screw spikes. In some cases thin pads are placed under the tie plate to reduce the wear. Surface track on the South Shore Line has the rails attached to concrete these with spring clips, with an elastomeric pad between rail and the for vibration and electrical isolation.

(T)	grobber weightig. Ber Tan weightigting gulingantis
'	morphism of the participation of the contraction of
	REVISED 1673

Conventional construction has the disadvantage of producing rattles or impact sounds when the rail is not tightly fastened to the tie. On the other hand, the wood ties have some capacity to attenuate vibration, compared with concrete ties.

At bridges on the South Shore Line, the rails are clamped directly to the concrete deck with rubber pads between rail and deck and between rail and the hold-down clamps. Because of the configuration of the fastener and resonance of the bridge deck and supporting beams, the noise level on these bridges is up to 12 dB higher than on concrete tie and ballast surface track.

The design of earlier generation of track fasteners such as used on the South Shore bridges and on other systems, requires that the under-rail pad be preloaded by the bolts which clamp down the rail. Thus a portion of the resiliency of the pad is lost. More recent fasteners such as the "Landis Fasteners" used on BART permit the rail to float by clamping the rail to a steel plate forming the top layer of a rubber sandwich. The steel plate at the bottom of the sandwich is then attached to the bridge deck. This system on BART results in noise levels on bridges only #4 dB higher than tie and ballast surface track.

In MBTA subways wood tie and ballast construction is normal, however the ballast below the ties is only 6 to 8" deep, and is fouled with years accumulation of subway dirt. This reduces the

MASSACHUSFTIS BAY IRANSPORTATION AUTHORITY	ACOUSTICS	VIII
MANGAL OF GUIDEL (MES AND \$1880ARDS	•	37

effectiveness of ballast as a vibration isolator. At specific locations it may be necessary to support the rail on the ties with resilient fasteners to achieve a significant reduction in structure borne noise and vibration.

A new method of rail support in subways now being installed in certain sections of the Washington Metro is the "floating slab". It consists of a continuous reinforced concrete slah mounted on resilient pads free of the tunnel invert and walls. The rails are held in place by resilient fasteners such as those used on BART. Preliminary tests indicate a 10 to 15 dB reduction in vibration intensity in the lower middle frequency band. Metro will use this system where the subway passes under or close to noise or vibration sensitive structures.

c) Rail Lubrication

Wheel-squeal at shart curves can be reduced in intensity and duration or even eliminated by use of lubricating devices. Grease type lubricators apply to one or both faces of the wheel flanges as they approach a curve. The wheel carries the lubricant along the curve, depositing it along the edge of the running and restraining rails. A problem with these devices is that excessive amounts of lubricant can accumulate on the running surface of the rail, interfering with normal braking of trains.

①	MA B AME TO PERSON TO BE A TO SEE A
	manufactor in proper payer and Alfordo Rich
l	AEVISED 1973

A	C	0	U	S	T	1	CS	,
	•	$\overline{}$	-			•		

Another type of lubricator sprays water, or water with a small amount of lubricant in suspension, on the wheel and rail at the start of a curve. Trial of this method on the MBTA indicated that the water dried off at about the end of the curve so that interference with normal braking was minimal. This method cannot be used on outdoor locations during the winter months.

2. Noise Reduction by Isolation

The placement of barriers between the noise source and the receiver are a very effective means of reducing noise.

a) Wayside Barriers

Barriers along surface rail lines or solid-deck viaducts can reduce noise levels from 6 to 12 dBA. Maximum effectiveness can be gained by eliminating openings which would allow sound to bypass the barrier, and by placing sound absorbing material on the face of the barrier. The barrier should be close to the source, and extend to car floor level.


Barriers may be constructed of concrete, masonry, earth, or light weight wood or metal panels. Normally mass is required to stop transmission of sound but in the case of the light-weight panels, the sound absorbing material against a solid backing can trap some of the sound on its way through. As barriers will reflect sound it may be necessary to apply sound absorbing material to wall surfaces across the track from a barrier.

1	МАЗБАСНІВЕТТ ВАТ ТМАНЗМОМТА119М Б1ГНОМТЧ	ACOUSTICS	VIII
	REVISED 1973		39

(Sound absorption treatment is discussed in detail in part 3 of this section.)

A very effective barrier results from depressing track in an open cut with walls or slopes. Depending upon the location of the receivers, barrier walls at the top of slope may be required. Figure 5 shows noise reductions expected by various wayside barriers.

BANDA WILLIAMS \$41 FRANCHISTORY Application was and \$1 annually	ACOUSTICS	VIII
REVISED 1973		40

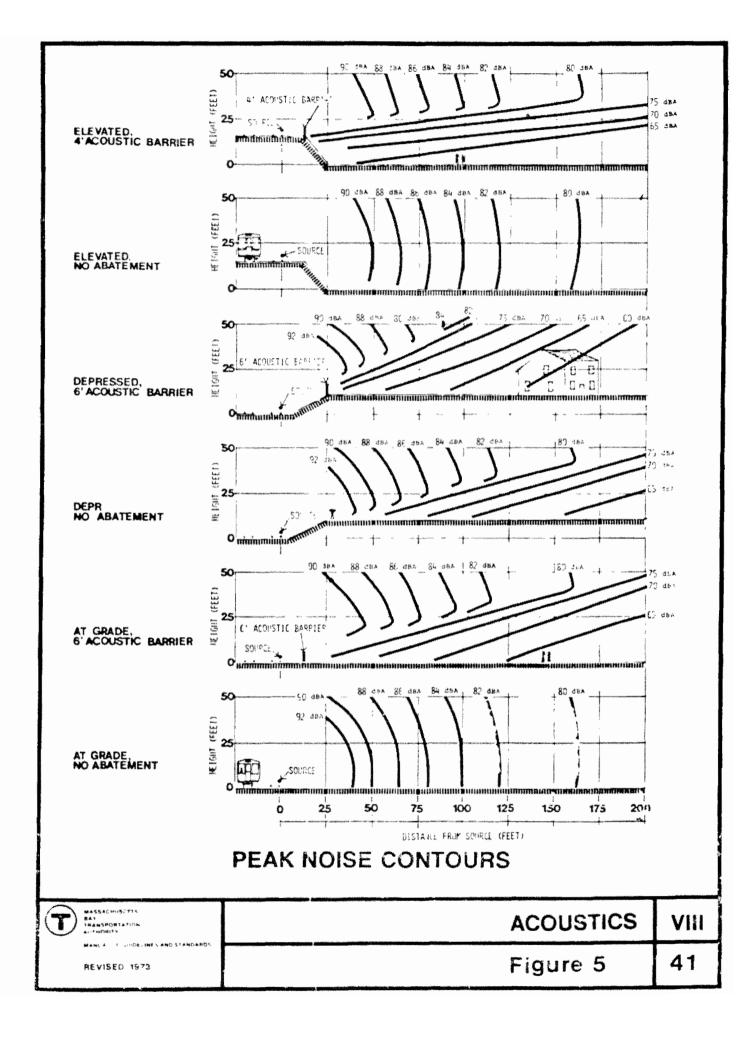

b) Barriers in Stations

barriers. At Park Street and Boylston Stations, where some of the most acute problems occur there are opportunities for this treatment. Stations with staggered platforms expose persons on one platform to noise from trains at speed on the track in the opposite direction. Because of the nature of an enclosed station where sound is reflected by walls and ceilings, etc., and thus reaches the receiver by many paths, barrier design in the subway requires more analysis than that required by a wayside installation. This is discussed in the following paragraphs taken from Bolt Beranek & Newman Inc. Report 2052 made for the MBTA in 1970;

The effectiveness of acoustic barriers depends on whether the listener is in the direct or reverberant sound field. The direct sound field is close to the sound source where the SPL owing to sound transmitted directly from the source to the listener is greater than the SPL owing to multiple reflections of sound. Conversely, the reverberant field describes the region farther from the source where reflected sound waves dominate. For the stations we studied, the reverberant field begins approximately 10 ft. from the train wheels.

SEARCHINGS FIRE SALE SALE SALE SALE SALE SALE SALE SAL	ACOUSTICS	VIII
AEVISED 1673		42

Barriers reduce direct-field noise levels by "shielding" the listener from the sound waves. The sound which the listener actually hears is diffracted or "bent" over the top of the barrier. However, sound will also be transmitted through barriers and may be significant if the barriers are too flimsy. For the reverberant field, the barrier is effective only in absorbing a portion of the sound power radiated by the source. For example, a barrier must absorb 90% of the sound power to reduce the reverberant field by 10 dB. Thus, to reduce reverberant field levels significantly, barriers, along with acoustical treatment along other paths from the source, must cover a substantial portion of the area through which sound can be radiated.

The BB&N study considered the possibility of using barriers in low platform stations such as Government Center, where gaps would be left to provide access to the trains. It was found however, that the intermittent sound level produced by train wheels passing the barrier gaps would be more annoying to the receiver than the situation with no barrier at all.

Barriers should be placed as close to the source as possible.

On curves there must be sufficient space allowed for overhang of the car ends outside of curves, and car center inside of curves, plus an allowance for car roll. Safety niches for personnel must also be provided approximately 20' on center if refuge space is not available immediately across the track from the barrier.

1	MASSACHISETTS BA- THANSPORTATION AUTHORITY	ACOUSTICS	VIII
	MAN-A. G GODELINES AND STANDARDS		43

To be effective in reducing reverberant field levels, absorptive barriers must be used on both sides of the vehicle: or if there is a wall next to one side, it should be treated with an absorptive material. It is essential to line the barrier with an absorptive material in order to dissipate acoustic energy. The thickness of the material should be equal to approximately 1/4 of the wavelength of sound to be attenuated.

The sound power radiated beyond the barrier will be approximately proportional to the ratio of the angle subtended by the gap between the barrier and car to the total angle (approximately 90°) from which the sound is radiated to one side of the car. Thus the noise reduction is given by

(1)

$$\Delta L = 10 \log \left[\frac{\pi/2}{\tan^{-1} (a/h)} \right]$$

where h is the barrier height. From Eq. (1) we find that a 1Q-dB reverberant-field reduction requires that $h \ge 7a$.

Barriers attenuate radiation to the <u>direct field</u> principally by diffraction rather than absorption. The excess attenutation A_e along a line perpendicular to the top edge of the barrier is given approximately by

(2)

$$A_e \stackrel{\sim}{=} 10 \log \frac{fh^2}{ca} + 10$$

destallmenting destallmenting destallmenting plitwidesty	ACOUSTICS	VIII
REGISEO 1973		AA

where h is the barrier height, f the frequency, and c the speed of sound in air. Equation 2 is valid for values of A_e up to approximately 20 dB. Values in excess of the 20 dB predicted by Eq. 2 should be reduced to 20 dB. Furthermore, Eq. 2 is based on the assumption that the sound source is at the same height as the base of the barrier. This is not entirely valid since sound is probably radiated from the entire wheel surface. Hence, Eq. 2 is an upper bound to the direct-field noise reduction provided by a barrier.

The direct-field and reverberant-field reductions in sound pressure level are shown in the Figure 6 for three stations of interest. We find that the maximum values of direct-field attenuation vary between approximately 15 and 20 dB. In the reverberant field (farther from the train) the noise reduction is less, ranging from an estimated 4.2 to 10 dB. The comment "with full wall lining" applies to those sections of the track that are bounded by a full height wall. The desired sound reduction requires that these walls be lined with an absorptive treatment like the barrier treatment shown in Figure 7.

Barriers should generally be constructed as illustrated in Figure 7. The essential features are a rigid wall lined with a sound-absorbing material which faces the noise-producing wheels. The construction details are unimportant, provided they meet the following criteria:

T	MASSACHISETTS BAY TRANSPORTATION ALITHERSTY	ACOUSTICS	VIII
	REVISED 1973		45

REVISED 1973


BARRIER EFFECTIVENESS AT THREE MBTA STATIONS.

	Track Radius	Clears	rier ince at Center Outer	maximu	irect Fie m value o for 3-ft	f Λ _e at	Reverberant Field	
Location	(ft)	A _{ib}	Aob	800 Hz	2850 Hz	5700 Hz		Comments
	45	2.1	2.0	15	20	20	4.2	
Park Street	82	1.4	\geq	16	20	20	8.0	with full wall lining
	100	1.2	1.2	17	20	20	6.1	
Government	100	1.2	\times	17	20	20	9.0	with full wall lining
Center	180	\times	0.9	18	20	20	10.0	with full wall lining
Boylston Street	85	1.4	1.4	16	20	20	5.6	
	89	1.3	1.3	16	20	20	5.6	

ACOUSTICS
Figure 6

46

^{*}A full height wall between the curved portions of the tracks extending into the station approximately 50 - 100 ft beyond the curves would be very effective in reducing noise levels owing to outbound trains. The lower 3 ft of the wall should be lined with absorptive material similar to that used in barrier construction, not only to reduce station noise but also to reduce sound reflected back toward the cars.

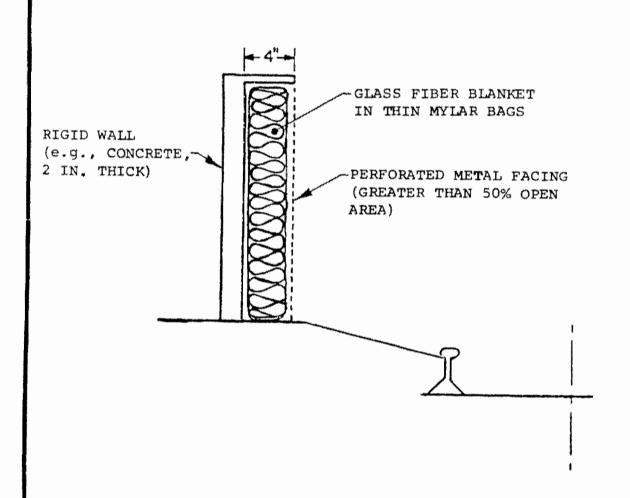

SCHEMATIC DIAGRAM OF BARRIER CONSTRUCTION

MASSACHUSETTS BAY TRANSPORTATION AUTHORITY MANUAL OF GUIDELINES AND STANDARDS	ACOUSTICS	VIII
REVISEO 1973	Figure 7	47

- 1! The wall should be sufficiently massive to attenuate the sound passing through it by a greater amount than the attenuation of sound passing over the top. For example, a 2 4 in. concrete wall would be adequate.
- The absorptive coefficient of the material should be greater than 0.8 over the frequency range of interest (800 5000 Hz)

 This can be accomplished with a 4-in. thick Fiberglas blanket.
- The porous material must not be allowed to become clogged with dirt. Enclosing the blanket with very thin Mylar bags is probably the best current procedure.
- 4) The absorptive layer should be protected from damage. This can be done by covering it with perforated sheet-metal with an open area of 50% or more.

Noise Reduction by Absorption

a) Station Treatment

As seen in the discussion of barriers, it is necessary to utilize sound absorbing materials on barriers, and in subways on walls associated with barriers. Additional improvement in the noise level at stations can be achieved by treating ceilings and walls with sound absorbing material.

T	dis vija i ir rad FFI; ISA: SIRAMANDI da dettin Alst-MINITE	ACOUSTICS	VIII
	ACVISED 1972		48

In typical interior architectural spaces where the length, width, and height of the space do not vary from each other by a factor of more than two or three to one, the sound level drops off as one moves away from the source until the "reverberant field" of the room is reached. From this point, increasing the distance from the sources does not result in a further decrease in the sound level. The addition of sound-absorbing treatment in such a space will result in a reduction of the sound level in the reverberant field of the room, although it will have no affect on the sound level in the near field of the source. If the original room consists of hard, sound-reflecting surfaces (e.g., concrete), the addition of substantial amounts of sound-absorbing treatment can result in reductions in the reverberant sound level of as much as 15 decibels.

Acoustically, subway stations represent a type of space much different from the normal interior architectural space described in the paragraph above. This station may be considered as a "two-dimensional room". The width of the station is from four to ten times the height, and the length of the station is approximately 20 times the height. In this type of space, the sound level drops as one moves away from the source of sound much as it does in the near field of the sound source in a normal "diffuse" room. Instead of leveling off, as it does when one

(T)	MAŠŠACHISETTS BAN TRANSPORTATION authomity	ACOUSTICS	VIII
	MANUAL O SCIENCE MES AND STANDARDS REVISED 1973		49

reaches the reverberant field in a normal diffuse room, the level continues to drop with distance so that the farther one moves from the sound source, the lower the sound level will be. In its present condition, with all surfaces hard and sound-reflecting, the following reductions in sound level may be expected as one moves away from a sound source:

Table I SOUND LEVEL REDUCTION WITH DISTANCE FROM THE SOURCE

Change in Distance	Reduction in Sound
From Source	Level (dB)
3 ft - 6 ft	5
6 ft - 12 ft	4
12 ft - 24 ft	3
Beyond 24 ft	<pre>3 dB per doubling of distance</pre>

Reductions in sound level shown in the table above may be added together to find the total drop-off. For example, if one moves from 3 ft to 24 ft from the sound source, the total sound reduction will be the sum of 5 + 4 + 3, or 12 dB. The table is somewhat simplified and ignores the wall reflections which would influence the results, particularly for locations close to wall surfaces. It is not felt, however, that these differences would have any significant affect on final conclusions relating to sound-absorbing treatment within the station.

1	bungan magayan da r rangang harma di Propert ganana wa langan pana ang 27 angsa s	ACOUSTICS	VIII
	NEVISED 1977		50

The sound field within the station can be influenced by the addition of a highly efficient absorbing treatment to the entire ceiling of the station. For example, suspended perforated metal pans with glass fiber batts above or a porous, washable ceramic acoustic tile would be desirable. This type of treatment would result in greater attenuation of sound as one moves away from the sound source. The following conditions might be expected if the entire ceiling in the station consisted of a very efficient sound-absorbing material.

Table II

REDUCTION OF SOUND WITH DISTANCE IN A STATION WITH A SOUND-ABSORBING CEILING

Change in Distance From Source	Reduction in Sound Level (dB)
3 ft - 6 ft	5
6 ft - 12 ft	5
Beyond 12 ft	5 dB per doubling of distance

Using the information presented in Tables I and II, the noise reduction due to addition of a sound-absorbing ceiling may be calculated as a function of distance from the sound source.

The following table presents this information.

MASSACHUSETTS ANY TRANSPORTATION AUTHORITY	ACOUSTICS	VIII
MANUAL PY GUIDELINES AND STANDARDS		51

Table III

NOISE REDUCTION DUE TO CEILING TREATMENT IN PARK STREET STATION

Distance from Source	Noise Reduction (dB)
6 ft	0
12 ft	1
24 ft	3
50 ft	5
100 ft	7
200 ft	9
400 ft	11

Preliminary study of Park St. Station by BB&N indicated that significant reductions in noise level of 7 to 11 dB were possible over much of the station. In certain frequency ranges where wheel-squeal peaks occur, reductions as high as 15 dB are possible. As stations such as Government Center, where curve tracks run through the station, little reduction immediately adjacent to the track is possible, but at locations further from the track would get 5 to 10 dB reductions.

The result of extensive sound absorbing treatment in subway stations would be greater than a simple reduction in overall noise levels. The effect of sound-absorbing treatment in any noisy environment is usually to make the space "feel" quieter than it actually is by minimizing the persistence (reverberation) of sound in the space and making the sound seem to come from its

Withthewayny date date date date date date date date	ACOUSTICS	VIII
REVISES 1973		52

actual source and not from everywhere. Ideally, efficient soundabsorbing treatment should be applied to the enclosing surfaces of
a given station to the maximum possible extent. For practical
reasons, considering durability, ease of maintenance, etc., the
areas available for sound-absorbing treatment are limited to the
ceiling surfaces and, in some cases, the lower wall areas adjacent
to the tracks (i.e., side pit areas). The reduction in reverberant
noise levels in a typical station may be approximated by the
relationship:

(3) NR = 10 log 10
$$\frac{s_2}{s_1}$$

where: NR is the noise reduction in decibels

S₂ is the calculated total absorption in sabins after treatment (sq. ft. of absorbing area x its sound absorbing coefficient)

 \mathbf{S}_{1} is the calculated absorption in sabins without treatment

The following factors should be observed in the selection and use of sound-absorbing materials to reduce noise levels:

 Sound-absorbing materials should be located insofar as possible to avoid large areas of opposing hard, soundreflective surfaces.

MASSACHUSETTS BAY TRANSEDRIATION AUTHORITY	ACOUSTICS	VIII
MANUAL OF GEORGINES AND STANDARDS		53

- Sound-absorbing efficiency of materials generally increases with increasing thickness. Materials spaced away or suspended from a hard backup surface (i.e., Mounting #7 as defined by the Acoustical Materials Association) will provide increased low frequency absorption over the same material applied directly to a hard backup surface (Mounting #1)
- Materials placed in strips, or patches (2-4 ft wide) with hard areas between often provide as much absorption 68 continuous areas of the materials due to diffraction and edge effects.
- Materials with relatively large fissures or perforations on the surface are least effected by future painting from the standpoint of sound-absorbing efficiency.
- Treatments using glass fibre baths should have the bath contained in Mylar bags to prevent clogging of pores by dirt.
- Care should be taken to avoid build-up of dirt on top of suspended ceiling panels. Such panels should also be designed to prevent their being blown out by air currents or over-pressures caused by passing trains.
- Materials should not create a fire hazard.

California Property Co.	ACOUSTICS	VIII
MEVISED 1873		54

- Absorbent materials not enclosed by bags, such as sprayon types, should be washable.
- Materials should be selected which are colored, or can be painted to minimize discoloration by dirt near the track bed, and minimize loss of light when used at or near the ceiling.
- Easily damaged materials should not be used on surfaces where they may be reached by the public to eliminate vandalism.

Recommended specifications to cover sound absorption for sound absorbing materials suitable for ceiling and wall applications are as follows:

The sound absorption performance for the materials shall be verified by a test report from an independent acoustical laboratory. The test shall be conducted in accordance with Recommended Method of Test ASTM C-423-60T.

 For suspended sound-absorbing materials the sound absorption coefficients shall meet or exceed the following values:

Frequency, cps	125	250	500	1000	2000	4000
Absorption						
coefficient	0.2	0.4	0.7	0.8	0.8	0.8

1	мабасынгатта даг Таамбардататиры Айтыбардататиры	ACOUSTICS	VIII
	MANDAL OF GUIDES INES AND STANDARDS		55

• For surface-applied materials the sound absorption coefficients shall meet or exceed the following values:

Frequency, cps	125	250	50Ü	1000	2000	4000
Absorption						
coefficient	J.2	0.4	10 . 7	0.8	0.8	0.8

b) Tunnel Treatment

The tunnel areas outside of stations may be treated with sound absorbing materials. In this case appearance of the material and susceptibility to vandalism is not a problem. However certain materials, such as glass fibre bats in plastic bags, would have to be protected by a durable mesh or screen to prevent accidental damage by workers in the tunnels.

The material is normally applied to the lower 5' or 6' of the tunnel walls. This treatment can result in noise reduction in the vicinity of 5 dB.

4. Damping of Resonant Surfaces

Secondary radiation from structural members of viaducts, or wall or ceiling surfaces in stations can add to the noise level created by passing trains. Some of these problems can be avoided by initial choice of material. For instance, a precast concrete bridge structure will be less resonant than a similar structure in steel.

CONTRACTOR OF THE PROPERTY OF	ACOUSTICS	VIII
		56

Application of a viscoelastic material to surfaces of beams or panels works by reducing the height of resonance peaks. Thus this treatment can reduce identifiable tones making the sound more acceptable. The material is effective on large uninterrupted radiating surfaces, such as thin plate girders, but would be useless on small members of a steel truss.

The materials should be very stiff, nearly that of the surface they are being applied to. They may be applied as a single layer, or as a sandwich, with the viscoelastic material being covered by a metal constraining sheet.

5. Other Methods of Noise and Vibration Abatement

It may be necessary to treat the building or structure on the receiving-end of rail transit generated noise, rather than, or in addition to, treatment of the transit facility. In the case of structure or ground borne noise or vibration, a building or space within a building may be floated on resilient pads to isolate it from such disturbances. This could apply particularly to air rights buildings.

Experience in London has shown that elastomeric pads can be considerably more effective than the traditional lead-asbestos pads used in the U.S. They were used in new structures immediately over transit tracks in open cut, and in buildings near deep "tube" lines lying in London Blue Clay which was a good transmitter of vibration at certain frequencies.

T	MARSACHISETTS BAP TRANSPORTATION AUTHORITY	ACOUSTICS	VIII
	MANUAL OF GUIDELINES AND STANDARDS		57

Airborne noise may be reduced at the receiver by use of double glazing. This may require installation of air conditioning which has the additional effect of raising the ambient noise level and making the intermittent train sounds less noticeable.

In extreme cases, it may be more cost effective to acquire properties suffering from an acute transit noise problem, rather than the noise generator or receiver.

$oldsymbol{f heta}$	Marking model for a Bar I name ping a region and reduction
	MEMORY IN CONTRACTOR & STREET, POL
	REVISED 1973

1. System Requirements

Unless determined otherwise by the Director, every station shall have a paging and announcing system for the dissemination of schedule changes, arrival and departure calls, and emergency announcements. The system need not attempt to overpower the noise of trains, but must provide intelligible information for auditors at platform level, when trains are not in motion. In the highly reverberant environment of station, this will mean a relatively large number of low power speakers fairly closely spaced.

Microphone positions are required in all collection and token booths, and in all starters rooms. Each position will have a monitor loudspeaker. Amplifier equipment should be located in a central equipment room, preferably an electric or other room which will not normally be accessible to unqualified personnel. Equipment confined to a small space must be adequately ventilated. In every station there should be a conduit running to the tunnel electric duct bank to permit future confiction to a more general system.

MASSACHUSETTS ANY TRANSPORTATION AUTHORITY	ACOUSTICS	VIII
MANUAL PA GUIDELINES AND STANDARDS		
REVISED 1973		59

2. Consultant's Report

one matter that has been discussed, is the possibility of installing loudspeaker systems in the stations to transmit announcements and, if desired, playing backgroud music. Such a system can only be satisfactory in a station that has been treated with sound-absorbing material to make it reasonably "non-reverberant." Our preliminary studies indicate that it is unrealistic to attempt to design a loudspeaker installation that would override the noise of subway trains entering the station, but there is no reason why the system cannot override the average rush hour condition when trains are not actually moving.

The following performance objective should be considered in the design of a system to be used in the subway stations. The loudspeaker system should provide:

- a) Satisfactory levels of amplified sound, with respect to ambient noise levels expected during both quiet and peak activity periods. The system would not be expected to override excessive levels during an actual train passage.
- b) Frequency band width of reproduced signals with minimum reverberation and echo effects caused by sound reflection from the station boundaries.
- c) Simplicity of system operation and control.

Our preliminary studies indicate that the only type of sound system that makes sense in a subway station is the type generally used in the better airport terminals; a distribution system of loudspeakers located in the ceiling. Each loudspeaker covers only a limited floor area and sends sound down on top of the "audience." It does not spray energy all over the walls and other distant surfaces. The loudspeakers would be spaced to give uniform coverage and in most cases, would have an on center spacing approximately equal to the ceiling height. Only by a carefully controlled, continuous distribution of sound can we hope to achieve fairly uniform levels throughout the station, at the same time giving high quality reproduction of announcements and music.

T	Designation Address Date Characteristics Addressers
	mental in many sensitivity streets this
	MENITED IOTH

In general, the sound system design must be considered as a part of the overall design of the acoustical environment; not as a separate element to be designed independently. The poor results observed in the numerous transportation terminals around the country attest to the folly of this course. We urge that sound system design be included as part of the total architectural modification program of existing stations as well as in the design of new ones for the MBTA.

Bolt, Beranek and Newman, Inc. Draft Report 30 June 1965

$oldsymbol{f f}$	MASSACHUSETTS BAY TRANSPORTATION AUTHORITY	ACOUSTICS	VIII	
	REVISED 1973		61	

3. System Specification

The Sound System should be consistent with SPECIFICATIONS FOR LOCALLY AND REMOTELY CONTROLLED PUBLIC ADDRESS SYSTEMS FOR PASSENGER STATIONS METROPOLITAN BOSTON AREA - MASSACHUSETTS MBTA CONTRACT NO. SM-500 (R) OCTOBER, 1972

Available from MBTA Power and Signal Section

Restrict At morph FFE As a second as a sec	ACOUSTICS	VIII	
REVISED 1973		62	7

BIBLIOGRAPHY - Noise Studies

- 1. ACOUSTICAL TREATMENT OF STATIONS TO ALLEVIATE WHEEL-SQUEAL NOISE, Bender, E. K., Hirtle, P. W., Bolt, Beranek and Newman, October 7, 1970 37 pages including maps and charts.
- 2. BARTD PROTOTYPE CAR 107 NOISE TESTS WITH STANDARD, DAMPED AND RESILIENT WHEELS: (Ballast and Tie Tangent Track and Short Radius Subway Curves) Wilson, George Paul, June 21, 1972, 42 pages of text, 2 appendices.
- 3. GUIDELINES AND PRINCIPLES FOR DESIGN OF RAPID TRANSIT FACILITIES, Institute for Rapid Transit, Draft June 1972, 84 pages of text including 14 sections, 6 appendices.
- 4. MBTA RAPID TRANSIT SYSTEM (Red Line) WAYSIDE AND IN-CAR NOISE AND VIBRATION LEVEL MEASUREMENTS, Rickley, Edward J., Quinn, Robert W., Final Report for Department of Transportation, August 1972. 221 pages of text consisting of 9 sections, 12 appendices and illustrations.
- 5. THE MBTA SOUTH SHORE PROJECT PASSENGER NOISE AND VIBRATION CRITERIA, Bolt, Beranek and Newman, 25 August 1966, 27 pages of text, 2 main sections, 11 figures.
- 6. THE MBTA SOUTH SHORE PROJECT (Vol. II) RECOMMENDATIONS FOR CONTROL OF NOISE AND VIBRATION IN RAPID TRANSIT CARS, Bolt, Beranek, and Newman, 29 September 1966, 36 pages consisting of 7 sections, 2 appendices.
- 7. NOISE ABATEMENT, Wilson, George Paul Prepared for presentation at the rail transit conference of the ATA, April 1973. Reprint consisting of 13 pages.
- 8. NOISE AND VIBRATION CHARACTERISTICS OF HIGH SPEED TRANSIT VEHICLES, Wilson, Ihrig & Associates, Inc., June 1971 Technical Report, 91 pages including a bibliography.
- 9. NOISE AND VIBRATION CONTROL PROGRAM, Keyes, George W., Washington Metropolitan Area Transit Authority, ATA Rail Transit Conference Ways and Structures Division Session, April 26, 1973, 17 pages including illustrations.
- 10. NOISE AND VIBRATIONS FROM SAN FRANCISCO MUNICIPAL PCC STREET-CARS, Final Report, June 1971, Wilson, George Paul, 61 pages with charts and diagrams.


①	MASSACHUSETTS BAY THANSHINTA TION AUTHORITY	ACOUSTICS	VIII
	REVISED 1973		63

- 11. NOISE AND VIBRATION STUDIES Subway Construction Branch Toronto Transit Commission, all dated May 1967, all signed by Robert J. Murray -- Consists of:
- A RD 105 Investigation of Noise and Vibration in Buildings adjacent to the Bloor-Danford Subway, 17 pages with charts.
- B RD 106 Track Fastenings, 16 pages with charts and illustrations.
- C RD 107 Noise and Vibration Theories, 32 pages with illustrations and charts.
- D RD 108 Rapid Transit Systems, 24 pages, charts and illustrations.
- E RD 109 Noise and Vibration Control, 13 pages of text only.
- F RD 110 Summary consisting of 14 pages and Bibliography.
- 12. NOISE LEVEL MEASUREMENTS ON THE UMTA MARK I DIAGNOSTIC CAR (R42 MODEL) Rickley, E. J., Quinn, R., Byrnon, G., Transportation Systems Center, Cambridge, Mass., October 1971, Technical Report, 9 pages of text, Summary, 11 appendices, illustrations and tables.
- 13. SAN FRANCISCO BAY AREA TRANSIT DISTRICT-DEMONSTRATION PROJECT Technical Report Number 8 Acoustic Studies, June 1968, 157 pages of text, 10 sections, illustrations, Appendix and Reference Documents.
- 14. STUDY OF THE MAGNITUDE OF TRANSPORTATION NOISE GENERATION AND POTENTIAL ABATEMENT, Serendipity, Inc., Prepared for the Department of Transportation, November 1970 Seven volume study of the development of a long range program for the assessment of transportation noise abatement problems and their potential solutions.
- 15. TRANSPORTATION NOISE BULLETIN Abstracts of Reports and Resumes of Research Projects Dealing with Transportation Noise, Highway Research Board, Vol. 1, #1, October 1971, Vol. L, #2, April 1972.
- 16. UNTERSUCHUNG VON SCHOTTERLOSEN OBERBAUFORMEN FUR U-BAHNEN, Eisenmann, Prof. Dn-Ing Joseph, Technische Universität Munichen. February 1971, 6 sections, consisting of texts, charts, illustrations.

Bar Salar mende 172 gar Salar	ACOUSTICS	VIII
REVISED 1673		64



MASSACHUSETTS
BAY
TRANSPORTATION
AUTHORITY
GUIDELINES AND STANDARDS
PART IX
SERVICE FACILITIES
REVISED 1977



MANUAL OF GUIDELINES AND STANDARDS

PART I GUIDELINES AND PRINCIPLES

PART II STATION RECONNAISSANCE (Discontinued)

PART III STATION MODERNIZATION PROGRAM (Discontinued)

PART IV COMPONENTS

PART V GRAPHICS

PART VI LIGHTING

PART VII MATERIALS

PART VIII ACOUSTICS

PART IX SERVICE FACILITIES

PART X SITE PLANNING AND NEW STATIONS

PART XI VENTILATION

GENERAL INTRODUCTION

The Massachusetts Bay Transportation Authority has found it both necessary and possible to concentrate attention on the complex needs of people. Programs to improve service must now include a new emphasis on the quality of the transportation experience. In effect, transportation engineering has been joined by human engineering and environmental design.

This manual provides a framework for the continued coordination of all those elements in the system that affect human comfort.

Many of the criteria involved are common to all environments, such as the control of light, noise, humidity, temperature, wind, and odors, or the need for orderliness, through clear and easy circulation and clean appearance. Other criteria that are more specific to the transportation environment are such needs as safety, traffic handling capability, spatial variety, consistently available information, and orientation.

The most important single criterion that has guided the preparation of this manual is the need for orientation. The rider must not only be physically comfortable, he must also know in the fullest sense where he is and where he is going.

Since to the layman a public transportation system is to a large extent an invisible skeleton of the city and metropolitan region, the comprehension of that structure generates an awareness and appreciation of the city itself, and an appreciation of travel through it.


There are many aspects to achieving this orientation. Circulation at all points must be direct and open. Spaces should relate visually to their surrounding environment, either through direct openings to adjacent spaces and structures, or in the case of platforms, by graphic reflection through photographic murals.

Above all, the need for orientation places great emphasis on maps and a consistent system of identification and directional signing. Graphics then emerges as a major factor in the design of each environment, a factor that must be given high priority in the early design phases of each project.

It is hoped that all participants in all programs will familiarize themselves with the entire manual, so that the implications of each decision can be understood in a system-wide context.

The standards and guidelines presented here are not inflexible rules. They are a framework for meaningful development and variety, and offer no restriction to the capacity of each participant to evolve better solutions to old or new problems.

As new solutions are developed and approved, revised and additional pages for the manual will be issued to all participants.



GENERAL INTRODUCTION



Part IX of the Manual describes the functional requirements for the non-public work areas of the station, and the design requirements and treatment of the public toilets. It further sets down existing and proposed Authority policy with regard to station drainage, water supply and fire protection, heating, ventilation, communication systems, and electrical systems.

Refer to Part VI: Lighting for lighting standards, to Part VIII: Acoustics for the sound system, and to Part XI-C for heating and ventilating requirements.

MASSACHUSETTS BAY TRANSPORTATION AUTHORITY	SERVICE FACILITIES	IX
MANUAL OF GUIDELINES AND STANDARDS	INTRODUCTION	2

PART IX SERVICE FACILITIES

- A. Public & Staff Toilets
- B. Safe Rooms
- C. Starters/Inspectors Rooms
- D. Porters Room
- E. Electrical Room
- F. Lamp Storage Room
- G. Signal Equipment Room
- H. Communication Equipment Room
- I. Third-Rail Disconnect
- J. Sewage Ejectors & Pump Rooms
- K. Train & Yard Crew Lobbies
- L. Miscellaneous Rooms & Equipment
- M. Mechanical/Electrical Systems
 - 1. Water Supply
 - 2. Dry Standpipe System
 - 3. Train Approach Indicator
 - 4. Miscellaneous Electrical
 - 5. Communication & Alarm Systems
 - 6. T.V. Surveillance System



SERVICE FACILITIES



1. General

Separate toilet facilities will be provided for the public and the staff. The public facilities must be accessible and useable by the physically handicapped.

Public toilets are located in the primary station lobby, preferably in the paid area, with doors within direct view of the collector's booth.

Staff toilets are located in each lobby, and at major bus terminals (where buses layover) adjacent to the busway. They are also provided at platform or track level at rail terminals, usually in conjunction with road and yard crew lobbies, and at traction power substations.

Mens and womens facilities are provided in all cases, except in traction power substations where a single room is sufficient

2. Number of Fixtures

Type of Facility	Water- closet	Urinal	Lavatory	Handicapped Requirement
Public Men's Public Women's	1 2	1	1	yes yes
Staff Men's-Sta. Lobby Staff Women's-Sta. Lobby	1		1	no no
Staff Men's-Bus Terminals Staff Women's-Bus Termina	-	1	1	no no

Staff toilets at rail terminals will be slightly larger than at bus terminals, depending on number of personnel assigned to the location.

MASSACHUSETYS BAY TRANSPORTATION AUTHORITY	SERVICE FACILITIES	IX
MANUAL OF QUIDELINES AND STANDARDS 界EVISED 1975	PUBLIC & STAFF TOILETS	A1

3. Finishes and Equipment

Finishes and equipment shall generally be the most rugged, impervious, easily cleaned and chemically resistant obtainable, consistent with reasonable standards of economy and appearance. Where new floor surfacing is installed, a waterproof membrane shall be included.


Doors shall have either a louver, or be undercut. They shall have automatic closers, pushplates and kickplates, and a deadlock only.

Toilet partitions, with stainless steel doors, and urinal screens should be provided, constructed of glazed masonry, glazed tile, or stainless steel, well supported against lateral force. Porcelain enamel is insufficiently resistent to marking for use in toilet partitions.

Each toilet room shall have a plate glass, stainless steel-framed mirror, sized to fit the available opening, and preferably located away from the lavatory. Each women's toilet shall have a stainless steel shelf, mounted below the mirror at 3'-4" height above the floor.

Each toilet room shall have an electric hand dryer, recessed wall mounted type, (World Dryer Co., Model RA, or approved equal), with the nozzle fixed downward.

Soap is not provided. Toilet paper is supplied by the Authority, who will install the toilet paper holder.



4. Plumbing

Plumbing for new and modernized toilets shall be in accordance with the Boston Plumbing Code.

Each new toilet room, and, if possible, each modernized toilet room, shall have a floor drain. Supply valves shall be concealed from public access. Valves and clean-outs must be easily reached either from service areas behind the wall, or through vandal proof access panels from the toilet rooms themselves.

Acceptable fixtures shall be equal to the following. As no hot water will be provided, the lavatory shall have the hot water faucet opening blanked off. Substantial wall carriers should be provided for all fixtures.

water closet

American Standard Instanto F-2515

urinal

American Standard Washbrook F-6505

lavatory

American Standard Prismere F-5515-1

- 5. Ventilation See Part. XI-C
- 6. Lighting

Toilets will typically be lighted by a wall mounted fixture extending from wall to wall over the plumbing fixtures. Other lighting should be provided as required, with the intent that every part of the room be highly illuminated. Emergency lighting is required.

7. Heating - See Part. XI-C

1. General:

Every fare collection layout requires the use of two safes, one for cash deposits by the collectors, and one for the temporary storage of fare boxes. The former safe is always located in the primary collection booth; presently the latter safe is sometimes left freestanding close to the fare collection equipment and sometimes put in a safe room. The Authority intends that all new and modernized stations have safe rooms.

2. Collection Procedure:

- (1) A special crew visits each station early in the morning, and leaves with the first collector of packet of change, and if used, sufficient tokens for the day.
- (2) There are several shifts of collectors. As each leaves his post he turns over to his relief only the amount of change which he was originally given, sealing the excess cash in a bag and depositing it, with a report form, in the collection booth safe. The last collector bags and seals all the cash, and deposits them in the safe.
- (3) At closing time, and as may be necessary during the day, the starter removes loaded fare boxes from the turnstiles and locks them in the safe room safe. He finds the safe unlocked, and having shut the boxes within the safe, cannot again unlock it. Therefore another safe must be used for each successive change of fare boxes.
- (4) The special crew in the morning brings empty fare boxes, as well as new change. It collects the loaded fare boxes from the safe room safe, and the cash from the collection booth safe and returns them to the central accounting office.

Size of Safe Room:

A desirable minimum safe room size is 75 square feet, proportioned to permit 90° swing of the safe door; however, existing conditions may dictate less. In any case the Authority will establish the number and sizes of safes to be accommodated. The Authority uses a number of different sizes of safes. The number of safes required is equal to the number of times the fareboxes are changed during the day. Safe room safes are primarily for storage of tokens; however in some cases they also are used for cash and will require an ADT connection. The safe room should also accommodate at least one change of fare boxes, which can be placed atop the safe. Fare boxes are 9" x 9" x 18" high.

Bellichermanitie Bei Teiensteiler under	SERVICE FACILITIES	IX
PEVISIO 1878	SAFE ROOMS	B1

4. Location of Safe Room:

Safe rooms should be located as close to the fare collection equipment as possible, and should not open into collection booths. They should open onto the paid area. Doors should have a lock, and must be sized to permit entrance of the safe. The Authority will provide cylinders for the safe room door locks. Some means of ventilation should be provided, by undercutting the door, or, if a louvre is used, it should be barred on the inside. Both normal and emergency lighting should be provided. See Part XI-C for heating and ventilating requirements.

MASSACHUSETTE BAT TRAMSPORTATION AUTHORITY	SERVICE FACILITIES	IX
MANUAL OF GUIDELINES AND STANGARDS	SAFE ROOMS	B2

1. Starter/Inspectors Room at Way Stations:

The starter or inspector is normally assigned to supervise more than one station. He uses the starters room only to fill out reports and make telephone calls. Ideally each station should have a starters room at platform level, centrally located, on each platform. Failing this, surface car stations can make do with a room on one platform and provision for cross-over between platforms. If there is a crossover at the station, the starters room should be located at the end of the platform adjacent to the crossover.

The room need only be large enough to accomodate one man, at a stand up counter, or approximately 25 sq.ft. Equipment includes the stand up counter, a microphone jack and monitor loudspeaker for the paging and announcing system, and a telephone connected to the central MBTA switchboard. The door should have a lock, and either an undercut or a louver. In small starters rooms, used for no other purpose, the door should have a glass view panel. Both normal and emergency lighting should be provided. In special cases, other station control equipment, such as alarms and switches, can be located in the starters room. See Part XI-C for heating and ventilating requirements.

2. Inspectors Room at Terminal Stations:

This facility may be occupied full time, serving as an office for direction of train and yard personnel assigned to the terminal. It should have an area of 100-150 sq.ft. Equipment is similar to that of the starters/inspectors room at way stations. Windows overlooking the platform or track area should be provided. The room is normally located adjacent to the train crew lobby at the end of the station platform closest to the train storage or turnback tracks. See Part XI-C for heating and ventilating requirements.




3. Bus Starters Room:

This facility may be occupied full time, or during rush hours, and serves as a control center for bus operations at stations where bus routes terminate. It should have an area of 50-100 sq.ft. Equipment is similar to that of the starters room at way stations. Windows overlooking the busway and bus passenger waiting areas should be provided. The starters room should be located near the center of the busway, and if possible, adjacent to the train station lobby or entry so that the starter can provide assistance to waiting bus patrons, as well as overseeing the operation of the buses. The bus drivers toilet rooms may be located adjacent to the bus starters room, but should not be entered via the starters room. See Part XI-C for heating and ventilating requirements.

		SERVICE FACILITIES	ΙX
And in case of	REVISED 1976	STARTERS /INSPECTORS ROOMS	C2


- A porters room should be provided on each train platform and fare collection lobby. In stations with extensive covered busways or lengthy enclosed passageways or concourses, additional porters rooms may be required.
- 2. Porters rooms are 75 to 100 square feet in area. They should have a service sink, hot and cold water, a floor drain, shelving for janitors supplies, and racks for hanging mops and brooms. Space for storage of a floor cleaning machine (approx. 2'x3') and for storage of filled trash bags is required. Wall and floor finishes should be resistant to water and strong cleansers. The door should have a lock and either an undercut or a louver. Only normal lighting need be provided. See Part XI-C for heating and ventilating requirements.



- Electrical rooms should be provided where required to contain station electrical equipment, such as AC and DC panels, switchgear, and entrance equipment. These rooms should be sized and located by the station electrical designer and architect. A lamp storage room, see Part IX F1, may be adjacent to an electrical room.
- 2. Electrical rooms vary considerable in size. The smallest is a panel room of 50 sq. ft. and the largest is a station unit substation with a maximum area of 2000 sq. ft. The larger facilities are provided at stations having a large lighting or power load such as a major parking facility, or many escalators, ventilation fans etc.
- 3. Extreme care must be taken that seepage of water does not occur into electrical rooms. Doors should have locks and be sized to accommodate the passage of equipment. All doors should have louvers. All electrical rooms must have both normal and emergency lighting. See Part XI-C for heating and ventilating requirements.

MASSACHUSETTS SAY TRANSPORTATION AUTHORITY	SERVICE FACILITIES	IX
MANUAL OF GUNDELIMES AND STANDARDS	ELECTRICAL ROOM	E1

- A lamp storage room should be provided in each station, preferably adjacent to the main electrical room in the station. It should not be entered via the electrical room.
- 2. This room should have an area of approximately 100 sq. ft. It should have shelving and racks to accomidate the various sizes and types of lamps used in the station, as well as a step ladder. It must have both normal and emergency lighting. See Part XI-C for heating and ventilating requirements.



SERVICE FACILITIES



- 1. A signal equipment room should be provided at each station. It is located at track or platform level near the end of the platform. Usually it is outside of the platform area, though it may be located within the platform area if necessary. If there is an interlocking (crossover or junction) near the station the signal equipment room should be located at the end of the station closest to the interlocking. Conduit and ducts will lead the signal and related cables from the room to the right of way.
- 2. A signal equipment room at a way station is typically 300 sq. ft. (min. of 10' x 30'), and at an interlocking 500 sq.ft. (min. of 10' x 50'). The precise size is determined by the signal designer. At subway stations it is constructed in place, but at outdoor stations it may be provided in the form of one or more prefabricated, prewired bungalows. A communication equipment room may be located adjacent to the signal equipment room, see Part IX H1.
- 3. The signal equipment racks are normally set up in rows running across the short dimension of the room. Aisles between racks are 5' wide, racks are 4' deep, and made up of units 2'-6" wide. At interlockings a local control board is provided in a separate fenced-off area. It should be possible to enter this area from outside without going into the remaining part of the signal equipment room.
- 4. Extreme care must be taken that seepage of water does not occur into signal equipment rooms. Doors should have locks and be sized to accommodate the passage of equipment. All signal equipment rooms must have both normal and emergency lighting. See Part XI-C for heating and ventilating requirements.




- 1. A communication equipment room should be provided at each station. It houses the equipment for the station public address system, closed circuit TV, the train radio system, fire or emergency detection, alarm and radio systems, and other systems used within, or tied-into the station. If possible, it should be located adjacent to the signal equipment room, but should not be entered from the latter.
- 2. A communication equipment room is typically 100 sq.ft. in area. The precise size is determined by the signal/communications designer. Space should be left for future equipment and system installations.
- 3. Extreme car must be taken that seepage of water does not occur into communication, equipment rooms. Doors should have locks and be sized to accommodate the passage of equipment. All communication equipment rooms must have both normal and emergency lighting. See Part XI-C for heating and ventilating requirements.



SERVICE FACILITIES



- 1. A third-rail disconnect switch or "B-Switch" should be provided for each track at the leaving end of the station platform. Thus it is located to be easily accessible to the motorman of a train on each track. It consists of a simple manually operated knife-switch which is used to disconnect the power feeding a segment of the third-rail through the station platform area, in emergency situations.
- 2. The switch is enclosed by a fibre-glass reinforced plastic box with hinged doors. It occupies an alcove 4' wide by 7' high by 2'-0" deep. Cables from the third rail are fed to the bottom of the box via large conduits. The box may be on the platform or just beyond the end of the platform, at the same level as the platform. There must be at least 4' clear between the face of the box and any fixed vertical obstruction opposite the box, to allow sufficient room for opening or closing the switch. The switch box may be exposed, or if on the platform, may be behind doors. The area in front of the switch should be lighted. No heating of the switch box or room is required, but doors if used, should be undercut.
- 3. Other traction power switches may be located near the station, sometimes adjacent to the "B-Switch". The number and location is determined by the traction power designer. The "B-Switch" and other switches may be grouped at the platform end with other service rooms, but the "B-Switch" should be easy to find in emergencies. If not visible from the platform a sign giving the switch number should be provided.



- Sewage ejectors are required at locations where the sanitary drainage from the station must be raised to a higher level to feed into the city sanitary sewers. Pumps of various types are used to remove storm, water, seepage, and other water brought into the station or tunnel by the cars (rain or snow melt), from station washing, or from fire fighting, at all stations lower than the city or other storm drainage systems.
- Typically the rooms are 75 to 150 sg. ft. in area. The room should be sized to provide adequate space for maintaining or replacing the equipment. Doors should have locks and should be sized to permit removal of equipment. Both normal and emergency lighting are required. See Part XI-C for heating and ventilating requirements.

1. Train Crew Lobby:

A train crew lobby is provided at any rail terminal where trains are stored. It is placed at the end of the platform closest to the storage tracks and may be at platform or track level. It usually will adjoin a large inspectors room located at the platform end. The size of the lobby depends on the personnel assigned to it, which will be specified by the Authority.

The train crew lobby must accomodate the following:

- . A lunch room with tables, benches, kitchenette, space for 3 vending machines, and 50 sq. ft. of bulletin board
- A men's locker room with one locker per person, benches, and l shower stall.
- . A men's toilet room with at least 1 urinal, 2 wc's, and 2 lavatories.
- . A women's locker room with one locker per person per shift, benches, and 1 shower stall.
- . A women's toilet room with at least 1 wc and 2 lavatories.
- . A porters/utility room

It is desirable that the men's and women's locker rooms are designed so that by moving partitions and furnishings the size of the two rooms could be easily altered to adapt to a change in the ratio of men to women employees. Initially provide womens lockers equal to 10% of the number required for mens.

2. Yard Crew Lobby

A yard crew lobby is provided at any rail terminal where trains are stored. It may adjoin the train crew, lobby, oriented toward the storage tracks, and preferably at track grade. If the storage yard is some distance from the station, the yard crew lobby may be located closer to the throat of the storage yard, than to the station. The yard crew lobby is much smaller than the train crew lobby. The number of employees will be specified by the Authority.

MARSACHURETTS BAY TRANSPORTATION AUTHORITY	SERVICE FACILITIES	IX
MANUAL OF GINDELINES AND STANDARDS REVISED 1876	TRAIN & YARD CREW LOBBIES	K1

The yard crew lobby must accomodate the following:

- . An office for the yardmaster of 100 sq.ft.
- . A lunch room with tables, benches, kitchenette, space for 1 vending machine, and 20 sq.ft. of bulletin board.
- . Separate mens and womens locker rooms and toilet rooms similar to the train crew facilities except smaller. Toilet rooms would have only 1 of each type of fixture.
- . A porters/utility room.

For heating and ventilating requirements for train and yard crew lobbies see Part XI-C. Finishes, lighting, and furnishings should be extremely durable, and easily cleaned.

At some locations it may be possible to consolidate the train crew and yard crew lobbies in a single facility. Common lunch rooms and toilet rooms are permitted. Separate train and yard crew locker rooms are required.

3. Walkways & Platforms at Storage or Turnback Tracks:

Paved, lighted walkways will be provided to connect the train and yard crew lobbies with the storage yard. Location of walkways must be coordinated with track and 3rd rail layouts to minimize the number of gaps in the 3rd rail.

Raised platforms at least 3' wide between tracks, and 2' wide if adjacent to a wall, will be provided at the storage tracks, as directed by the Authority. Steps to the ground are provided as required.



1. Storage Rooms:

Storage rooms may be provided at or near station lobbies, at train platforms, at busways, or within parking garage structures. Size, location, and requirement for utilities, heating, and ventilating will be specified by the Authority. Typically one room of 100 to 200 sq.ft. is provided at terminal stations.

2. Sand Boxes:

At outdoor train and bus platforms, and at other extensive walkway or roadway locations where ice conditions could exist, sandboxes should be provided. They should be 5'-6" long x 2'-6" wide x 3'-0" high, of concrete construction with a hinged steel top. They may be built-in in combination with other platform service rooms or furnishings, or as free-standing precast units.

3. Emergency Exits:

See Part IV-E Components

4. Platform/Track Access Stairs

Stairs to connect platform and track levels will be provided at each end of a platform. Min. clear width is 2'-0", minimum tread $9\frac{1}{2}$ ", maximum riser $7\frac{1}{2}$ ". If it is not possible to use a stair meeting these criteria, a 2'-0" wide ships ladder, and in the worst case a 2'-0" wide vertical ladder with maximum tread spacing of 1'-0" may be used.

5. Vent Shaft & Fan Rooms:

See Part XI Ventilation and IRT Ventilation Handbook.

1	MASSACHUSETTS BAY TRANSPORTATION AUTHORITY	SERVICE FACILITIES	IX
	MANUAL OF DUNDELMES AND STANDARDS	MISC. ROOMS & EQUIPMENT	L1

- 1. Water supply is from city mains, with meter located in a service area. Water is required at toilets, porters' rooms, drinking fountains located in starters and employees' locker rooms, and at some concessions. Hose bibbs should be located throughout the station at approximately 100 foot spacing, so that most areas can be reached with 50 feet of hose. When possible, the hose bibbs should be located in service areas such as porters rooms, but not in electrical, signal or communication rooms.
- 2. Hose bibbs shall be of frost-proof, vandal-proof design. Heat trace all water and drain lines subjected to below freezing temperatures.

WATER SUPPLY



SERVICE FACILITIES



All subway tunnels and stations will be equipped with a dry standpipe system to aid the fire departments in fighting subway fires. The system consists of connections at street level which are fed by pumpers, vertical pipes dropping down to the subway level, horizontal runs through tunnels and stations, and hose connections at frequent intervals within the subway. The system must meet the following criteria.

a. Pipe:

Schedule 40 black iron grooved ends for victaulic or equal fittings. Mains shall be maximum 6 inch nominal size.

b. Fittings:

Victaulic or equal except that terminals shall be two, 2½" nominal size valved hose connections threaded to drop from main. Street level connection for pumper service shall be per Fire Department standard.

c. Location:

The two, 2½" valued hose connections shall occur every 100 ft. for each track unless access between tracks is provided at a minimum of 100 ft. intervals. The same spacing for outlets shall apply to stations. Street level connections shall be provided at stations and vent shafts. Street level connection shall be reasonably accessible to Fire Department equipment.


d. Identification:

Pipe shall be painted red. Street level connections shall be identified by signs.

e. Interference:

A minimum 6 inch clearance shall be maintained between the train dynamic envelope and any part of the dry standpipe fire.

DRY STANDPIPE SYSTEM



A set of signal lights will be provided at busways to indicate that a train is approaching the station. It should be located to be visible to all drivers of buses waiting at the station, and to the bus starter. It is part of the Signal System and usually lights-up when a train enters the previous station, thus is 2 to 3 minutes from the station where the busway is located. It is most useful in the off-peak hours when bus service is infrequent, as it allows a bus to be held several minutes beyond it's scheduled leaving time so that passengers from the next train can make a bus connection.

TRAIN APPROACH INDICATOR


MARIADONISTIS ST.	SERVICE FACILITIES	R
REVISED 1676	MECH./ELEC. SYSTEMS	МЗ

- 1. For cleaning and maintenance equipment, vandal-proof 110V AC convenience outlets (equal to Arrow Hart 5797) are required at platforms, spaced about 50 feet on center. Actual spacing and mounting height will be determined by the elevations of the particular station. At mezzanines, a similar convenience outlet should be wall-mounted at each collection booth.
- 2. In new and modernized stations underfloor electric ducts should be installed, beneath the bank of turnstiles and to other likely locations of future automatic fare collection equipment. These ducts can be used at present to feed collection booths and fare boxes, and should be installed in groups of three, one duct each for AC, DC and signal wiring. Each of the three ducts should be connected by conduit to the nearest electrical room. A large junction box should be located at the termination of the duct system in each collection booth.

MISCELLANEOUS ELECTRICAL

- 1. Sound System. See Part VIII: Acoustics.
- 2. An ADT Alarm is required on the safe in most primary collection booths. It is not required on the safe in the safe room. This alarm is connected via the telephone line to the ADT Central Office.
- 3. All collection booths and all starters' rooms shall have telephones, connected to the central MBTA switch-board.
- 4. A starter's call bell system shall be installed, actuated by push button at any collection booth. The bell should be located at a central point in the station, and elsewhere as may be required in a particular station.
- 5. The opening of an emergency exit shall actuate an alarm located in the primary collection booth, and in the starter's room.
- 6. Public telephones may be installed in fare collection lobbies (normally in the free area), at station entry areas, at busways and at kiss and ride areas. Wall or post mounted units of vandal resistant design will be used.
- 7. Fire alarm boxes will be located at fare collection lobbies, train and bus platforms, and parking garages, as required by the fire department of each municipality.
- 8. Smoke and fire detection systems will be installed in all concession areas, rooms housing electrical equipment and other spaces as directed by the Authority. They will be connected with the Authority operations control center, and may be tied into the municipal fire alarm system as determined by the fire department.


COMMUNICATION AND ALARM SYSTEMS




- 1. A television surveillance system will be provided for at each station. It will include cameras at appropriate locations and a conduit system connecting the camera location and the primary collection booth with the station communications room. Additional conduit will lead from the communications room to the tunnel or wayside cable system to provide a connector with monitors at the operations control center. Cameras should be located to provide surveillance of platforms, passageways and other public areas which can not be observed directly by the collector. Additional monitors may be located at the collectors booth or other locations in the station which are manned during normal operating hours.
- 2. The station designer is responsible for planning the camera locations and the conduit system conduit and junction boxes will be installed by the station electrical contract. Design and installation of the TV equipment will be done under separate contracts for an entire route or group of stations and will provide a complete system of station equipment wayside connecting cables and monitoring system at the operations control center.

TV SURVEILLANCE SYSTEM

MASSACVARETTS BAY TRANSPORTATION AUTHORITY	SERVICE FACILITIES	
MANUAL OF GUIDELINES AND STANDARDS	MECH./ELEC. SYSTEMS	М6







MANUAL OF GUIDELINES AND STANDARDS

PART I GUIDELINES AND PRINCIPLES

PART II STATION RECONNAISSANCE

PART III STATION MODERNIZATION PROGRAM

PART IV COMPONENTS

PART V GRAPHICS

PART VI LIGHTING

PART VII MATERIALS

PART VIII ACOUSTICS

PART IX SERVICE FACILITIES

PART X SITE PLANNING AND NEW STATIONS

PART XI VENTILATION



MASSACHUSETTS BAY TRANSPORTATION AUTHORITY

MANUAL OF GUIDELINES AND STANDARDS

REVISED 1974

SITE PLANNING & NEW STATIONS

X

1

Part X of the Manual describes environmental and functional criteria for new rapid transit stations. New stations will occur either at the surface or underground. Existing underground stations have been discussed in detail in the previous nine parts which also contain material pertinent to surface stations. "Surface" applies to stations located below, at or above the normal grade level of the site which are largely open to the outside.

The following other parts of the Manual give information necessary for an understanding of Part X.

- Part I Guidelines and Principles
 - A. Circulation
 - B. Openness (Platform Openness)

(Openness to Neighborhood)
(Daylight to Platform)

- D. Platform Elements (Required Car Clearances)
 (Sightlines)
- E. Defined Spaces
- F. Platform Walls (Side and End Walls)
- H. Advertising and Graphics (Advertising Locations) (Sign Locations) (Map Space)
- Part III Station Modernization Program
- Part IV Components
 - B. Fare Collection Standard Fare Layout
 - C. Station Furnishings
- Part V Graphics
 - A. Authority Symbol and Name
 - B. Color Coding
 - C. Lettering
 - D. Maps
 - F. Station Entering Signs
 - G. Station Exiting Signs
 - H. Platform Photomurals
 - I. Miscellaneous Signs
 - K. Bus Stop Signs
 - L. Revenue Advertising
- Part VI Lighting
 - A. Lighting Design
 - B. Fixture Types

INTRODUCTION



SITE PLANNING & NEW STATIONS

 \mathbf{x}^{v}

ENHANCE BENEVALENCE TEST INC.

ATT 200 CHARLES THE

2

PART X - Site Planning and New Stations

A. Site Selection

- 1. General
- 2. Sites in Structures
- 3. Expressway Sites
- 4. Level and Sloping Sites
- 5. Dense and Open Sites
- 6. Underground Sites

B. Site Analysis and Design

- 1. Climatic Conditions
- 2. Planting
- 2.1 Landscape References
- 3. Surface Treatment
- 4. Exterior Lighting
- 4.1 Exterior Lighting Fixture Types

C. Station Access Facilities

- 1. General
- 2. Pedestrian
- 3. Bus Facilities: General
- 3.1 Bus Facilities: General
- 3.2 Bus Facilities: On Street
- 3.3 Bus Facilities: Off Street General
- 3.4 Bus Facilities: Off Street Inline Flow
- 3.5 Bus Facilities: Off Street Island Flow
- 3.6 Bus Facilities: Off Street Compressed Flow
- 3.7 Bus Facilities: Long Island Platforms
- 3.8 Bus Facilities: Off Street Short Island Platforms
- 3.9 Bus Facilities: Off Street Random Loading
- 3.10 Bus Facilities: Off Street Cross Platform Transfer
- 3.11 Bus Facilities: Off Street Platform Dimensional Criteria
- 3.12 Bus Facilities: Roadway Details
- 3.13 Bus Facilities: Off Street Turning Street
- 3.14 Bus Facilities: Driver Accommodations
- 3.15 Bus Facilities: Bus Dimensions
- 4. Park & Ride Facilities General
- 4.1 Park & Ride Facilities Access & Control
- 4.2 Park & Ride Facilities Layouts
- 4.3 Park & Ride Facilities Lot Layout & Landscaping
- 4.4 Park & Ride Facilities Garages
- 5. Kiss & Ride and Taxi Facilities
- 5.1 Kiss & Ride Typical Layouts
- 6. Electrical Facilities
- 7. Concessions and Shops



SITE PLANNING & NEW STATIONS

X

MANUAL OF GUIDELINES AND STANDARDS

D. Station Lobbies and Platforms

- 1. Lobby to Platform Relationships
- 1.1 Station Cross-Sections
- Typical Station Circulation
- 2.1 Typical Station Circulation Vertical
- 2.2 Vertical Circulation
- Platform Types Two Track
- 3.1 Platform Types Three Track
- 4. Platform Access
- 5. Platform Design Criteria
- 5.1 Platform Dimensions
- 6. Railroad Shuttle Transfer

REVISED 1974

Certain objectives have been established for the location of transit extensions. These objectives are the result of regional studies conducted jointly by the Authority and various state and local agencies. These objectives are as follows:

- 1. Routes that complement major highways, renewal or other public works.
- 2. Routes that promote economic development and stabilization of individual communities.
- Routes that reach into a large and active transit market.
- 4. Routes that replace costly, lowspeed, or inconvenient local systems.

The station site location and general configuration will be determined by the Authority. The basic street and track alignments will be furnished to the station architects.

GENERAL



X

A transit station may be part of a larger urban development incorporating commercial, housing and light industrial uses.

The Authority cannot build structures for commercial purposes. but may sell air rights to other public agencies or private developers. Structures developed in coordination with stations provide the following advantages:

- A total integration of the transportation system within the physical structure of the community,
- An increase in Authority revenues by development of traffic generating activities at or near stations. Examples of these activities are high density residential or commercial development.
- An indirect increase is Authority revenues by creation of safe and pleasant surroundings for the stations.
- An improvement of Authority operations by providing new facilities which might not be available by other means, such as weather protected busways or storage vards.
- The provision of space for special uses such as low rent housing, housing for the elderly, or public facilities, in communities where land for such uses is in short supply.
- Through the sale of air rights or excess property, the receipt of funds which may be applied to further capital improvements of stations and facilities.

Because of the extreme urgency of completing some parts of the expansion program, it will not always be possible to arrange for air rights development to occur simultaneously with station construction. The station structure and site should be developed with enough flexibility to permit air rights development at a later date.

SITES IN STRUCTURES



SITE PLANNING & NEW STATIONS

X

The interconnection of the highway system and the mass transit system is necessary for a balanced transportation system. The location of transit stations at these interconnecting points provides a further reinforcement of both systems.

The rapid transit routes incorporated in the Authority Master Plan connect with the expressway and critical highway network in two ways. The first is a right angle intersection of expressway and transit line. An example of this type is the Riverside line's connection to Route 128. Here the highway becomes a major feeder to the transit station. The second is a transit line paralleling the highway. An example of this type is the Southwest Corridor. Here the expressway will feed the transit at the rail terminal and one or two other locations, but the arterial roadways crossing the joint transit corridors will feed both modes at many points.

An expressway location presents special problems. The majority of people will arrive by automobile or bus. The driver will be traveling at high speed and must be signaled of the approaching entrance to the transit station.

Station elements may be placed directly beneath elevated sections or above depressed sections of the expressway. Such locations require strong visual elements to compete with the scale of the expressway and the speeding traffic. Elements that span the roadway or project vertically beside or between the roadways can provide these focal points.

The station may also be located adjacent to the expressway where it is more visible. This scheme simplifies parking and approach roads, but requires more land.

The exit lanes from the expressway to the station should be located on the approach side of the station, with the station visible from the point of exit. Sight lines to the station may be improved by curves or slopes in the roadway.

Bibliography:

Appleyard, Lynch & Meyer, View from the Road, MIT Press, Cambridge, 1963

EXPRESSWAY SITES



MASSACHUSETTS BAY TRANSPORTATION AUTHORITY

MANUAL OF GUIDELINES AND STANDARDS

CAMBRIDGE SEVEN ASSOCIATES INC
CONSULTANT ARCHITECTS

DATE PRELIMINARY FINAL

SITE PLANNING & NEW STATIONS

X

SITE SELECTION

While level sites are best suited for intense activity, activity alone will not insure the success of a level site. A suburban station on a level site may become an island in a sea of vehicles.

Planting, manmade landforms, changes in surface texture, and the station structure can be utilized to define spaces, direct and orient circulation, and provide variety.

Sloping sites may be utilized to divide parking into small units. separate pedestrian levels from vehicles, screen unwanted views, define spaces, and increase the visibility of the station from the surrounding area.


The topography of each site will determine the organization of the plan. The location of circulation, the use of an area, the position of the buildings, and its visual aspects, will be influenced by the topography.

The following general scale of slopes should be followed for particular uses:

Slopes under 1% do not drain well Slopes of 1% to 4% are desirable for intense activity Slopes of 4% to 10% are suitable for informal movement and activity Slopes over 8% are unfavorable for roads.

To provide level areas for parking, the sloping portions may be graded and the level areas developed in steps down the site. The slopes between these parking plateaus are then available for major planting such as trees. Areas of grass should be avoided unless maintained by local park departments. Brick, stone, concrete, etc. may be used where surface texture is desired. If plant material is desired for ground cover it should be a type that needs little attention. Landscaping should be kept simple and used in large enough areas to have impact.

LEVEL AND SLOPING SITES



2000


PRINCIPAL COMPANIES

Surface stations located in densely populated areas may be required to use smaller sites. Parking, if it is provided, will be based on site design limitations. If the area surrounding the site is architecturally noteworthy, the station should be suppressed so as to be sympathetic with these surroundings. Building set backs, existing height limitations, and the types of materials should relate to the local area.

In vast open areas or areas of little visual significance, the transit stations may be a strong visual element and a focal point for the whole neighborhood.

DENSE AND OPEN SITES

MASSACHUSETTS BAY TRANSPORTATION AUTHORITY		SITE PLANNING & NEW STATIONS	Х
	MANUAL OF GUIDELINES AND STANDARDS CAMBRIDGE SEVEN ASSOCIATES INC., CONSULTANT ARCHITECTS DATE PRELIMINARY FINAL	SITE SELECTION	A 5

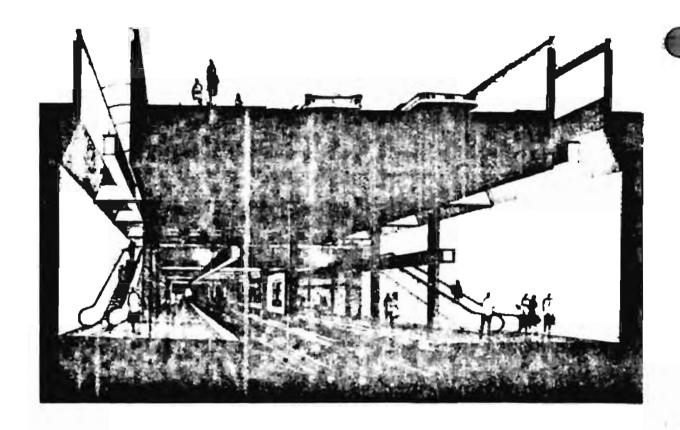

New underground stations should be light and airy. This can be accomplished by wide simply shaped platforms and high interior spaces. Daylight should be brought into underground stations by penetrating the surface. The new North Station, on the Orange Line, shown above, indicates one solution: sky lights to the street, allowing daylight to wash the side walls of the space.

Mezzanines or entrance lobbies at grade should wherever possible provide orienting views of the platform space. In the example shown above, a mezzanine fare collection lobby is located as a wide bridge within the platform space, providing pleasant views and awareness of platforms and trains below.


UNDERGROUND SITES




MANUAL OF GUIDELINES AND ETAMBARDS. CHMBRIDGE SEVEN ASSOCIATES INC. CONSULTANT ARCHITECTS. SITE PLANNING & NEW STATIONS

X

SITE SELECTION

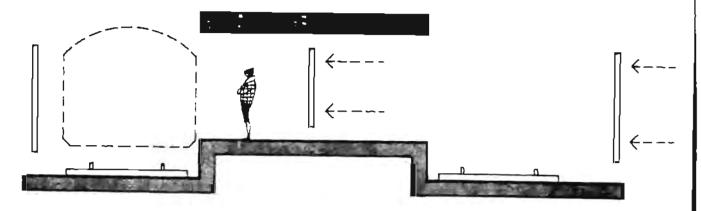

CENTER PLATFORM

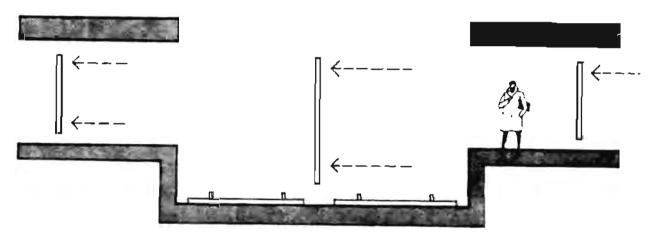


SIDE PLATFORM

Waiting passengers should be given protection from prevailing winds and sun angles. Panels may be erected as wind guards. These panels will also provide necessary surface for upper and lower name bands, maps, orientation photomurals, and revenue advertising. For precise standard locations of these graphic elements, see Sections I, III, V.

CLIMATIC CONDITIONS

WASSACHUSFFTS BAT TRANSPORTATION AUTWORLTY	SITE PLANNING & NEW STATIONS	Х
WANDAL CH GUIDEL IMES AND STANDARDS CAMBRIDGE S VEN A SEDCIATES INF CONSULTANT ARCHITECTS DATE PRILIMINARY FINAL	SITE ANALYSIS AND DESIGN	B1

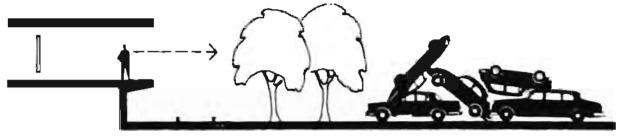



DIVIDE PARKING



SUGGEST DIRECTION

Existing trees should be preserved when possible. Trees and other plant material may be used to screen undesirable views, divide large parking areas into smaller units, or suggest a flow of exterior space.

Planting when used as surface texture and color should be limited to those types requiring minimum maintenance. Whenever planting is used it should be used in large enough areas or numbers to make an impact.

PLANTING



PARAGONATION THANKSOFFERINGS SUTMOBITY

MENCINE OF GUIDIDINGS AND STANGARD

BEVISED 1974

SITE PLANNING & NEW STATIONS



SITE ANALYSIS AND DESIGN

B2

For further information refer to the following books:

American Association of State Highway Officials, <u>Landscape</u>
<u>Design Guide</u>, pages 88-92

Army Corps of Engineers, <u>Planting and Maintenance of Trees</u>, EM 1110


Fanlatan, D., Shaping Tomorrow's Landscape, Amsterdam, 1964

Lynch, K., Site Planning, MIT Press, Cambridge, 1963


Urban Land Institute, Community Builders' Handbook, pages 152-153

Urban Mass Transportation Administration, <u>Transit Planting</u>: A Manual (UMTA Demonstration Project VA-06-0006)


LANDSCAPE REFERENCES




X

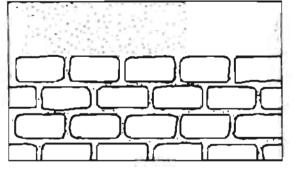


COBBLESTONE & BITUMINOUS

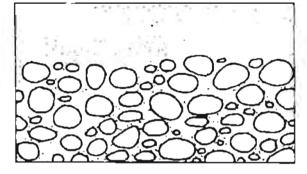


RUBBLESTONE & CONCRETE

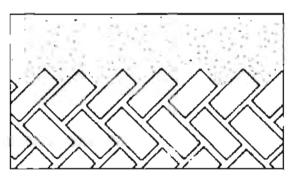


BRICKPAVERS & CONCRETE

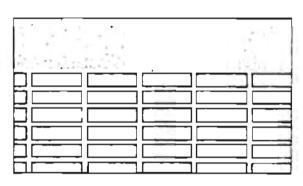

BRICKPAVERS & BITUMINOUS

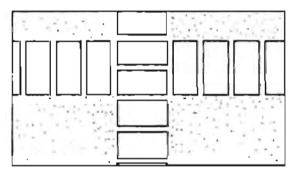


BRICKPAVERS & CONCRETE

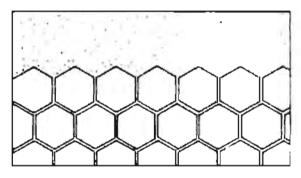

BITUMINOUS PAVERS & CONCRETE

Surface textures other than grass should be used extensively. A change of surface texture may be used to denote pedestrian paths at crosswalks and within parking areas. Vast areas of asphalt or concrete should be relieved by introducing strips or areas of contrasting material. Concrete and asphalt may be used together. Loose crushed stone or gravel should not be used in areas accessible to the public. Where a hard surface is not desired, wood chip mulch may be used alone, or in combination with planting.

SURFACE TREATMENT



REVISED 1974

SITE PLANNING & NEW STATIONS



SITE ANALYSIS AND DESIGN

The type of lighting and the light intensity will be determined by the function of the area.

Lighting for the pedestrian should be in scale to the human figure. Rows of lights may be used to indicate direction or define paths. Lighting in parking areas should be of a quality and intensity, preferably high pressure sodium, to impart a sense of safety. Self-parking areas and paths require one footcandle of illumination. Large parking areas should be 2-3 foot candles.

Direction and information signs may be brightly backlit for contrast. Surface illuminated sign boards need fifty foot-candles on dark surfaces. Backlit signs should be used whenever possible as they are more easily seen at night than surface illuminated signs. Care in placement, color selection, and intensity of light will be necessary to avoid washing out colors and graphics.

Light fixtures should be as vandal resistant as possible, with polycarbonate or high impact acrylic diffusers, particularly those which might be within reach of pedestrians.

Poles should be heavy gauge, extremely rigid, with hand hole and fixed base.


All wiring for exterior lighting fixtures should be buried in plastic coated rigid steel conduit. Overhead wiring will not be permitted.


For large areas, parking, train and bus storage, etc., serious consideration should be given to high mast lighting to minimize number of poles and luminaires. High mast installations should be of type that permits lowering of the luminaire assembly to ground level for servicing.

Maximum mounting height of fixed luminaires shall be forty (40) feet to permit servicing by bucket truck, where truck access is available.

Ease of maintenance of all fixtures is of prime concern.

EXTERIOR LIGHTING



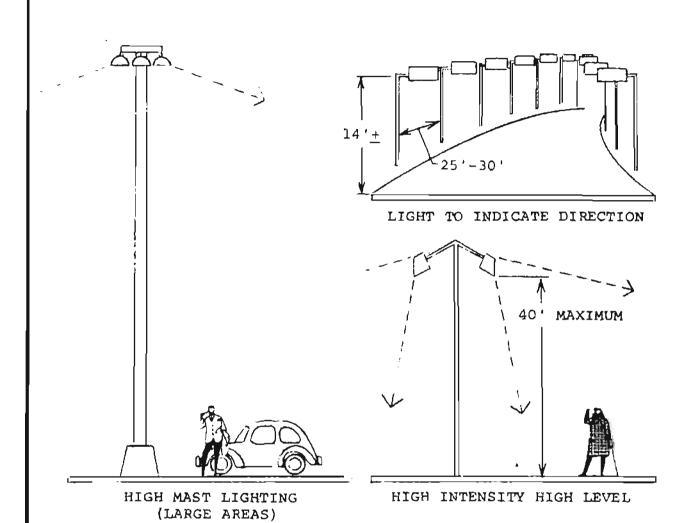

EXTERIOR LIGHTING FIXTURE TYPES



The amount of traffic and the mode of arrival will shape each site and station in a different way. Each mode has its own characteristics and needs which are fully described below. The modes are: pedestrian, bus, auto drop-off ("kiss and ride"), park and ride, and in several locations, railroad shuttle. Some stations must accommodate all of these modes; others only one or two.

As one progresses along a transit route outward from downtown, the emphasis of the major mode of access to stations shifts from pedestrian to automobile.

Typically, several modes feed a station - priority in terms of convenience of access to the station lobby should be 1) Pedestrian, 2) Bus, 3) Kiss and Ride, and 4) Park and Ride. At individual stations the order of priority may be modified to conform to the forecasts of the activity for a particular station.

Estimates of traffic by mode of arrival, and schematics of traffic flow patterns, are furnished by Planning.

GENERAL




MASSACHUSETTS BAY TRANSPORTATION

MANUAL OF QUIDELINES AND STANDARDS CAMBRIDGE SEVEN ASSOCIATES INC., CONSULTANT ARGHITECTS

DATE PRELIMINARY FIN

C₁

Absolute segregation of pedestrian from vehicular circulation is not required, nor is it necessarily desirable except in high volume areas. The pedestrian values travel time and convenience over almost anything else, and will not use grade separation structures unless they are very convenient. Major pedestrian-vehicle conflicts should be avoided wherever possible, but must not unduly inconvenience the users. Walkways which are too isolated from other circulation can create problems in surveil-lance and policing during off-peak hours. Crosswalks should be well marked with stripes or by a change of materials. The safety of pedestrians must be assured where vehicles share the accessway.

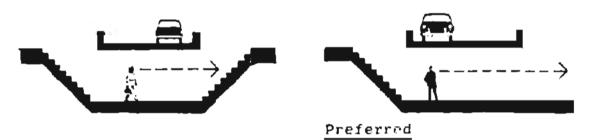

If possible, pedestrian overpasses or underpasses should be used where one end can be at or near grade. This minimizes the successive up and down movements, allows better surveillance, gives the pedestrian a sense of orientation, and is generally more pleasant.

Pedestrian way - specific details:


Minimum width of unobstructed sidewalks:	5.
Minimum width of pedestrian crosswalks:	7 '
Minimum width of pedestrian bridge:	8.
Minimum width of pedestrian tunnel:	10
Maximum slope of pedestrian ramp: Preferred slope of 1:15	1:12

Roadways over 4 lanes in width require a pedestrian refuge area at least 4' wide

Minimum headroom for short distances 7'6" preferred minimum 8' to 10'

PEDESTRIAN



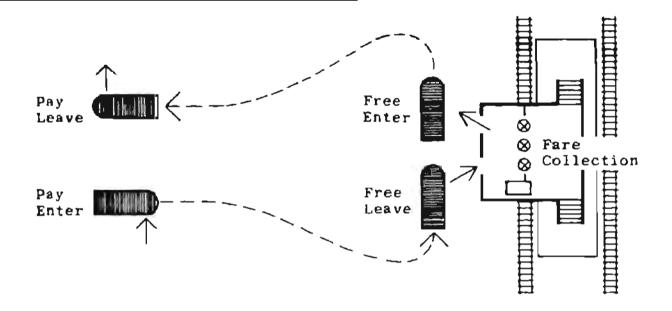

The present fare collection policy of the Authority allows free entry to buses at rapid transit terminals, the passenger pays as he leaves the bus outbound. Inbound to a rapid transit terminal, he pays as he enters the bus and exits free at the terminal. This system minimizes loading and unloading times at the terminals where time and space may be critical. A separate additional fare collection is made in the station lobby for the rapid transit ride.

Bus routes may operate through or adjacent to a station, or terminate at a station. Bus loading facilities at a transit station may be on-street or off-street. Either type of route can be served by either type facility, though through routes can often be better served by on-street stops.

Generally, when traffic volume at a single stop for terminating buses (with space for 2 buses) exceeds 12 per peak hour, off-street bus loops should be provided. The required number of berths will be determined by the Authority.

There is no typical bus terminal layout. The amount of bus traffic, possible points of street access, configuration of available site, and topographic relationships will dictate the layout of bus facilities in a different way for every transit station.

BUS FACILITIES - GENERAL




As the bus to train transfer is a breakpoint in a journey, it involves penalties in travel time and inconvenience. Thus, everything within reason should be done to make the transfer quick and easy. Unless otherwise specified, buses should have prime access to the station entry lobbies, taking priority over other vehicular access modes. All bus stops must be designed for right-hand loading. The pedestrian route from bus to train should be direct and involve a minimum of stair climbing. Liberal use should be made of shelters. Bus terminal areas should be well ventilated, illuminated, and designed for easy surveillance. The terminals must be planned to permit easy bus-to-bus as well as bus-to-train transfer. Conflicts with other access modes should be minimized.

The passengers movement and wait in the station should be as pleasant as possible. Benches, wind screens, and platform heating will increase passenger comfort.

IMABBA, MUBPTTS B4* B4* FANASPURITATION AUTHOR.TV	SITE PLANNING & NEW STATIONS	x
REVISED 1974	STATION ACCESS FACILITIES	C 3.1

An advantage of on-street bus stops at transit stations is that in some instances they can offer shorter overall travel time for the rider. Site considerations or traffic conditions could make it difficult to provide convenient off-street bus loops that would get the passenger to the station faster than he could walk from an on-street stop. Both solutions should be studied and the most convenient recommended.

At on-street bus stops, a pull-out lane at least 10' but preferably 12' in width, and long enough for at least 2 buses, should be provided, where possible.

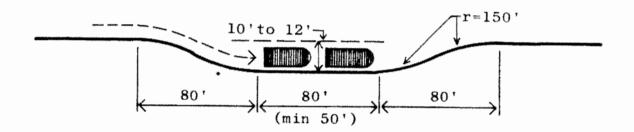

Bus routes terminating at a station may stop in the street at the station and go beyond the station to turn around a block or public square. It is preferred, however, to provide turn around space for the buses on the transit station property.

BUS FACILITIES - ON-STREET



SITE	PLANNII	NG &	NEW	STATIC	NS	X
(STATION	ACC	ESS F	ACILIT	IES	C3.2

At stations of low traffic volume, those with less than 12 terminating buses per peak hour, buses may share parking area roadways with the kiss-and-ride and park-and-ride traffic. For volumes greater than 12 per peak hour, buses should use special lanes or roadways for unloading, waiting, and loading. Thus, conflicts between buses and automobiles using parking and kiss-and-ride may be avoided. All busways should be designed to permit a bus to pass a standing bus (see dimensions below). Buses should never be required to back-up in the station area.

The ideal bus station should be laid out so that terminating buses may: 1) unload, without delay, 2) pass through a holding area, where they can wait if their loading berth is occupied, and proceed to a loading berth for normal layover and boarding. Unloading bus passengers should have short, direct access to the station lobby. There should be a loading berth for each major bus route, though heavily used routes may need two berths, while very light routes can double-up at a single berth. A loading berth should be able to serve approximately 10 to 12 buses per hour. Only where bus volume is relatively light, or where buses run through the station, can they unload and load at the same stopping point, though extra length for "bunching" should be provided.

The advantage of allowing buses to layover at the loading berth is that passengers may wait in the bus.


BUS FACILITIES: OFF STREET - GENERAL



SITE PLANNING & NEW STATIONS



MANUAL OF DESCRIPTION AND STREET, AND

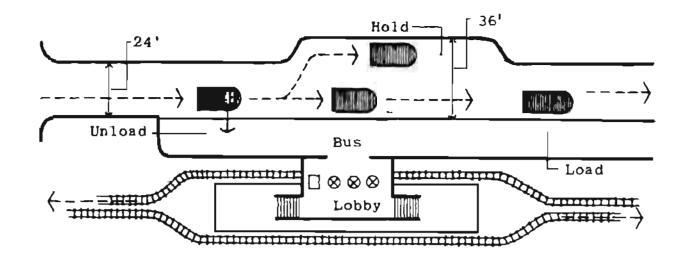


The layout shown above permits direct pedestrian access to the lobby without use of stairs or escalators.

As the time spent at the unloading area is relatively short, one unloading berth can serve 3 or 4 loading berths. Unloading buses can stop bumper to bumper. Shortcuts for empty buses to go directly from the unloading area to the outside to return to a garage, or from the outside directly to the loading area, are a desirable but not mandatory extra feature. Loading areas should be designed to permit a loaded bus to pull out of a berth and pass other standing buses.

The ideal bus flow pattern shown can result in an excessively long station if many routes must be handled. Thus, it can be advantageous to compress the flow pattern by various means, as shown on the following pages.

BUS FACILITIES: OFF STREET - IN-LINE FLOW




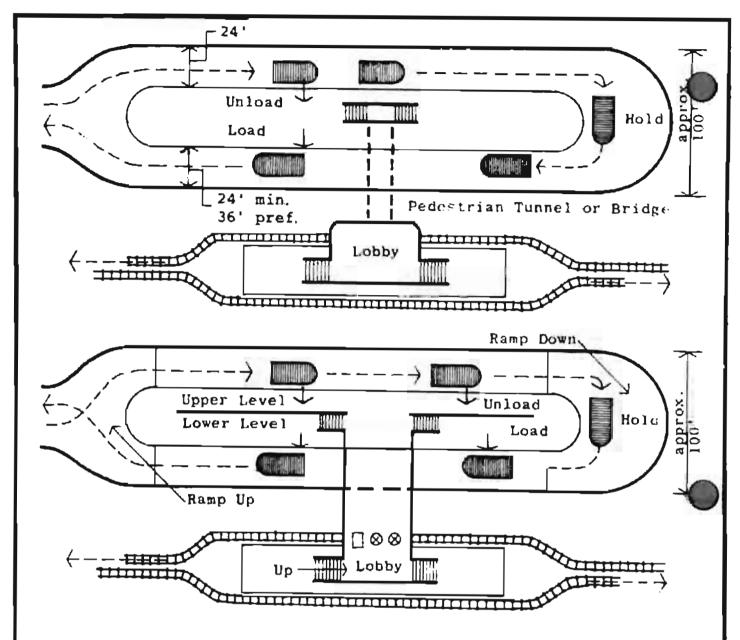


In the schemes above, buses go clockwise around an island with unloading on one long side, storage at one end and loading on the other long side. This scheme works well when access to the lobby is via pedestrian underpass or overpass. A split level variation of this pattern is also possible. The example shown has the advantage of reducing the need for stair climbing as buses can unload on the upper level with direct lobby access, and load on the lower level reached from the lobby via a down stairway.

BUS FACILITIES: OFF STREET - ISLAND FLOW

MASSAN MISSAN TE BA BA MASSOM FATICUM BUT MUMITTY	SITE PLANNING & NEW STATIONS	x
REVISED 1974	STATION ACCESS FACILITIES	C3.5

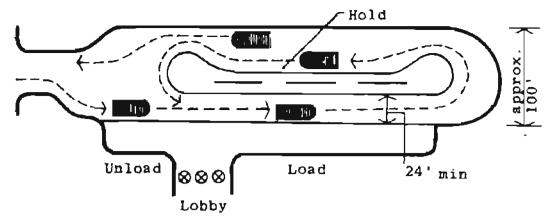

SEPARATED LOAD-UNLOAD

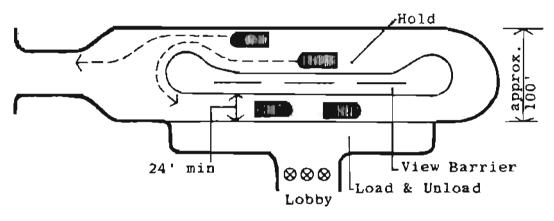



COMBINED LOAD-UNLOAD

Other methods of compressing the length of a bus facility are shown above. In some examples, it is necessary to slightly increase the empty bus mileage for those buses which cannot go directly from the unloading to the loading area as they must loop through the hold area. Also, at-grade crossing of the busway is necessary for some cases. This is not serious as long as proper sight distance and warning signs are provided. The advantage of these schemes is the saving of space and reduction of walking distance.

BUS FACILITIES OFF STREET - COMPRESSED FLOW

MASSAC MUSTTRE BAY TRANSPORTATION SUTMORITY	SITE PLANNING & NEW STATIONS	Х
MANUAL OF GUIDELINES AND STANGAROS	STATION ACCESS FACILITIES	C3.6

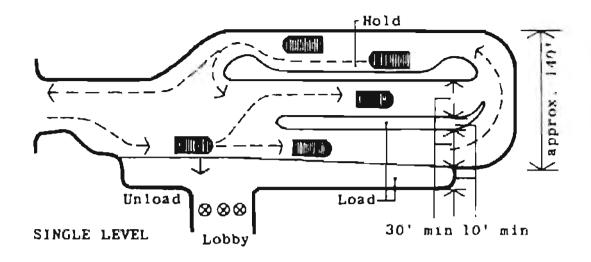


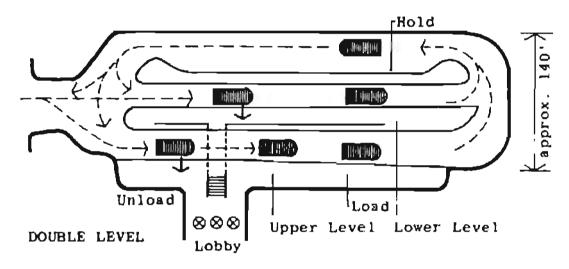


With the above scheme, the number of loading berths may be reduced by having buses layover in the hold area and stop in the loading berths just long enough to load. More routes can double up at a single berth this way.

BUS FACILITIES - LONG ISLAND PLATFORMS



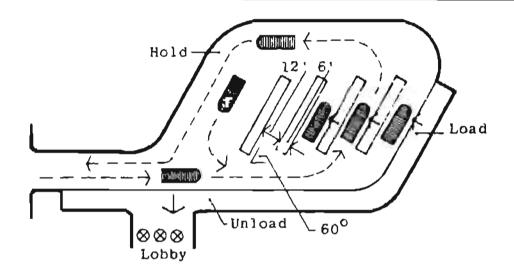


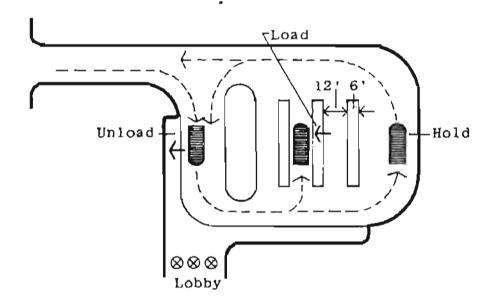

When space does not permit use of long in-line loading areas, a more compact arrangement, utilizing small island platforms, may be used. This system, however, leads to uncontrolled pedestrian crossings over a large part of the busway, and hence increased danger and possible movement delay.

BUS FACILITIES: OFF STREET - SHORT ISLAND PLATFORMS


MASSACHURFTS TAP TANISMOSTATION AUTHORIST	SITE PLANNING & NEW STATIONS	Х
REVISED 1974	STATION ACCESS FACILITIES	C3.8

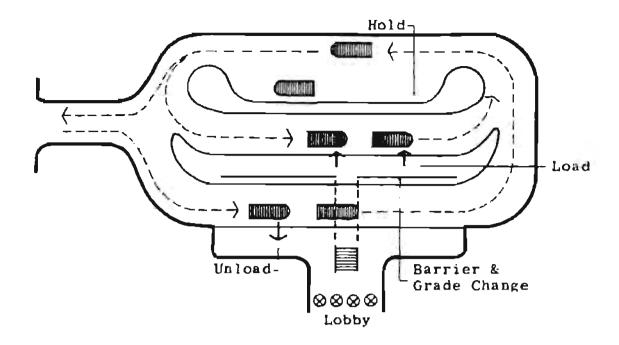

The scheme above involves intensive use of loading berths by many routes in a random manner. It requires a large platform for waiting passengers, an audio/visual system, and a traffic controller for identifying buses. This scheme offers short walking distances, but is more hectic for the rider due to the constant milling about on the platform. Buses may layover in the hold area in this scheme.


BUS FACILITIES: OFF STREET - RANDOW LOADING




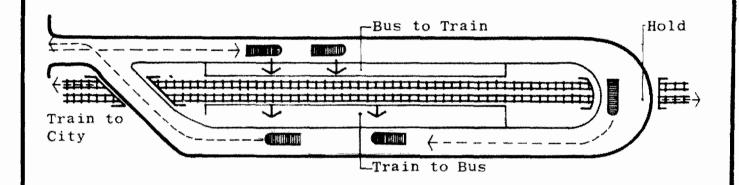

Bus terminals with cross-platform transfer are found at a number of locations on the "T" system today. Though convenient for bus to train transfers, this layout as shown above, is generally inconvenient for all walk-in, kiss-and-ride, and park-and-ride passengers. As this system requires side platforms, two fare collection lobbies at platform level are required, except at rail terminals. This layout takes considerable length, as grade separations between buses and trains are needed at each end of the station, and also makes an inbound-outbound option difficult for loading or unloading passengers. In addition, it is too wide to fit into expressway medians or on rights-of-way shared with railroads.

BUS FACILITIES - CROSS-PLATFORM TRANSFER



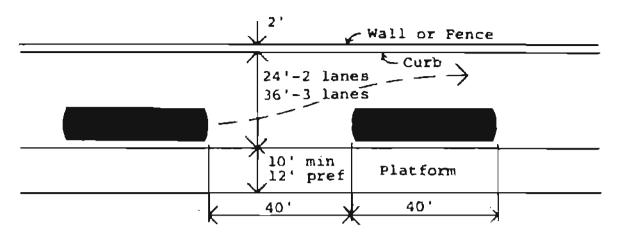


Typical Busway and Platform

Minimum vertical clearance at busways should be 13'-6". Obstructions on the platform should be at least 6' from the platform edge. Shelter should be provided for unloading and loading areas. Benches should be furnished at loading areas. At heavy traffic stations continuous canopies should cover the bus platforms and connect with the lobby. At lighter traffic stations or stops, small free standing shelters should be used. Benches, maps, windbreaks, and at least one sheltered and heated space should be provided at bus loading areas at each station. See Parts I and IV for similar furnishings used on train platforms.

BUS FACILITIES: OFF STREET - PLATFORM DIMENSIONAL CRITERIA

WASSACHURSTEN BASSACHURSTEN TRANSPORTATION AUTHORITY	SITE PLANNING & NEW STATIONS	
REVISEO 1974	STATION ACCESS FACILITIES	C3.11

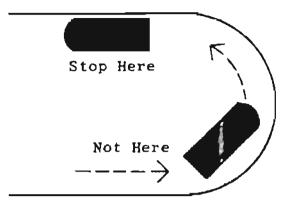

Single lane busways should be avoided unless they are short and there are alternate paths available. The minimum width of a 2-lane roadway for moving buses is 20', and where buses stop, 24'. As is shown on the turn radius diagram, a turning bus sweeps a considerably larger area than a bus on a tangent path. If pedestrian traffic is adjacent to the outside of a tightly curving bus loop, a protective fence or stripe should be used to allow space for overhang of the front outer corner of the bus. Buses should not load or unload in the midst of a short radius loop or curve as they cannot get up to the curb, and waiting passengers cannot predict the path of the bus.

BUS FACILITIES - ROADWAY DETAILS




		10 u	145	OIAI	10110	
6.3	TATION	۸۸۸	FCC	EACIL	ITIES	•

SITE PLANNING & NEW STATIONS

X

C3.12

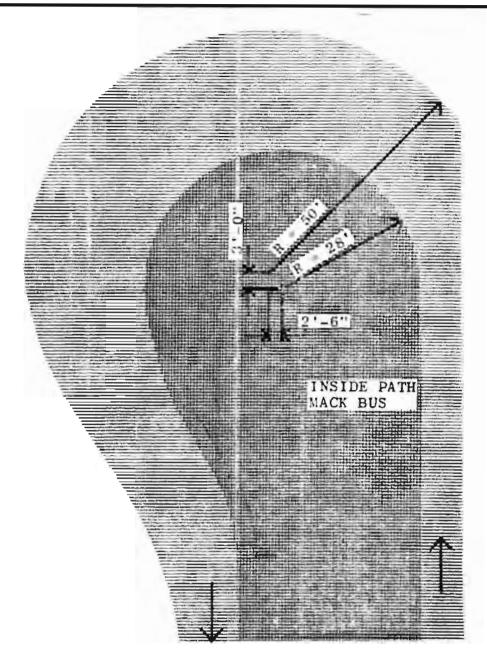

OUTSIDE PATH G.M. BUS

The minimum turning radius for the largest Authority buses is shown above. For ease of operation, larger dimensions than the minimum should be provided. Other data on geometric design of roadways, corners, median dividers, etc., can be found in "A Policy on Arterial Highways in Urban Areas", by American Association of State Highway Officials, Washington, D.C. 1957.

BUS TURNING RADII



SITE PLANNING & NEW STATIONS



STATION ACCESS FACILITIES


C3.13

Separate service facilities for bus drivers may be furnished at heavy volume stations. They include a toilet and washroom of 100 to 150 sq. ft., a lunch and locker room of 200 to 300 sq. ft., and a starter's office of 100 to 150 sq. ft. Access to operators' toilet, locker rooms, etc., should not be via the starter's room. These facilities should be at a location which is convenient to the bus loading area and surveillance. The starter's room is normally near the leaving end of the busway. They may be incorporated in the station lobby, but should be outside the fare collection line. At lighter volume stations the bus driver's facilities would be joined with those provided for station personnel.

DRIVER ACCOMMODATIONS



SITE PLANNING & NEW STATIONS	X
STATION ACCESS FACILITIES	C3.14

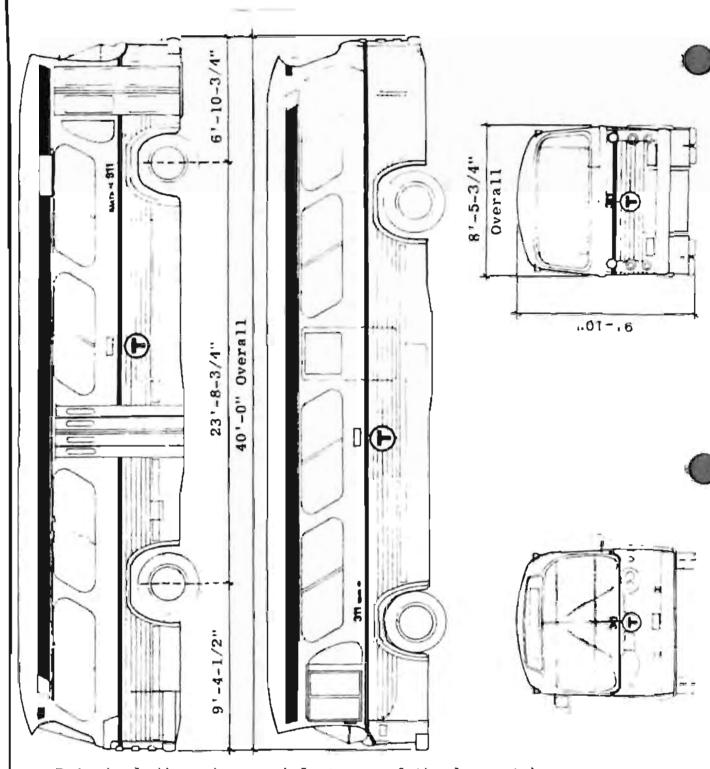

Principal dimensions and features of the largest buses now operated by the Authority are shown above. (G.M. "New Look" etc.)

BUS DIMENSIONS

MASSACHUSE TTS SAY TRANSPORTATION U/THORITY	SITE PLANNING & NEW STATIONS	X
MEAIRE I ABLA	STATION ACCESS FACILITIES	C3.15

Park and ride requirements for each station are spelled-out by Planning. As a general rule, parking will be supplied at all stations outside of the high density central area. The amount of parking space at a particular station depends upon the traffic potential, the ability of the street system to feed the station, and availability of reasonably priced land. Generally more parking space is needed at stations in the outer low density suburban areas where walk-in and feeder bus traffic is of minor importance.

The policy of the Authority at existing lots is to have pay parking, requiring a means of controlling entry to the parking area. Aside from producing revenue, pay parking helps limit use of the lot by non-transit riders, and through use of selective pricing, helps get maximum utilization of all lots along a transit route and to control use of areas within a lot, such as reserving space near the lobby for mid-day riders. At the present, station lots are operated by a concessionaire, with an attendant collecting the parking fee as cars enter the lot and must be flexible enough to allow the control to be at either entry or exit.

PARK & RIDE FACILITIES - GENERAL



SITE PLANNING & NEW STATIONS

X

MANUAL OF GUIDELINES AND STANDARDS

REVISED 1974 STATION ACCESS FACILITIES

C4

From 30% to 60% of the cars parked at a station over 24 hours may arrive in the AM peak hour, depending on circumstances of the station location.

There may be surges within the peak hour with as many as onethird of the cars arriving or leaving in the peak 15 minutes. Entry and exit facilities should be dimensioned to handle this traffic. The capacity in cars per hour for an attendent or a mechanical toll collection device is 400 to 500 per hour, depending on the fee being collected. A pass system would be somewhat faster. Specific parking demand forecasts and other design criteria for each location are furnished by The Authority.

Parking lot exits may be shared with the other access modes. Several exits may be used as long as gates and signs are provided to prevent illegal entry, where lots handle pay parking. Exits should be planned so that cars waiting to enter the street do not foul other station traffic.

Street access to parking areas should be designed in keeping with good traffic engineering and geometric design practice. Street improvements, including signalization, widening, and construction of access roads or ramps, can be made when necessary.

The ability to have paid parking must be designed into all new Park and Ride facilities, though installation of control devices may not be made initially. Roadways and control points should be located so that cars waiting to pay will not block either public street access or internal access routes to kiss-and-ride and bus terminal areas. The roadway at the control point should have at least two 10 ft. lanes, with at least six feet width at each shoulder for attendant's booths and automatic toll collection equipment. Storage space should be allowed for waiting cars, so that adjacent facilities will not be blocked.

A single entry control for Park and Ride lot where a fee is collected is usually preferred. The entry from the street may be shared with kiss-and-ride and bus traffic. Site considerations and traffic demand may require several entries in particular cases. It may be necessary to divide the parking into several individual lots each with its own control. This layout should only be used when there is no other solution.


PARK & RIDE FACILITIES - ACCESS AND CONTROL




SITE PLANNING & NEW STATIONS

X

MARKETT BALL PROPERTY AND STREET

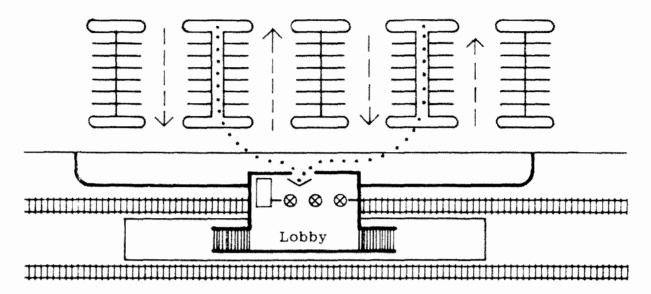


Circulation within the parking bays should be one way, with a counter-clockwise pattern preferred. Entrys to bays and the roadway system should be well signed. Bays should be aimed toward the station entry so that pedestrians flow along the bays to the station. Crosswalks at busways should be marked.

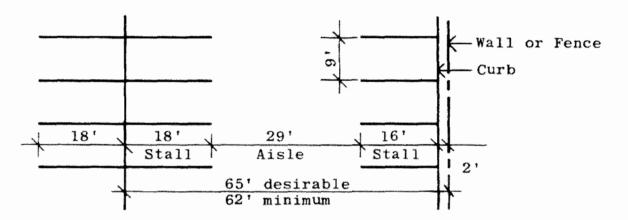

Ninety degree parking is preferred with angle parking used only where space is restricted. The preferred dimensions for right-angle parking bays are shown above.

With a 65' bay width the stalls may be reduced to 8.5', or the stalls may be held at 9' and the aisle width reduced to 62' in tight situations. Minimum inside turning radius for cars is 20' with outside 30'. Other details of right angle and angle parking may be found in various handbooks.

PARK AND RIDE FACILITIES - LAYOUTS & DIMENSIONS



Parallel curb parking may be used in Kiss-and-Ride areas and in other left-over spaces. Stalls should be 9' wide and 22' long.

For preliminary planning purposes, assume 350 sq. ft. per parking space, which gives 125 cars per acre. This allows for stalls, aisles, and general circulation within the lot.

Curbs or barriers between stalls and bays should not be used, because they make efficient snow removal impossible. However, ends of bays may be defined with raised curbs. Where pedestrian flows through a lot are more concentrated, as in the case of pedestrian access way from outside the station, curb protected pedestrian ways should be provided, with allowance made for snow removal.

To break-up the scale of large lots, they should be sub-divided into sections. Changes in level, protected walkways, access roadways and landscaping may be used for this purpose. In general, where landscape elements are used they should be massed rather than scattered thinly throughout the lot. This yields a better visual effect, and easier snow removal and maintenance.

Landscaped barriers at least 10' wide should separate the parking area from adjacent streets. Special cases, particularly in residential areas, may require greater width. Vertical screens or fences may be needed to protect the privacy of neighboring parcels. Landscape spaces and materials must be designed with snow removal, minimum maintenance cost, and the vandalism threat constantly in mind.

Grassed areas require constant care and should be avoided if possible. For variety, various paving materials such as brick, stone, or concrete textures may be used. (See Part X-B3)

Lighting in general is discussed under environmental criteria in this section. Wires, wood poles, and other unsightly devices will not be permitted.

PARK & RIDE FACILITIES - LOT LAYOUT & LANDSCAPING

CT SELECTION SELECTION SECURITY FOR THE FORM	SITE PLANNING & NEW STATIONS	X
MENISED 1974	STATION ACCESS FACILITIES	C4.3

Parking garages will be used at a few specific locations where the parking demand exceeds the supply possible with surface parking alone. Garages, like lots, will have provision for entry control, and will be self-parking. Space criteria for stalls and aisles is similar to that of lots. Preferred grade of ramps is 5% with 10% as absolute maximum. Overall design should be in keeping with good self-parking garage planning practice. Pedestrian circulation within the garage should be designed to connect directly with the station lobby. Special controls to limit the use of the garage by non-transit riders other than at the entry may be necessary.

For further information refer to the following books:

Baker and Funaro, Parking, Reinhold, New York, 1958

Brierly, J., Parking of Motor Vehicles, C.R. Books, Ltd., London, 1962

Burrage, Robert, <u>Parking</u>, Highway Traffic Control Board, Saugatuck, Connecticut, 1957

PARK & RIDE FACILITIES - GARAGES



REVISED 1974

SITE PLANNING & NEW STATION	S
-----------------------------	---

Facilities should be made available for "kiss-and-ride" and taxi passengers at all non-downtown stations. Unless otherwise specified, these facilities should rank second in access priority after buses. Space needs vary with time of day. Relatively little space is needed in the mornings for auto drop off, but in the evening rush more space for waiting cars is required. Both on and off-street "kiss-and-ride" facilities are possible.

On-Street Facilities:

Traffic patterns on adjacent streets and site considerations may dictate the placement of "kiss-and-ride" space on the street. Where possible a pull-out lane, similar to that shown for onstreet bus terminals, should be provided. A free-standing shelter should be furnished at such locations if specified by the Authority. These areas should have easy pedestrian access to the station, and be placed so that waiting cars will not block bus or parking lot access ways.

Off-Street Facilities:

Off-street "kiss-and-ride" facilities should be used wherever space permits, and usually are provided at suburban type stations. The roadway for "kiss-and-ride" may be shared with buses at light traffic stations. The "kiss-and-ride" facility should be located so that it will not interfere with buses or other traffic. Pedestrian access to the station may cross busways at properly marked crosswalks, where bus traffic is not excessive. See parking lot geometry above for parking space criteria.


As park and ride lots may have controlled entrance or exit, the "kiss-and-ride" roadway must be placed so that cars may enter and leave without going through the parking lot control.


Parking space for 20 to 60 waiting cars is generally necessary though specific requirements will be given for each station. This space can be used for mid-day parking if properly controlled by parking lot personnel or meters. As an alternative, part of the park and ride lot may be used for waiting cars during the evening rush period, when the parking lot is not controlled.

Parking spaces within the kiss-and-ride area are normally layed out with a row of 60° diagonal spaces on one side of an aisle, and parallel curb spaces on the other. (See sketches)

KISS-AND-RIDE AND TAXI FACILITIES

MENSEE 1974	SITE PLANNING & NEW STATIONS	X
	STATION ACCESS FACILITIES	C 5

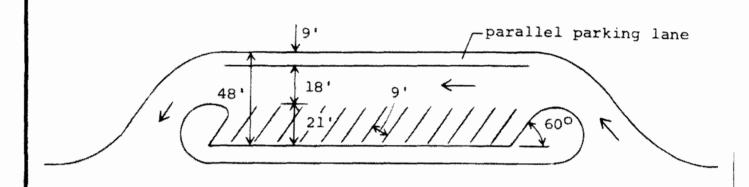

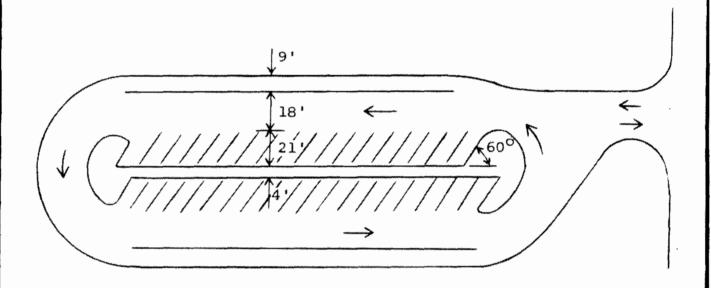

Curve radii and roadway widths should be sufficient to permit operation of buses in the kiss-and-ride area if required.

KISS & RIDE - TYPICAL LAYOUTS

MASSACHUSETTS BAY TRANSPORTATION AUTHORITY	SITE PLANNING & NEW STATIONS	Х
MANUAL OF GUIDELINES AND STANDARDS	STATION ACCESS FACILITITIES	C 5.1

This section discusses briefly some of the other facilities or activities which must be accommodated within or adjacent to the station site. Specific details will be furnished by Planning or by the engineering department or consultant responsible for the particular item in question.

Power Substations:

Power substations are often associated with passenger stations. The preferred design of substations occupies a space approximately 50' x 70'. This is a rectangular box with a split level interior layout. The transformer bay occupies a lower level. at grade, along one long side, and has open side walls fenced or with grilles for ventilation. The building must have truck access along the transformer bay. Other layouts involving open air switchgear and transformers are possible. These however. occupy more space, and are less suitable for residential or commercially developed neighborhoods, The substations should be located away from prime space in the vicinity of the station lobby and bus terminal areas. Architecturally, they should be compatible with the passenger station and be visually friendly to their surrounding neighbors. In specific cases it may be possible to build the substation into a parking structure, or some other part of the station structure. Exterior design of substations should be developed in coordination with the station architects.

Relay Rooms, Signal Towers:

These facilities may be built into the station or platform structures, or be free-standing (see Service Facilities, Part IX). Built-in facilities are preferred for economy and to minimize the clutter at stations. Specific information is supplied by the engineering department and consultants responsible for train control, signals, and communications. These spaces or structures must be integrated into the total design by the station architect.

ELECTRICAL FACILITIES



SITE PLANNING & NEW STATIONS

STATION ACCESS FACILITIES

C6

Space should be made available wherever possible in heavily used new stations for concessions and shops. These facilities not only produce revenue; they also perform a public service and contribute substantially to the lively character of the stations as "places" integrated with their community.

Newsstands should be built-in to station lobbies, so as to minimize improvised cluttering from stands that are added after construction.

Other concessions such as small coffee shops, flower shops, bakeries, book shops and small clothing shops may be possible at the busier stations. These may occupy space or cubage that can be built at little extra cost over that needed for transportation purposes.

To be successful, space for concessions must be along the primary circulation routes (never in a cul-de-sac) but they must in no way interfere with the pedestrian flow that is passing by them.

CONCESSIONS AND SHOPS



MANUAL OF GUIDELINES AND STANDARDS

REVISED 1974

SITE PLANNING & NEW STATIONS

X

STATION ACCESS FACILITIES

C7

Station lobbies are located under, at, or over the platform level. Minimum vertical distance between platform and lobby is about 13' for a lobby over the tracks, and 14.5' for a lobby under the tracks, assuming minimum depth of structure. Where railroad freight tracks are parallel to, and at the same grade as, the transit line, a lobby over the tracks will have to be somewhat higher. Precise clearance for railroad facilities is spelled-out by the Authority.

In general, lobby facilities should not be at platform level. Fare collection facilities on an island platform require excessive platform width, and once installed are difficult to expand in case of an increase in traffic. At a side platform station, fare collection on the platform requires inefficient duplication of fare collection equipment, and manpower. Such a station layout may be convenient in one direction of travel, but often extremely inconvenient in the opposite direction. As a rule, stations and station lobbies should be laid out so that the station can be controlled by a minimum of one person. Stations with lobbies located at both ends may be designed so that a major lobby is open at all times, and a minor lobby is open part time as an entry and full or part time as an exit.

LOBBY/PLATFORM RELATIONSHIPS




STATION LOBBIES AND PLATFORMS


SITE PLANNING & NEW STATIONS



Island Platform

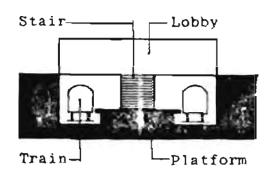



Side Platform

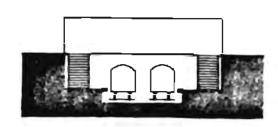


Lobby over tracks at grade


Lobby over tracks in cut







Lobby under tracks at grade







Lobby under tracks above grade

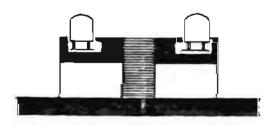



STATION CROSS-SECTIONS



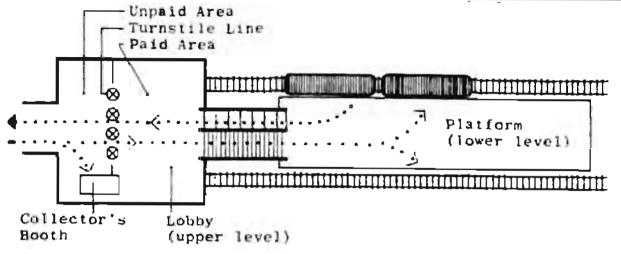

Lobby Layout

Details of lobby layout, fare collection, vertical circulation, signing, graphics, and service facilities are found in Parts IV, V, and IX of the Manual. Capacity requirements for design of lobbies and circulation are furnished by the Planning Department.

For preliminary layout purposes refer to the following exerpts from Part IV, "Components".

Design Capacity of coin or token turn-tiles, and exit gates: 40 persons/min.

Turnstile Dimensions: 4' deep x 2'-4" wide (automated gate 3' wide).

Exit Gate: 5'-6" diameter.

Minimum queue space on each side of the turnstile bank;

- a) Suburban Station: 15'
- b) Downtown Station: 20'


Total minimum depth of fare collection area excluding stair run-off and through circulation paths;

- a) Suburban Station: 34'
- b) Downtown Station: 44'

Width of fare collection area depends on traffic.

Note that stations outside of the central area must be designed for collection of fares for persons entering and leaving the station. Allowance should be made at all stations for eventual uses of change machines, and ticket machines which could be incorporated in a future automated fare collection system.

TYPICAL STATION CIRCULATION



The long-range goal of the Authority is to provide sufficient escalators at each station so that there will be available to any passenger at least one path between vehicle and surface, or from vehicle to vehicle at transfer points, where all upward movements of over ten feet are mechanized, provided average daily volume at such points is at least 1000 potential passengers.

Wherever a continuous downward movement exceeds 25 feet, the use of a down escalator should be considered, especially if such escalator would lend itself to reverse operation when traffic flow peaks in the opposite direction.

The term "escalator" as used here, may also apply to "moving ramps" or "moving sidewalks" where appropriate. Moving sidewalks should also be considered in cases of long horizontal transfers with heavy traffic.

All new stations should be designed to meet the above goals as nearly as possible, consistent with the funds available, even if actual installation of the escalator is deferred to a later date.

Summary of Planning Standards for Vertical Circulation

1) Stairways:

Maximum Capacity: 20 persons/foot-width/minute, (or 36.5 persons per minute for each single lane 1'-10" in width.)

Design capacity: 15 persons/foot-width/minute.

Minimum Width: 6' which allows for later installation of escalators and stairs - wider than 8' requires a center handrail.

Approximate Length: 1.73 x rise (for 30 stair used in conjunction with escalators) plus landings @ 4.5' for straight stairs with a rise of 8' (15 risers) or over. Landing for return stair should equal width of stair.

Minimum Run-off: (clear space) at ends of stair or escalator:

- a) To a solid obstruction: width x 1.7
- b) To edge of queue space: 10'
- c) To another stair or escalator: 30'

Note: Run-off for stair and escalator in same well is the combined width x 1.7.

VERTICAL CIRCULATION



MANUAL OF GUIDELINES AND STANDARDS

REVISED 1974

SITE PLANNING & NEW STATIONS

2) Ramps:

Design Capacity: Minimum width and run-off same as stairs,

Maximum Slope: 1:12, preferred 1:15.

3) Level Passageways:

Design Capacity: Range from 20 to 25 persons/foot-width/minimum.

Minimum Width: 10', preferred 12'

4) Escalator:

Maximum Capacity: 135 persons/minute for a 4' tread width and speed of 120'/minute (32" escalators not to be used in new work). For design capacity, use 100 persons/minute.

Width: 6' clear shaftway opening.

Approximate Length: 1.73 x rise + 15' (30° slope plus level transition at ends). See manufacturers catalogues for precise dimensions.

Minimum Run-off (clear space at ends):

- a) To a solid obstruction: 15'
- b) To edge of queue space: 10'
- c) To another escalator or stair: 30'

Note: Moving sidewalks have similar characteristics except that maximum slope is 150 (1:3.46)


Minimum headroom requirements for all pedestrian passageways, stairs, etc. is 7'-6" for short distances (under beams, etc.), preferred minimum 8' to 10". For greater detail, see Section IV, Components.

5) Elevators:

May be required at selected locations for use of handicapped, and in multi-story parking garages

Minimum dab size: 4' x 4' clear

VERTICAL CIRCULATION



REVISED 1874


SITE PLANNING & NEW STATIONS

X

STATION LOBBIES AND PLATFORMS



"ISLAND" PLATFORM, OR "CENTER" PLATFORM

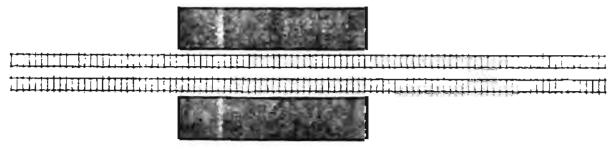



"SIDE" PLATFORM, OR "DIVIDED" PLATFORM

Stations on two-track lines are of two types: island platform and side platform. Island platforms are preferred because they offer more efficient use of platform space, furnishings, and vertical circulation. Traffic flow at the typical station, outside of downtown, is very peaked -- A.M. inbound, P.M. outbound. Island platforms result in a more efficient lobby layout with a cleaner straight-through circulation path than is possible with side platforms. The passenger need not make his decision as to train direction until he reaches the platform instead of in the lobby where space is more restricted and other activities, such as fare collection, must occur.


However, in certain areas physical conditions at or near the station site will have a strong constraint upon the track alignment and require the use of side platforms. In special cases, of a particularly heavy interchange movement, a side platform layout could be required to permit easy cross-platform transfer to buses. Platform configurations are specified by the Authority.

PLATFORM TYPES: TWO-TRACK



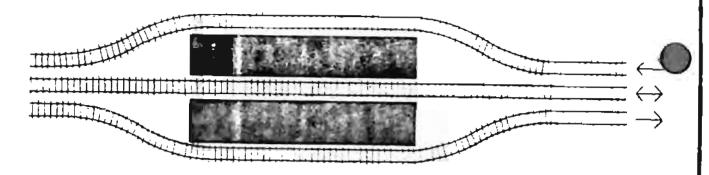


DOUBLE ISLAND PLATFORM

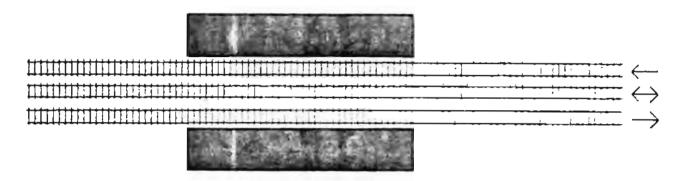

SIDE PLATFORM

Stations on three-track lines are of two general types: double island and side platform. The double island type is preferred as it offers the greatest flexibility for operation. Trains on any track can stop at the station if necessary and any track may be used as the express track. As in the case of two-track routes, side platforms may be necessary at certain locations. An advantage here of side platforms is that less overall width is needed than for a double island layout.

PLATFORM TYPES: THREE-TRACK




AEVISED 1074

SITE PLANNING & NEW STATIONS



STATION LOBBIES AND PLATFORMS

D3.1




Variation of platform access points along a route

Platforms may be center loaded or end loaded - at one or both ends. End loading requires less platform width and offers more straightforward circulation than center loading, while the latter shortens walking distance on the platforms. As people who enter a station to await a train will tend to cluster in the vicinity of the platform access point, it is necessary to vary the points of access from station to station along a route. One station should be center loaded, another at the inbound end, another at the outbound end and perhaps another double end loaded. Loading at the third or quarter points is also possible. Thus, boarding passengers will be distributed more or less uniformly along the length of a train as it proceeds along its route.

The approximate location of platform access points are normally specified by the Authority.

PLATFORM ACCESS



Platforms should be on tangent tracks, and on grades of $\frac{1}{2}\%$ or less, if possible. When curves are necessary, the radius should be at least 4000'-5000'; and platform faces should be convex curves. Concave curved platforms should be avoided because they make it difficult for train guards to have clear sightlines along the train when closing doors. Platforms may be tapered at the ends with long radius convex curves to permit maximum width at the access point while permitting the tracks to reach normal spacing within a reasonable distance from the station.

Minimum headroom requirements is 15' from top of rail to any structure over the tracks, though a lower ceiling over the platform is permissible with 9'-6" from platform to ceiling as minimum. (This allows 1'-0" depth for continuous lighting fixture located above the platform edge.) The edge of the dropped ceiling should be set back at least 2'-2" from the platform edge.


Other details of platform widths, lengths and clearances are found in Manual Parts I and IV.

PLATFORM - DESIGN CRITERIA



SITE PLANNING & NEW STATIONS




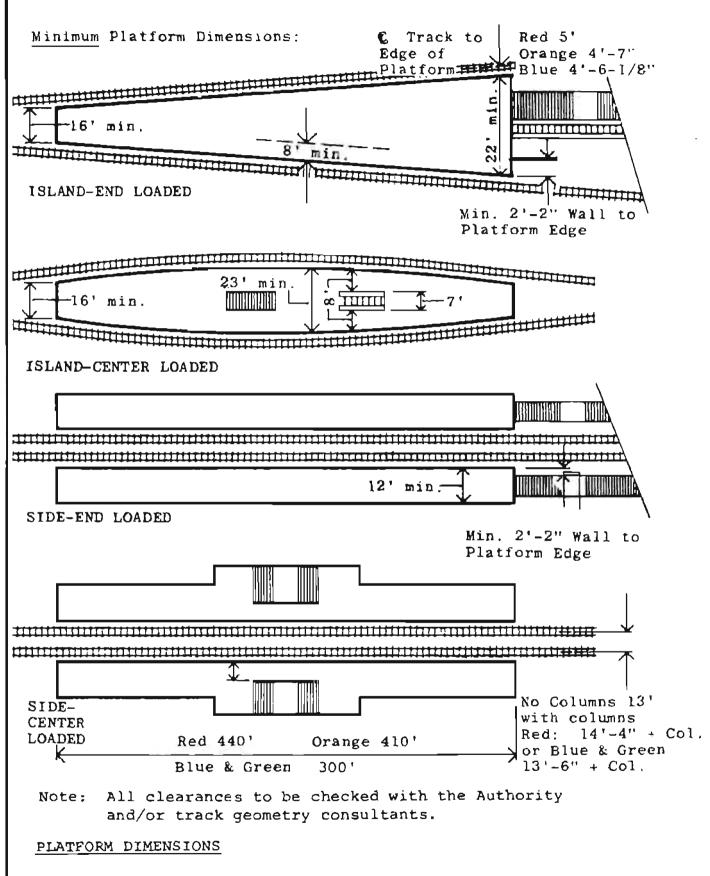

SITE PLANNING & NEW STATIONS X

REVISED 1974


STATION LOBBIES AND PLATFORMS D5.1

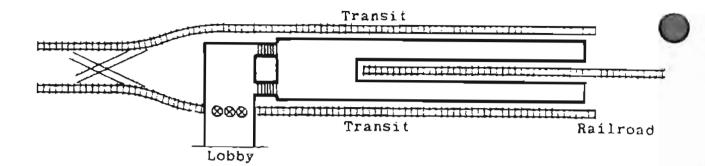

Railroad shuttle service connecting with several rapid transit stations is currently under study. Preliminary design of these particular stations must allow for this kind of service. What facilities are actually built will depend upon the outcome of these studies.

Ideally the station should be planned to permit future conversion of the railroad facilities to electrified rapid transit, with through service to downtown. If possible, cross-platform transfer should be planned. A possible layout for such a terminal is shown above.

RAILROAD SHUTTLE TRANSFER





MASSACHUSETTS
BAY
TRANSPORTATION
AUTHORITY
GUIDELINES AND STANDARDS
PART XI
VENTILATION
REVISED 1977

MANUAL OF GUIDELINES AND STANDARDS

PART I GUIDELINES AND PRINCIPLES

PART II STATION RECONNAISSANCE (Discontinued)

PART III STATION MODERNIZATION PROGRAM (Discontinued)

PART IV COMPONENTS

PART V GRAPHICS

PART VI LIGHTING

PART VII MATERIALS

PART VIII ACOUSTICS

PART IX SERVICE FACILITIES

PART X SITE PLANNING AND NEW STATIONS

PART XI VENTILATION

GENERAL INTRODUCTION

The Massachusetts Bay Transportation Authority has found it both necessary and possible to concentrate attention on the complex needs of people. Programs to improve service must now include a new emphasis on the quality of the transportation experience. In effect, transportation engineering has been joined by human engineering and environmental design.

This manual provides a framework for the continued coordination of all those elements in the system that affect human comfort.

Many of the criteria involved are common to all environments, such as the control of light, noise, humidity, temperature, wind, and odors, or the need for orderliness, through clear and easy circulation and clean appearance. Other criteria that are more specific to the transportation environment are such needs as safety, traffic handling capability, spatial variety, consistently available information, and orientation.

The most important single criterion that has guided the preparation of this manual is the need for orientation. The rider must not only be physically comfortable, he must also know in the fullest sense where he is and where he is going.

Since to the layman a public transportation system is to a large extent an invisible skeleton of the city and metropolitan region, the comprehension of that structure generates an awareness and appreciation of the city itself, and an appreciation of travel through it.


There are many aspects to achieving this orientation. Circulation at all points must be direct and open. Spaces should relate visually to their surrounding environment, either through direct openings to adjacent spaces and structures, or in the case of platforms, by graphic reflection through photographic murals.

Above all, the need for orientation places great emphasis on maps and a consistent system of identification and directional signing. Graphics then emerges as a major factor in the design of each environment, a factor that must be given high priority in the early design phases of each project.

It is hoped that all participants in all programs will familiarize themselves with the entire manual, so that the implications of each decision can be understood in a system-wide context.

The standards and guidelines presented here are not inflexible rules. They are a framework for meaningful development and variety, and offer no restriction to the capacity of each participant to evolve better solutions to old or new problems.

As new solutions are developed and approved, revised and additional pages for the manual will be issued to all participants.



PART XI - VENTILATION

A. Ventilation Standards for Stations


- General Information Method of Ventilation
- Special Heat Sources in a Subway Station Special Requirement Normal Ventilation of a Typical Subway Station
- Normal Ventilation in a Station Inside of Which Diesel Powered Buses Operate
- 4. Emergency Ventilation Controls
- B. Subway Environmental Design Handbook
 - 1. Outline of Handbook
- C. Detailed Criteria

(Revision of 1977)

MASSACHUSETTS A1. TRAMSPORTATION SUTHORITY MANUAL OF GUIDELINES AND STANDARDS	VENTILATION	ΧI
REVISED 1978	INTRODUCTION	2

PART XI SERVICE FACILITIES

- A. Ventilation Standard for Stations
- B. Subway Environmental Design Handbook
- C. Heating, Ventilating, Air Conditioning Requirements
 For Station Areas
 - Lobby and Fare Collection (Below Grade) Collector's Booths
 - 2. Porter's Room Safe Room Electric Closet
 - 3. Public Toilets
 Employee Toilets
 - 4. Lamp Storage Head Houses Mechanical Rooms Mechanical Rooms (Above Grade)
 - 5. Storage Room Bus Starter's Room Passenger Waiting Enclosed (Above Grade)
 - 6. Passenger Waiting Open Windbreak Type Train Platform Inspector's Room
 - Signal Bungalow or Rooms
 Train Crew Lobby or Yard Crew Lobby
 Substations, Rectifier Rooms, Switchgear Rooms
 - 8. Parking Garage Toll Collection Garage Operator's Office
 - 9-10. General HVAC Guidelines For Buildings



A. VENTILATION STANDARD FOR STATIONS

The primary requirement of a station ventilation system shall be to provide a safe environment for the Authority's passengers. It shall have the capability in an emergency to exhaust smoke fumes, etc.

A secondary requirement of a station ventilation system shall be making the environment within the station, under normal operating conditions, conform to certain standards for the comfort of our passengers and employees.

1. General Information

- a. The rapid transit trains operating between Quincy and Harvard Station are air conditioned.
- b. All new rapid transit and light rail (similar to streetcars) will be air conditioned.
- c. Existing cars will not be air conditioned.
- d. Existing stations will not be air conditioned.
- e. Previous to this time, normal subway and station ventilation has been accomplished by the "piston action" of the trains. The rolling stock push the air in the subway ahead of it to the next vent shaft emergency exit connection to the adjacent subway or station. When the train passes an exit for the air, it draws air along after it.
- f. Electric motor driven fans are provided at various locations in the transit system for emergency ventilation. While not decided at this time, the Authority may order the operation of certain of the fans at night to bring cool air into the subway to cool the subway walls and lower the general subway temperature.

2. Method of Ventilation

- a. In general, ventilating air will be drawn or pushed into the station from the subway.
- b. Air will be exhausted from the station to the outside.

MASSAC HUSETTS BA TRANSPORTATION AUTHORITY	VENTILATION	ΧI
MANUAL DI GUIDELINES AND STANDARDS REVISED 1974	STANDARDS FOR STATIONS	A1

c. The consultant shall evaluate the effect of the existing vents. emergency exits and any new ventilation under study by others or being installed.

3. Special Heat Sources in a Subway Station

In addition to the normal heat in a subway station, lights, etc., a major source of BTU's is the trains. The braking and accelerating of a train, the heat output of the auxiliaries and heat of the sun on the cars while running outside the tunnel add many BTU's to the station.

4. Special Requirements

Realizing the limitations of the existing subway stations, it is still desired that the consultant design a system that will limit the amount of dirt laden air from entering the station. Any duct work carrying air from the subway to other parts of the station will be equipped with easily serviced filters in the line. Unless the filters are easily serviced using hand carried tools, they will soon become overloaded and useless.

5. Normal Ventilation of a Typical Subway Station

a. Any individual rooms in a station shall have a system with the capabilities as listed below:

Cable Rooms and Pits Natural ventilation to suit heat load

Electrical Operating B changes of air per hour Equipment Rooms - (even outside air must be Control Rooms filtered)

Maintenance and other 8 changes of air per hour Personal Rooms except Toilets

Toilets 10 changes of air per hour

Battery Rooms 15 changes per hour

The consultant shall balance the cost of using filtered subway air including special controls such as remote controlled louvers necessary in case of fires in the subway against the cost or providing an outside air supply.



b. The station ventilating equipment shall be capable of maintaining the ambient temperature in the station within 5° of the ouside air when the temperature is 91° F and 10° F when the outside air is 60° F. Further, the system shall have the capability of supplying 7.5 cubic feet of fresh air per minute for each passenger in the station complex.

6. Normal Ventilation in a Station Inside of Which Diesel Powered Buses Operate

The consultant shall research the existing state of the art of diesel fume removal. In general, an attempt will be made to have an exhaust grille located 5! forward of the left rear of a bus in its normal berthing position. Where there are two bus lanes, an intake air grille shall be located opposite the exhaust grille.

The normal flow of exhaust from a diesel bus when accelerating is estimated to be 500 SCFM. Unless the state of the art research shows that this figure is improper, the consultant shall provide an exhaust capacity of 12 x 500 or 6000 SCFM per berthing position. The velocity through the grille will be at least 1000 feet per minute and not greater than 1200 feet per minute. Where there are two lanes, the intake grille will have a capacity of 5000 SCFM.

The consultant shall make a comparison of the most economical system considering the number of buses berthed during the rush hour and the number at other times. During the rush hour, all systems could be operated; at other times fans could be shut down.

Proper consideration shall be given to the exterior ends of the intake and exhaust systems so that there will not be any "short circuiting". The air drawn in shall be as uncontaminated as possible and the vitiated air shall be properly discharged.

Further, special care shall to taken so that any air fouled by diesel fumes is not blown into the subway.

Normally, if vehicles enter and leave a station, it is open enough so that additional ventilation beyond the above is not required. In any case, Section 5 above must be satisfied either with mechanical fans or natural ventilation.

MASSACHUSETTS BAY TRANSPORTATION AUTHORITY	VENTILATION	ΧI
MANUAL OF GUIDECHES AND STANDARDS	STANDARDS FOR STATIONS	A 3

7. Emergency Ventilation

The ventilation system shall have the capability of exhausting the air in the station complex 15 times per hour. The emergency ventilation system shall include station fans and may include fans located in the subway between stations.

Where possible, provision shall be included to close off, by dampers, individual rooms to accomplish the above.

8. Controls

Fan controls for normal operation shall be located at a convenient place in the station.

Emergency controls for station ventilating equipment shall be located both in the station and at the Dewey Control Center. Controls for ventilating equipment located in the subway shall be located on the adjacent subway platform and the Dewey Control Center.

Controls shall be able to reverse fan motors.

Each control area will be equipped with indicating lights to show the operating status of the equipment.

mattachearris militaris	VENTILATION	χi
ALAIREO 1914	STANDARDS FOR STATIONS	A4

B. SUBWAY ENVIRONMENTAL DESIGN HANDBOOK

This technical report, Project No. DC-06-0010, funded by UMTA, has been prepared for planners, operators, and others involved with underground rapid transit systems who are not necessarily concerned specifically with environmental control but who require guidelines for this decision-making process in the overall system design. The following is a brief outline that illustrates areas covered.

It is hoped that if more specific information is needed the "Handbook" will be referred to.

Part I. Digest

Section	l.	. 1	Past	Practices	and	Concepts	
---------	----	-----	------	-----------	-----	----------	--

Section 1.2 Contemporary Environmental Control Concepts

Section 1.3 The Design Process

Section 1.4 Comparison of Alternatives

Part II. Human Environmental Criteria

Section 2.1	Temperature	and	Humidit	Y
-------------	-------------	-----	---------	---

Section 2.2 Air Quality

Section 2,3 Air Velocity and Rapid Pressure Changes

Section 2.4 Emergency

Part III. Subway Environmental Evaluations and Design Strategies

Section 3	3.1	Design	Strategies	to	Achieve	Air
-----------	-----	--------	------------	----	---------	-----

Temperature Criteria

Section 3.2 Air Velocity Control

Section 3.3 Air Quality Control

Section 3.4 Air Pressure Control

Section 3.5 ______Control for Emergencies

Section 3.6 Strategies for Multiple Criteria

Part IV. Application of Equipment and Structures for Environmental Control

Section 4.1	Environmental	Control	l Systems
-------------	----------------------	---------	-----------

Section 4.2 Environmental Control Equipment

Section 4.3 Vehicle Air Conditioning

STARRACHURETTS STANDAN C/ GU/OFCHT3 END 61 ANDRAGOS BRANDAN C/ GU/OFCHT3 END 61 ANDRAGOS	VENTILATION	ΧI
MENISED 1874	DESIGN HANDBOOK	B 1

There are also a number of Appendices that detail research reports, scale models, survey results, bibliography and statistical information on eleven Canadian and United States subway systems relative to environmental control. Furthermore, there is a Volume II of the "Randbook" that contains detailed computer programs and other aids to the designer.

bushing malified arr readable for gas attroparts	VENTILATION	X 🌑
HARMA TY G. IDELINES AND STAINSAFPE	DESIGN HANDBOOK	D11
#EVISED 1874	DESIGN HANDBOOK	D 1.1

HEATING, VENTILATING, AIR CONDITIONING REQUIREMENTS FOR STATION AREAS

The following criteria supplement the information shown on pages I through Bl.1 issued in 1974. In case of conflict, these new criteria will apply:

LOBBY AND FARE COLLECTION (Below Grade)

Temperature: No control. Provide exterior finishes

and equipment capable of withstanding temperature variations ranging from

0° F to 105° F.

Humidity: No control.

Ventilation: Provide sufficient outside air in

summer months to carry heat gain with a maximum differential of 10° F. All ventilation shall be mechanical. Turn on summer ventilation by thermostat set at 80° F inside temperature. Design for residual velocities of 50 FPM.

Odor: No control.

Dust: Throw away filters with indication of

pressure drop across filter.

2. COLLECTOR'S BOOTHS

Temperature: Maintain 70° F minimum in winter

months. Maintain 78° F maximum in summer months. Consider using water-cooled condensers below grade if practical and air cooled condensers above grade if good ventilation is available. Energy source to be elec-

tricity.

Humidity: No control.

Ventilation: Provide 20 to 25 CFM local outside air.

Maximum residual air velocity in

occupied area to be 50 FPM. All ventilation shall be mechanical and run when

booth is occupied.

MASSACHUSETTS BAT TRANSPORTATION AUTHORITY	VENTILATION	ΧI
MANUAL OF GUIDELINES AND STANDARDS	DETAILED CRITERIA	C1

Odor:

No control.

Dust:

Throw away filters.

3. PORTER'S ROOM

Temperature:

Maintain 45° F minimum in winter time. No control in summer time. Electric heat. Thermostat control. Capacity adequate to heat ventilation air.

Humidity:

No control.

Ventilation:

Provide 1/3 CFM local air per square foot of floor area. 100 CFM minimum. Maintain small negative pressure in room. Exhaust to outside. Mechanical

ventilation on-off switch.

Odor:

Negative room pressure.

Dust:

No control.

4. SAFE ROOM

Temperature:

Same as 3.

Humidity:

Install dewpoint control to prevent wall condensation in intermediate

seasons. Humidistat and two thermostats.

Ventilation:

Provide 1/3 CFM per square foot floor area, local air. 100 CFM minimum. Maintain small negative pressure in room. Mechanical ventilation. On-

off switch.

Odor:

No control.

Dust:

No control.

5. ELECTRIC CLOSET

Temperature:


Same as 3.

Humidity:

Same as 4.

Ventilation:

Provide 1/3 CFM per square foot floor space local air 100 CMF minimum. Main-



VENTILATION

X

MAKEN OF SURESMEET AND PROCESSES

FEVISED 1974

DETAILED CRITERIA

C2

Ventilation (cont'd.)

tain small positive pressure in room. Mechanical ventilation. On-off switch.

Odor:

No control.

Dust:

Provide 30 to 35 percent efficiency filter based on ASHRE 52-68 test. Maximum velocity through filter 200 Initial pressure drop. 12 inches water quage. Provide indication of filter pressure drop. Change filter when pressure drop reaches 7 inches

water guage.

6. PUBLIC TOILETS

Temperature:

Maintain 450 F minimum in winter months. No control in summer months. Locate to minimize heating requirement. Electric heat. Thermostat. Adequate to heat ventilation air.

Humidity:

No control.

Ventilation:

Provide 40 CFM for each toilet and 40 CFM for each urinal, but not less than 50 CFM in any single toilet. Use local air and exhaust to outside. Maintain small negative pressure in room. Mechanical ventilation. On-off

with light switch.

Odor:

Negative room pressure.

Dust:

No control.

7. EMPLOYEE TOILETS

Temperature:

Maintain 70° F minimum in winter time. Electric heat. Thermostat. Capacity adequate to heat ventilation air.

Humidity:

No control.

Ventilation:


Same as 6.

Odor:

Negative room pressure.

Dust:

No control.



VENTILATION

XI

8. LAMP STORAGE

Temperature: Same as 3.

Humidity: Same as 4.

Ventilation: Provide 1/3 CFM per square foot floor

space local 100 CPM minimum. Maintain

small negative pressure in room.

Mechanical ventilation. Of-off switch.

Odor:

Negative room pressure.

Dust:

No control.

9. HEAD HOUSES

Temperature: Maintain heated entrance to control icr.

Humidity:

No control.

Ventilation:

None.

Odor:

No control.

Dust:

No control.

10. MECHANICAL ROOMS (Underground)

Temperature: Same as 3.

Humidity: Same as 4.

Ventilation: Same as 5.

Odor:

No control.

Dust:

Same as 5.

11. MECHANICAL ROOMS ABOVE GRADE

Temperature:

Same as 3.

Humidity:

Same as 4.

Ventilation:

Provide mechanical ventilation capable of carrying heat gain in summer with a 10°F differential. Provide 1/3 CFM per square foot in winter or 10°C

massaccounter is be resumpdon to recom settingative	VENTILATION	ΧĮ
market, or goods and otherwise		
REVISED 1076	DETAILED CRITERIA	C

Ventilation (cont'd.)

Outside air if practical. CFM minimum. Maintain small positive pressure in

room. Automatic control.

Odor:

No control.

Dust:

Same as 5.

12. STORAGE ROOM

Temperature:

No control.

Humidity:

No control.

Ventilation:

Provide 1/3 CFM per square foot of floor area minimum 100 CFM local air exhaust to outside. On-off switch. Maintain small negative pressure in

room. Mechanical ventilation.

Odor:

Negative pressure.

Dust:

No control.

13. BUS STARTER'S ROOM

Temperature:

Same as 2.

Humidity:

Same as 2.

Ventilation:

Same as 2.

Odor:

Same as 2.

Dust:

Same as 2.

14. PASSENGER WAITING ENCLOSED ABOVE GRADE

Temperature:

Maintain 450 F minimum in winter. ____ric heat. Thermostat control.

Humidity:

"e control.

Ventilation:

Same as 1.

Odor:

same as 1.

Dust:

Same as 1.

100	MASSACHUSEYTS BAY TAANSPORTATION AUTHORITY	VENTILATION	ΧI
	MENUAL OF GUIDELINES AND STANDARDS	DETAILED CRITERIA	C5

15. PASSENGER WAITING OPEN WINDBREAK TYPE

Temperature:

Provide radiant heat, electric, thermo-

stat control.

Humidity:

No control.

Ventilation:

No control.

Odor:

No control.

Dust:

No control.

16. TRAIN PLATFORM

Temperature:

Same as 1.

Humidity:

No control.

Ventilation:

Provide exhaust system and supply air system capable of removing 60 percent of heat released from train dynamic braking grids while in station. Supply air and exhaust air quantities shall be directed over the platform to provide some air movement on the platform for people standing there. Automatically shut down supply air when outside air temperatures would be uncomfortable across platform. Continue to run exhaust system until heat

exhaust system shall be shut down. Exhaust system shall be part of emergency ventilation for station and shall be arranged for eventual remote control. Fans shall be capable of handling 300° F cases for at least one hour. Direct

is needed on platform at which time

driven, single speed.

Odor:

No control.

Dust:

Same as 1.

17. INSPECTOR'S ROOM

Temperature:

Same as 2.

Humidity:

Same as 2.



VENTILATION



Ventilation:

Same as 2.

Odor:

Same as 2.

Dust:

Same as 2.

18. SIGNAL BUNGALOW OR ROOMS

Temperature:

Maintain 78° F maximum in summer and 70° F minimum in winter. Electric resistance heat, direct expansion air cooling. Consider air cooled condensers, well ventilated above grade or below grade if practical. Water cooled condensers can be considered using city water and run to drain if three tons

or smaller.

Humidity:

50 percent maximum in summer and inter-

mediate seasons use electric reheat.

No control below 50 percent.

Ventilation:

Provide sufficient local outside air to maintain small positive pressure

in room.

Odor:

No control.

Dust:

Same as 5.

19. TRAIN CREW LOBBY AND YARD CREW LOBBY

Temperature:

Same as 2.

Humidity:

Same as 2.

Ventilation:

Provide 15 CFM per occupant as an average occupancy basis of local outside air where practical. Maintain small positive pressure in space.

Odor:


No control.

Dust:

Throw away filters with remote indication of pressure drop across filters.

20. SUBSTATIONS, RECTIFIER ROOMS, SWITCHGEAR ROOMS

Temperature: Maintain, minimum 45° F in winter time.



VENTILATION

XI

DETAILED CRITERIA

C 7

Humidity:

Same as 4.

Ventilation:

Provide sufficient mechanical ventilation to carry design day heat gain with a 10° F rise. Operate ventilation system automatically when inside temperature rises above 90° F.

Odor:

No control.

Dust:

Same as 5.

21. PARKING GARAGE

Temperature:

No control.

Humidity:

No control.

Ventilation:

Provide sufficient ventilation to keep CO within safe limits. Operate mechanical ventilation if required by a CO monitoring system. Provide sound treatment on fan to limit noise level to that of surrounding area.

: :ob0

No control.

Dust:


No control.

22. TOLL COLLECTION

Same as 2.

23. GARAGE OPERATOR'S OFFICE

Same as 19.



C8

GENERAL HVAC GUIDELINES FOR BUILDINGS


- Buildings with more than 25 tons of refrigeration shall use multiple compressor package water chillers installed in interior mechanical rooms with remote air cooled condensers.
- 2. Buildings with less than 25 tonw of refrigeration shall use direct expansion package-type equipment with remote air cooled condensers. Small room-type equipment may be used for offices and other small room areas where comfort, zoning, and economy are better served by this type of equipment.
- 3. All air conditioned buildings shall be zoned for comfortable and economical operation.
- 4. Buildings shall use hot water heating systems. Buildings with a chilled water cooling system shall use a four-pipe heating and cooling system. The heating requirement of wall and window shall be carried by a perimeter heating system. Roof and outside air heating requirement shall be carried by air handling equipment. Outside air tempering coils shall be equipped with separate run-around pumps, and the circulating fluid shall be glycol water solution.
- 5. Heat gains shall be calculated in accordance with storage system developed by Carrier Corp. Humidity control in comfort air conditioned areas shall be a function of a 50 F temperature swing above thermostat setting during the duration of the design outside temperature. Process humidity control shall be accomplished by refrigeration with reheat where necessary.
- 6. 10 CFM of outside air shall be supplied for every individual in the building in addition to exhaust required for toilets, atc. Outside air shall be controlled relative to building occupancy and shall be shut down when the building is unoccupied and shall be reduced under partial occupancy conditions. Enough outside air shall be supplied to maintain a small positive pressure in the building. All outside air shall be filtered and return air shall be filtered. Pressure drop across filters shall be remotely indicated at thermostat control locations. Instructions relative to filter maintenance shall be posted at the remote pressure drop readout.

MASSACHUSETTS BAY TRANSPORTATION AUTHORITY	VENTILATION	ΧI
MANUAL OF GUIDELINES AND ETANDARDS	DETAILED CRITERIA	С9

- 7. Conference room air conditioning systems shall be completely independent of building air conditioning systems. Outside air in the amount of 30 CFM per chair shall be supplied. The heat gain shall be calculated on an instantaneous load basis. Conference room air conditioning shall be shut down when the room is not in use, and its unoccupied load shall be assumed by the zone it is located in.
- 8. All control systems shall be simple in nature. On-off control shall be employed everywhere possible. Conditions in occupied areas shall not be controlled by turning fans on and off. Electric controls are preferred, rather than electronic or pneumatic controls.
- Heat trace all water and drain lines subjected to below freezing temperatures



 \bigcirc



FIRE PROTECTION AND LIFE SAFETY PROGRAM FOR THE

MASSACHUSETTS BAY TRANSPORTATION AUTHORITY

ARTICLE 1 - INTRODUCTION

The purpose of this document is to present the fire protection and life safety criteria for the design, construction and operation of the fixed guideway rapid transit system of the Massachusetts Bay Transportation Authority, hereinafter referred to as the MBTA, to provide a safe environment for the MBTA passengers, employees, property and equipment as well as the general public.

SECTION 100.0 SCOPE

This document describes the fire protection systems and life safety requirements for all new construction of rapid transit stations, tunnels and aerial structures.

It is divided as follows:

- ARTICLE 1 INTRODUCTION
- ARTICLE 2 FIRE ALARM AND WARNING SYSTEM
- ARTICLE 3 COMMUNICATIONS
- ARTICLE 4 VENTILATION
- ARTICLE 5 ELECTRICAL
- ARTICLE 6 CONSTRUCTION
- ARTICLE 7 MEANS OF EGRESS
- ARTICLE 8 FIRE FIGHTING FACILITIES
- ARTICLE 9 EMERGENCY PROCEDURES, INSTRUCTIONS AND EQUIPMENT

- 100.1 RAPID TRANSIT FACILITIES: All structures or parts thereof shall be classified in the rapid transit facilities group which are used or designed as rapid transit stations, including underground and above ground stations, tunnels, aerial structures, power plants and/or substations.
- 100.1.1 Included in this group are commuter rail stations which are in common with rapid transit facilities.
- 100.1.2 Excluded from this group are surface streetcar (light rail) stops and commuter rail stations with open platform areas which provide unlimited egress to adjacent open areas such as lawns, parking lots, roadways, and median strips. Also excluded are parking garages which are in common with rapid transit facilities.

SECTION 101.0 ADMINISTRATION AND ENFORCEMENT

- 101.1 BASIC CODE: All of the provisions of the Commonwealth of Massachusetts State Building Code, hereinafter referred to as the Basic Code, shall apply unless otherwise specifically modified herein.
- 101.1.1 Other Codes: All of the provisions of the Rules and Regulations of the Architectural Barriers Board and other applicable Massachusetts Rules and Regulations and General Laws shall apply.
- 101.2 JURISDICTION: All of the administration and enforcement of the Basic Code and of this rapid transit facilities code shall be under the jurisdiction of the Department of

Public Safety of the Commonwealth of Massachusetts, the State Building Code Commission and other applicable state agencies and local fire departments.

101.3 SPECIAL PROCEDURES: Required signatures of authorized MBTA officials must be obtained before plans and specifications may be issued for construction.

101.4 UPDATING: This document shall be updated as necessary to incorporate changes indicated by new technology, operating experience and improvements in the state-of-the-art of rapid transit transportation systems. Reference to the Basic Code shall include the latest amendments and shall refer to the latest edition.

SECTION 102.0 DEFINITIONS

The terms defined herein are in addition to those included in Section 201.0 (General Definitions) of the Basic Code.

Aerial Structure: Any system structure which carries transit tracks and spans above land or water surfaces. Also called an elevated structure.

Ancillary Spaces: The non-public areas or spaces of the stations which contain operating, maintenance or support equipment and functions.

Central Control: The location where train control or train supervision is accomplished for the entire rapid transit system; the system command center.

Communications Systems: Those elements and their interconnections which permit voice, data or video interchange of information between system functions which are separated by distance.

Contact Rail: A rail mounted on insulators alongside the running rail which provides traction power for train operation.

Also called the third rail.

Station: A place designated for the purpose of loading and unloading transit passengers.

Station, Above Ground: A station in which the tracks and platform are either located on an aerial structure or rest directly on grade.

Station, Depressed: A station in which the trainway and platform areas are below the level of the adjacent finished grade.

Station, Underground: A station in which the major portions of the structure, including the tracks and platforms, are located below the finished grade and are totally enclosed. Also called a subway station.

Transit Car, Rail Rapid: An electrically propelled passenger carrying rail vehicle characterized by high acceleration and braking rates for frequent stops, and fast loading and unloading.

Tunnel: A totally enclosed trainway section which exceeds six hundred (600) feet in length.

ARTICLE 2 - FIRE ALARM AND WARNING SYSTEM

SECTION 200.0 SCOPE

The provisions of this article shall control the design and installation of the fire alarm and warning systems for all new construction of rapid transit facilities.

200.1 GENERAL: Rapid transit stations shall be equipped with fire alarm devices and be protected by a local system connected to a city or town master box with contacts and a connection to a data gathering panel in the station central instrument room for transmission of the alarm signal to Central Control. (See Article 12 of the Basic Code.)

SECTION 201.0 FIRE ALARM ANNUNCIATOR PANEL

Rapid transit stations shall be provided with a fire alarm annunciator panel, located at a suitable location approved by the local fire department. The main fire alarm panel shall announce by audible alarm the activation of any fire detector or pull station. The annunciator panel shall visually display the fire zone in which the initiating alarm device is located.

201.1 FIRE MANAGEMENT PANEL (FMP): Rapid transit subway stations shall be provided with a Fire Management Panel (FMP).

The FMP shall be located at a suitable location approved by the local fire department. The FMP is designed to function as a fire command post in an emergency. It shall have means to tie into the public address system to provide fire department communications with passengers for specific directions in case of fire or emergency (See Section 207.0). A direct connection to the Fapid

transit dispatcher shall also be provided for train control or power shut-off.

SECTION 202.0 FIRE ALARM DEVICES

Fire alarm devices shall be installed as follows:

- a) Electrical Rooms smoke detectors with alarm indication.
- b) Central Instrument Rooms (CIR), Emergency Control Rooms (ECR), and Communications Rooms - smoke detectors with alarm indication and an automatic halon extinguishing system.
- c) Mezzanine, concession areas, corridors, mechanical and toilet rooms, porter's rooms, and rooms used infrequently - rate of rise heat detectors.
- d) Pull stations shall be provided at station entrances, platform areas, and at the fare collection area. Pull stations shall comply with NFPA 72B, Article 310. All locations shall be approved by the local fire department having jurisdiction.
- e) Combination light and horn units located in public areas shall time out and silence the horn unit after two or three minutes. All visual alarm devices shall remain "ON" until the system is reset.

SECTION 203.0 SYSTEM TYPE

The fire detection and alarm system shall be supervised electrically. Trouble indication shall be located at the primary collector's booth and at Central Control.

The system shall have an approved secondary source of power.

SECTION 204.0 MUNICIPAL CONNECTION

A direct tie shall be provided from the rapid transit station master box to the local fire department headquarters in accordance with NFPA 72B.

SECTION 205.0 TRANSIT SYSTEM CONNECTION

A direct tie to Central Control shall be provided via a Data Gathering Panel.

SECTION 206.0 FIRE DEPARTMENT RADIO

Each rapid transit station shall be equipped with a base radio station connected to the local fire department headquarters for use by the fire department during emergencies as described in Article 3 - Communications.

SECTION 207.0 PUBLIC ADDRESS SYSTEM

Each rapid transit station shall be equipped with a public address system to provide communication with passengers in the event of a fire or emergency as described in Article 3 - Communications.

SECTION 300.0 SCOPE

The provisions of this article shall control the design and installation of the communications systems for all new construction of rapid transit facilities.

300.1 GENERAL: The rapid transit system of the MBTA requires radio and wire subsystems for emergency use.

SECTION 301.0 RADIO SUBSYSTEMS

Radio subsystems for operational control, MBTA police, and local fire departments shall have the capability to cover all of the rapid transit stations and trainways, including above ground, subways and storage yards, with radio frequency signals. Radio coverage in the underground section for the above systems will be accomplished using a slotted coaxial cable (lossy line).

- 301.1 FIRE DEPARTMENT RADIO: Each local fire department along the route of the rapid transit system requires separate, though similar, tunnel coverage within its respective city or town limits using portable receivers. These fire departments will require base stations.
- 301.2 MBTA POLICE RADIO: The MBTA Police Department requires a full subway trainway and station coverage channel using portable transceivers and necessary base stations.

All land line channels shall be carried on physical telephone cable pairs. The treatment and termination of these
pairs, including the use of carrier channels, and the installation of the cable and its terminal equipment shall conform
to general practices and the MBTA Standards.

SECTION 303.0 PUBLIC ADDRESS

The MBTA Rapid Transit Dispatcher located at Central Control shall be provided with a system to address passengers directly, when necessary, and there shall be provided a voice grade, DC signal, zero dbm channel for each individual transit station public address destination.

303.1 STATION REQUIREMENTS: For purposes of rapid transit station operation, each station shall require a public address system in accordance with MBTA standards.

SECTION 304.0 PRIVATE AUTOMATIC EXCHANGE (PAX) TELEPHONES

There shall be provided common battery off-premise local stations connected to the existing line switching machine located at the MBTA Central Control. These locals shall include PAX telephone instruments at specific locations.

304.1 STATION TELEPHONES: For purposes of rapid transit operation, PAX telephone stations shall be installed in the starter's room at each station. The telephone sets in these locations shall be key sets that will accommodate an individual PAX line, an emergency telephone connection, and access to

each of the station public address zones in the station.

SECTION 305.0 EMERGENCY TELEPHONES IN TUNNELS

The MBTA shall require emergency telephone sets installed at a maximum interval of one thousand (1,000) feet along each subway trainway. Locations shall include cross passages, vent shafts, turnouts and cross-overs, and platform ends. The telephone instrument at each location shall include the handset, subset, enclosure with instructions for use, visible identifier code, and blue light locator.

305.1 INSTALLATION: The emergency telephone circuit shall provide for common battery operation without outward signaling, but with automatic signaling to Central Control when "off-hook".

305.1.1 Emergency telephone channels shall be provided between Central Control and each rapid transit station. These channels shall be extended, but not in the inter-stations cable, from each station in all trainways through the line sections toward both adjacent stations. Alternate emergency telephone stations in each trainway shall be connected to alternate emergency telephone circuits (the dual cable plan extensions within each trainway). Telephone set connections to the same channel shall be multiple with common access to supervisory at Central Control.

305.1.2 Each local emergency telephone station shall require a connection also to a PAX line.

SECTION 306.0 DATA CHANNELS

mission systems.

- 306.1 SIGNAL SYSTEM: The signal system shall include a supervisory data transmission system.
- 306.1.1 Two voice grade, duplex channels, without signaling, shall connect master terminals at Central Control with remote terminals in the Central Instrument Room (CIR) in each rapid transit station.
- 306.1.2 There shall be provided a dedicated channel to each rapid transit station with access to standby channels in the event of failure in any link of the normal channel.
- 306.1.3 The signaling supervisory digital data transmission system shall communicate controls and indications for remote operation of the signal system, the ventilation system, the sump pumps and various alarms from the field to the support facility monitor at Central Control.
- 306.2 POWER SYSTEM: The power system shall include a supervisory and telemetry data transmission system, using a separate complement of master and remote terminals.
- 306.2.1 A voice grade, duplex channel, without signaling, shall connect master terminals located at Central Control with remote terminals in the Central Instrument Room (CIR) in each rapid transit station.
- 306.2.2 There shall be provided a dedicated channel to each station with access to standby channels in the event of failure

in any link of the normal channel.

306.3 FIRE AND INTRUSION SYSTEM: The fire and instrusion system shall be a separate data transmission system which includes a central processor that buffers and decodes data from the field.

306.3.1 A voice grade, duplex channel, without signaling, shall connect a master terminal located at Central Control with remote fire and intrusion terminals located in each rapid transit station.

306.3.2 There shall be provided a dedicated channel to each station with access to standby channels in the event of failure in any link of the normal channel.

SECTION 307.0 CLOSED CIRCUIT TELEVISION

Empty conduit systems shall be provided for future equipment.

SECTION 308.0 MBTA POLICE TALK BACK SPEAKERS

On each rapid transit platform, there shall be MBTA police talk back speakers in a box convenient for passenger use.

SECTION 309.0 COMMUNICATIONS ROOM

There shall be a communications room in each rapid transit station located at the platform level separate from, but close to, the Central Instrument Room. Each communications room will contain both the system and the local rapid transit

station communications equipment, cabling and accessories.

309.1 MECHANICAL REQUIREMENTS: See Section 403.2 of this code.

ARTICLE 4 - VENTILATION

SECTION 400.0 SCOPE

The provisions of this article shall control the design and construction of the ventilation systems for all new construction of rapid transit stations and tunnels.

400.1 GENERAL: The objectives to be achieved by the ventilation systems in the rapid transit stations and tunnels are as follows:

- a) To provide and maintain egress routes from the stations and tunnels reasonably clear of smoke and heat in the event of an emergency.
- b) To provide a sufficient current of air which would indicate to individuals the direction of egress.
- c) To remove smoke in order to assist passengers, employees and fire fighters.

Underground rapid transit stations and tunnels shall be ventilated by using the action of the moving trains, called piston action, or, if required, by power-driven fan systems or by a combination of both methods. As a minimum, the following mechanical ventilation systems shall be provided:

- a) Underplatform exhaust and platform supply systems.
- b) Intermediate tunnel fan shaft ventilation systems
 All stations shall provide ventilation in ancillary areas
 as indicated in a later section of this article.

SECTION 401.0 CODES AND STANDARDS

Except as modified hereunder mechanical installations and

materials shall conform to the applicable sections of the latest editions of the following codes and standards:

- a) National Fire Protection Association
- b) Massachusetts State Building Code
- c) ASHRAE Guide
- d) Massachusetts Bay Transportation Authority Standards
- e) American National Standards Institute
- f) OSHA

SECTION 402.0 CONTROLS

The controls for normal operation of heating, ventilating and air conditioning (HVAC) equipment shall be as simple as practical and consistent with energy conservation. (See Article 20 of the Basic Code.) In addition, the controls of the ventilation equipment available for use in emergencies shall meet the requirements of both the MBTA and the local fire departments.

SECTION 403.0 UNDERGROUND STATIONS

In this section, heating, ventilating and air conditioning will be considered together. The HVAC systems for the underground (subway) stations shall provide a suitable environment for passengers, operating personnel and employees in any concession area.

403.1 BASIC REQUIREMENTS: When control of heat in underground stations is indicated, the temperature shall be limited to seventeen (17) degrees Fahrenheit above the outside ambient

or a maximum of one hundred five (105) degrees Fahrenheit. Short peaks of higher temperature may be allowed. The temperature limitations shall be achieved by train induced air flow through ventilation shafts, platform supply and underplatform exhaust systems and intermediate tunnel vent shaft and fan ventilation systems.

- 403.1.1 Station ventilation systems shall be designed to aid in maintaining egress routes clear of heat and smoke in the event of an emergency. The ventilation system shall have the capability of sweeping with fresh air the open stairways and escalators available to passengers to enable them to be used as emergency egress exitways. Adjustable openings, if required, may be provided in certain locations in the station complex to enable this system to function effectively.
- 403.1.2 Any heating added to the stations shall be by means of electricity.
- 403.2 ANCILLARY SPACES: In all rooms or areas, the heating, ventilating and air conditioning requirements of the Basic Code shall be met, except as follows or as may be required by the MBTA:
 - a) Battery rooms shall be equipped with a mechanical fan which will exhaust air from a location near the ceiling. The fan shall be adequate to provide ventilation that will limit the hydrogen concentration to no more than three (3) percent at the maximum charge rate. Provision shall be made to maintain a minimum temperature of forty (40) degrees Farenheit.

- b) Emergency generator rooms shall have provisions to supply one hundred (100) percent of the required air from the outside when the generating unit is in operation and to exhaust directly to the outside atmosphere.
- c) Communications rooms shall have positive, clean air pressurization, and temperature and humidity control. A loss of positive pressure, momentary or steady-state, shall cause an alarm to annunciate the loss at Central Control.
- 403.3 UNDERPLATFORM VENTILATION: At high platform subway stations, excess heat shall be exhausted to the outside by means of an underplatform ventilation system. The system shall be capable of removing a minimum of one hundred twenty-five (125) cubic feet of air per minute (CFM) per linear foot of station platform edge at trackside through adjustable openings located under the overhang of the platform. Unfiltered make-up air of an equal or greater volume, drawn from an outside source, shall be supplied by means of reversible fans located within the station complex.
- 403.4 ENCLOSED EMERGENCY EXIT STAIRWAYS: An enclosed emergency exit stairway from a platform which is located at an elevation greater than thirty (30) feet below the level of the exit to the outside or is located under another station platform or tunnel shall be required to be made smokeproof.
- 403.4.1 These enclosed emergency exit stairways shall be made smokeproof by providing a mechanical exhaust or supply/exhaust system which will supply outside air of sufficient capacity so as to prevent the intrusion of smoke or remove intruding smoke before such smoke can travel further than one-half flight of

stairs up the exit stairway. Supply air shall be introduced far enough above entry level to ensure a flow of smoke-free air into the faces of persons exiting from the platform and/or mezzanine levels. The specific system proposed shall be reviewed with the MBTA and the MDPS prior to incorporation into the design of a station.

- 403.4.2 The emergency exit stairway ventilation system shall have adequate controls and switches for either manual or automatic activation of the system or both as local conditions indicate.
- 403.4.3 The standby power required in Section 618.9.4 of the Basic Code may be provided by the dual feeder system complex as described in Article 5 of this document.

SECTION 404.0 ABOVE GROUND STATIONS

In this section, heating, ventilating and air conditioning will be considered together. The HVAC systems for the above ground (depressed, surface and aerial) stations shall provide a suitable environment for passengers, operating personnel and employees in any concession area.

404.1 ANCILLARY SPACES: See Section 403.2 of this article.

SECTION 405.0 TUNNELS

405.1 BASIC REQUIREMENTS: Fans capable of producing a velocity of five hundred (500) feet per minute (FPM) in any of the adjacent segments of a tunnel (stations and tunnel expansions excepted) shall be provided. This velocity will supply fresh air to persons evacuating from the tunnel on foot and will indicate the direction of safety.

- 405.1.1 At the interface of the supply and exhaust air between the tunnel structures and the outside air, the velocity of the air due to either the piston action of the moving trains or the mechanical ventilation systems shall be limited as follows:
 - a) In areas accessible to the public, gratings installed at an angle less than forty-five (45) degrees to the horizontal and located from ground level up to within three (3) feet above ground level 500 FPM.
 - installed at an angle greater than forty-five (45) degrees above the horizontal with the bottom edge less than eight (8) feet above the contiguous ground level 500 FPM.
 - c) In locations contiguous to areas accessible to the public, louvers and gratings installed at an angle of forty-five (45) degrees or less above the horizontal with the bottom edge three (3) feet or higher above the contiguous ground level 1,000 FPM.
 - d) In areas accessible to the public, louvers and gratings installed at an angle greater than forty-five (45) degrees above the horizontal with the bottom edge eight (8) feet or higher above the contiguous ground level - 1,000 FPM.
 - e) Other louvers and gratings have no restrictions.
 - f) In an emergency, the limits of the velocities through the openings listed above in this section shall not apply.
- 405.2 FAN EQUIPMENT: The entire fan assembly of blades, bearings vanes, motors, wiring, housing, etc. shall withstand and operate

in a three hundred (300) degrees Fahrenheit temperature for a minimum period of one (1) hour.

405.3 NOISE CONTROL: Excess noise and vibration associated with the tunnel ventilation system shall be attenuated to meet the latest requirements of all applicable codes and standards.

SECTION 406.0 INTERNAL COMBUSTION TRACTION POWER EQUIPMENT

In stations and tunnels in which internal combustion traction power equipment operates (such as diesel-electric locomotives or rail cars) special ventilation shall be provided, if required, to reduce any contamination to a safe level according to the latest applicable codes and standards.

ARTICLE 5 - ELECTRICAL

SECTION 500.0 SCOPE

The provisions of this article shall control the design and installation of the electrical systems for all new construction of rapid transit stations and tunnels.

500.1 GENERAL: The rapid transit system electrical loads are served with either alternating current (AC) or direct current (DC). AC power serves the station and auxiliary loads. DC power provides the energy to drive the motors on the transit vehicles using a third rail or overhead wire system for the supply and the running rails for the return.

SECTION 501.0 CODES AND STANDARDS

Electrical installations and materials shall conform to the applicable sections of the latest editions of the following codes and standards:

- a) National Fire Protection Association
- b) Massachusetts Electrical Code 527 CMR 12.00
- c) National Safety Code
- d) Association of American Railroads
- e) Association of Edison Illuminating Companies
- f) Institute of Electrical and Electronic Engineers
- g) Insulated Power Cable Engineers Association
- h) Massachusetts Bay Transportation Authority Standards
- i) American National Standards Institute

SECTION 502.0 STATION POWER

AC power is distributed from a double ended unit substation

which serves electrical loads for lighting, escalators, elevators, heating and ventilation equipment, pumps, communications and signal equipment.

502.1 UNIT SUBSTATIONS: Unit substations are served from available utility company electrical systems or available MBTA power sources.

SECTION 503.0 STATION EMERGENCY POWER

503.1 GENERATOR: An engine generator set shall be the main source of power during failure of the normal power supply to the transit station. The engine generator shall be of sufficient capacity and rated for continuous standby service for the station auxiliary loads, signal and communications equipment, and emergency lighting, and shall have the provision for automatic starting when the normal power supply fails.

503.1.1 Noise pollution level requirements of applicable codes shall govern the operation of the emergency generator unit.

SECTION 504.0 STATION EMERGENCY LIGHTING

504.1 BATTERY INVERTER UNITS: In addition to the emergency generating unit, battery inverter units shall be provided to automatically maintain station emergency lighting units during the time interval when the normal utility power fails and the emergency generator unit starts and is able to serve the emergency lighting load. The batteries for the inverter

system shall be rated for a minimum of one and one-half $(1\frac{1}{2})$ hours of operation.

505.0 TRACTION POWER

DC power is provided by means of 1,000 volt feeders from the traction substation DC switchgear.

505.1 TRACTION POWER SYSTEM: The traction power system shall include the primary AC switchgear, rectifying transformers, rectifier units and the output network including DC switchgear, 1,000 volt class positive feeders, contact rails or overhead wires, trackside switches and all accessories.

SECTION 506.0 EMERGENCY SWITCHES

Switches shall be installed that will de-energize traction power circuits in an emergency.

506.1 "B" SWITCH: A manually operated, normally closed disconnect switch (called a "B" switch) shall control the traction power for the pit rail in the transit station.

These switches shall be located in each station at the departing end (the motorman's position) of every station platform for each track.

506.1.1 New "B" or "BJ" switch design applications may have these switches in parallel-series at each end of the station platform.

506.2 "J" SWITCH: At every transit station, the contact rails (pit rails) shall be sectioned by normally open dis-

connect switches (called "J" switches). "J" switch applications will vary according to electrical design requirements peculiar to individual passenger stations.

SECTION 507.0 SIGNAL POWER

Power shall be provided especially for signaling and communications at each rapid transit station, or yard, where signaling and communications equipment will be located.

507.1 MODE: Mode of signal power, Normal, Standby or Emergency-Generator, shall be relayed to Central Control over the supervisory system.

507.2 COMMUNICATIONS EQUIPMENT STANDBY POWER. At both the MBTA and the fire department radio base stations, the power supply system shall include a twenty-four (24) hour standby battery and ancillary equipment to operate the base station radio equipment only, in the event of complete failure of the utility system and the standby engine generator.

SECTION 508.0 STATION LIGHTING

General illumination for the normal lighting system shall be served from the AC station electrical distribution system.

508.1 ILLUMINATION LEVELS: Levels of illumination shall conform to Table 5-1 below in accordance with the lighting provisions of Article 20 of the Basic Code.

TABLE 5 - 1 GENERAL ILLUMINATION LEVELS

AREAS	FOOTCANDLES - MAINTAINED
Administrative Staff Areas, Starter's Collection Booth, Communications Ro Instrument Room and Equipment Rooms	oom, Central
Bus Parking	3
Bus Loading Zone	10
Concession Area	30
Emergency Lighting at Station Platfor of Egress, Stairways and Exits	rms, Places 4
Entrance Lobbies	30
Mechanical and Electrical Spaces	20
Outdoor Entrances to Escalators and S	tairways 10
Outdoor Plazas	5
Pedestrian Tunnels and Passageways, M	ezzanine Areas 40
Pedestrian Walkways	5
Stairways and Entrances	25
Station Platforms	20
Storage Rooms, Porter's Rooms	15
Toilets	30
Trackways and Tunnels (emergency and	normal) 1.5
Vaiting Areas: Interior Exterior	30 15
Vending Area	40
Note l All footcandle levels shall b horizontal plane at the finis	
Note 2 Other areas not listed shall quirements of the Basic Code.	

508.2 LIGHTING POWER LIMITS FOR RAPID TRANSIT SYSTEMS: The maximum power limit for interior and exterior illumination systems associated with underground and above ground rapid transit stations shall be as required in the Basic Code.

SECTION 509.0 TUNNEL LIGHTING

509.1 LIGHTING FIXTURES: Tunnels shall be illuminated with 480 volt AC fluorescent weatherproof fixtures, individually fused. Successive fixtures along the trackway shall be connected to alternate 480 volt three phase distribution lines.

509.1.1 The source of one distribution line shall be the secondary switchgear in the unit substation at the rapid transit station at one end of the line section. The source of the other distribution line shall be the secondary switch-gear in the unit substation at the rapid transit station at the other end of the line section.

509.1.2 Lighting fixtures shall be mounted parallel to the trackway and spaced no more than forty (40) feet on center.

509.1.3 The entrance to an emergency exit, including cross passages, shall be indicated by one vertically mounted fluorescent lighting fixture.

509.2 WIRING: Insulated conductors on racks mounted on the tunnel walls shall be the wiring arrangement for the tunnel lighting.

SECTION 510.0 LIGHTING CONTROL: Adequate accessible switches and circuits shall be provided to promote energy conservation.

SECTION 600.0

The provisions of this article shall control the design and construction of all new rapid transit stations, tunnels and aerial structures and all new construction in existing rapid transit facilities.

600.1 GENERAL: Except as otherwise specified herein, all new rapid transit facilities shall conform to the requirements of the Basic Code for Type 1 (Fireproof) construction; Type 2 (noncombustible) construction or combinations of Type 1 and Type 2 construction.

SECTION 601.0 UNDERGROUND STATIONS

Building construction for the basic structural elements such as columns, bearing walls, beams and slabs over trainways for subway stations shall conform to the requirements for Type IB (fireproof) construction of the Basic Code.

- 601.1 ANCILLARY SPACES: See Section 603.0 of this Article.
- 601.2 STAIRS AND ESCALATORS: Stairs and escalators used regularly by passengers need not be enclosed, even though they may serve as emergency exit routes. (See Elevator and Escalator Regulations 524 CMR 3.00-11.00 and Elevator, Dumbwaiter, Escalator and Moving Walk Regulations.)
- 601.3 INTERIOR FINISH AND SPECIAL MATERIALS AND TRIM: All interior finish and acoustical and insulation materials used within the station shall be noncombustible or Class I with a smoke development rating not to exceed 50, as measured by ASTM E84.

602.0 ABOVE GROUND STATIONS

Building construction for the basic structural elements such as columns, bearing walls, beams and slabs over trainways for depressed (below-grade), surface (at-grade) and aerial (above-grade) stations shall be of noncombustible types of construction complying with the requirements of the Basic Code.

- 602.1 EXCEPTIONS: Where the platform or concourse exceeds the area limits of Table 305 of the Basic Code for the use group A-3 (assembly) and has only a roof above it, the walls and roof supporting structure may be:
 - a) Of one (1) hour protected construction of noncombustible materials when roof construction is
 less than twenty (20) feet above the platform or
 the platform or concourse is enclosed.
 - b) Of unprotected construction of noncombustible materials when the roof construction is more than twenty (20) feet above the platform and the station or concourse is open.
 - c) For a platform area to be considered "open" not less than twenty-five (25) percent of those enclosing walls which are parallel to the trackway shall be open with openings substantially uniformly distributed along both walls, except that platform areas not exceeding 600 feet in length with open ends shall be considered open.
- d) For a concourse area to be considered "open", not less than three of its four enclosing walls shall have substantially uniformly spaced openings equal to not

less than twenty-five (25) percent of the total area of all of the enclosing walls. In no instance shall any of the three exterior walls be less than twenty-five (25) percent open.

- "open" in a depressed station where none of its enclosing walls contain any openings, the roof area above the enclosed trainways and platform or concourse shall have substantially uniformly spaced openings equal to not less than twenty-five (25) percent of the roof area. Automatic or operable roof vents complying with NFPA204 may be used to provide the required minimum opening percentage.
- 602.1.2 Aerial trainways and open platforms may be of unprotected construction of noncombustible materials unless
 located over combustible buildings, areas used for storage
 of highly combustible materials or other known hazardous
 locations.
- 602.2 ANCILLARY SPACES: See Section 603.0 of this Article.
- 602.3 STAIRS AND ESCALATORS: Stairs and escalators used regularly by passengers need not be enclosed, even though they may serve as emergency exit routes.

SECTION 603.0 ANCILLARY SPACES

In all stations, ratings of fire separations shall be maintained between occupancies as required by the Basic Code, except as follows:

a) All traction power substations shall be of three (3) hour fireresistive construction.

- b) Switchgear and electrical control rooms, auxillary electrical rooms and associated battery rooms shall be of two (2) hour fireresistive construction.
- c) Central Instrument Rooms, train control rooms and associated battery rooms shall be of two (2) hour fireresistive construction.
- d) Trash and storage rooms shall be of two (2) hour fireresistive construction.
- e) Enclosed concession and retail spaces shall be of two
 (2) hour fireresistive construction.
 - Exception: Freestanding booths and kiosks shall be of noncombustible construction
- f) There shall be a two (2) hour fireresistive separation between the ancillary (non-public) areas and the public areas.
 - Exception: Agent's and information booths shall be of noncombustible construction.
- g) Emergency exit passageway walls through the ancillary areas and the shafts, including the exit stairs, shall be of two (2) hour fireresistive construction.
- h) All openings in fireresistive separations shall be enclosed with approved labeled protective assemblies as required in the Basic Code.
- i) There shall be a three (3) hour fireresistive separation between all system public areas and all non-system (private) occupancies. All openings from system public areas to all non-system occupancies (1.e., private entrances) shall be protected with Class A, three (3) hour fire door assemblies. These doors shall be normally closed by positive means or operation

of the closures shall be by automatic means activated by products of combustion (such as ionization type) detectors and fusible links, or by fusible links only where a separate smoke barrier is provided.

SECTION 604.0 ALTERATIONS AND REPAIRS

When existing stations are altered or repaired, the full requirements of this rapid transit facilities code need not apply, except as provided in Section 106.0 of Article 1 and Article 22 of the Basic Code. However, all new work shall be made to conform to the requirements of this code.

SECTION 605.0 UNDERGROUND TUNNELS

- 605.1 CUT-AND-COVER: When tunnels are to be constructed by the cut-and-cover method, perimeter walls and related construction shall be of noncombustible construction.
- 605.2 DECK STRUCTURES: Construction of all continuous deck structures over the transit stations and trainways shall be of totally noncombustible materials. Where unusual conditions or excessive fire loads exist, construction conforming to Type 1 or Type 2 construction of the Basic Code or combinations of Type 1 and Type 2 shall be used.
- 605.3 TUNNELING: When line structures are to be constructed by mine tunneling methods, unprotected steel or cast-iron liners, reinforced concrete liners, shotcrete or the equivalent shall be used. Rock tunnels may utilize steel bents with a concrete liner if a lining is required. Walkways designated for evacuation of passengers shall be of non-

combustible construction.

605.4 UNDERWATER TUBES: Noncombustible construction as defined by Table 214 of the Basic Code shall be used as applicable. Ancillary areas within tubes shall be separated from trackway areas by fire separations as required by Section 603.0 Ancillary Areas.

606.0 BRIDGE STRUCTURES

606.1 FIRE PROTECTION: Where an existing or new bridge structure is located within a deck structure in a station area only noncombustible materials may be used. Consideration shall be given to the use of fire resistive construction where conditions indicate excessive build up of heat from serious fire conditions, or total inaccessability for fire fighting exists and the bridge structure is considered to be in an unventable location.

SECTION 607.0 OTHER CONSTRUCTION

- 607.1 SHAFT TERMINATIONS: To limit the entrance of a hazardous liquid, there shall be no grates for fan or vent shafts or other openings terminating in vehicular travelways except as specified below in Section 607.1.2.
- 607.1.1 Vent and fan shafts and other openings may terminate in median strips of divided travelways or in sidewalks designed to accept such openings, or in open space areas, provided that the grade level of the median strip or sidewalk, or open space, is higher than the level of the adjacent vehicular travelway and separated by a minimum six (6) inch high concrete or stone curb.

607.1.2 Where conditions of construction are such that it is impossible to avoid locating the gratings or other openings in a vehicular travelway, gratings may be permitted in a vehicular travelway provided that a drainage trough is installed to immediately intercept the flow of any liquids onto the grating area.

Further an interceptor shall be installed at the bottom of the vertical shaft to intercept any liquids spilled directly onto the gratings. The trough will connect into the local surface drainage system and the interceptor shall drain through a gasoline trap into the subway drainage system.

ARTICLE 7 - MEANS OF EGRESS

SECTION 700.0 SCOPE

The provisions of this article shall control the design, construction, and arrangement of building elements required to insure safe means of egress from all new rapid transit stations, tunnels and aerial structures.

700.1 GENERAL: This article includes all new rapid transit stations and trainways whether they be located entirely or in any part underground or above ground. Every station or trainway section, or area thereof of such size, occupancy, and arrangement that the reasonable safety of numbers of occupants may be endangered by the blocking of any single means of egress due to fire or smoke shall have at least two means of egress from the affected area remote from each other, so arranged as to minimize any possibility that both may be blocked by any one fire or other emergency conditions. (See Article 6 of the Basic Code and NFPA 101.)

SECTION 701.0 STATION EXITING

701.1 OCCUPANCY: The primary purpose of a rapid transit station is for the use of rapid transit patrons who would normally stay in a station structure for a period of time no longer than that necessary to wait for and enter upon a departing rapid transit vehicle, or to depart from an arriving rapid transit vehicle.

701.1.1 Occupancy shall also include MBTA employees whose work assignments require their presence in the station structures and persons employed in any concession area.

- 701.2 OCCUPANCY LOAD: The occupancy load for a rapid transit station shall be established based on the net usable area of the station platform, deducting the space occupied by structural elements, stairs, escalators, elevators, concession and service spaces, furnishings and the eighteen (18) inch wide platform edge safety stripe.
- 701.2.1 An occupancy load of one (1) person per seven (7) square feet of net usable area of the station platform shall be used to calculate the passenger loading for any platform which serves a rapid transit line.
- 701.2.2 An occupancy load of one (1) person per two (2) linear feet of station platform edge at trackside shall be used to calculate the passenger loading for any platform which serves only a commuter and/or an intercity railroad.
- 701.2.3 Any uncovered portion of a station platform need not be included in the calculation of the occupancy load of a station, and may be considered an area of safety when clearly designated.
- 701.3 TRAVEL DISTANCE: The maximum travel distance from any point on the platform to an exit, to an area of safety, or to an area of refuge, shall not exceed three hundred (300) feet, including any length of travel on a stair or escalator.
- 701.3.1 An area of safety is defined as an open space of Type 1 or Type 2 construction with ceilings over twenty (20) feet high with adequate natural or mechanical ventilation. It shall be clearly designated as an area of safety in case of fire.

Directional signs indicating the direction to the area of safety shall be provided where the direction of travel to reach the area of safety is not immediately apparent.

701.3.2 An area of refuge is defined as a sprinklered area along an exit path protected on all sides by two (2) hour rated walls, and one and one-half (1½) hour Class B doors. It shall be clearly designated as an area of refuge in case of fire. Directional signs indicating the direction to the area of refuge shall be provided where the direction of travel to reach the area of refuge is not immediately apparent. Provisions shall be made for smoke control.

701.3.3 At a station where the trainway is open at or near the end of the station platform, including depressed, surface and aerial stations, said open trainway may be considered as an area of safety, provided that such use will take place only under the guidance and control of authorized MBTA personnel or by other authorized personnel as warranted under an emergency situation, and that it shall first be positively established that the contact rail traction power circuits have been de-energized. At the ends of this platform, forty-four (44) inch wide gates and stairs shall lead to the trainway.

701.3.4 Any area of safety or any area of refuge, as defined in Sections 701.2.3, 701.3.1 and 701.3.2 of this Article, may be considered as providing safety for one (1) person per seven (7) square feet of net usable area.

- 701.4 UNIT OF EXIT WIDTH (UEW): Means of egress shall be measured in units of width of twenty-two (22) inches. Fractions of a unit shall not be counted except that twelve (12) inches added to one (1) or more full units shall be counted as one-half (½) a unit of exit width. (See Section 608.1 of the Basic Code). Width shall be measured in the clear at the narrowest point except that individual handrails may project three and one-half (3½) inches into the required width. Stringers may also project one and one-half (1½) inches into the required width. (See Section 616.0 of the Basic Code.) Exception: See Section 701.9 of this Article.
- 701.5 DESIGN CAPACITY ALLOWANCE: The exiting capacity per unit of exit width of a stair or escalator or ramp of over four (4) percent slope shall be limited to seventy-five (75) persons. The capacity per UEW of level or horizontal exits including doors and gates, or ramps of four (4) percent slope or less shall be limited to one hundred (100) persons. The capacity per UEW of a turnstile shall be limited to fifty (50) persons.
- 701.6 MINIMUM HORIZONTAL EXITWAY WIDTHS: Exitway corridors and ramps of four (4) percent slope or less shall be a minimum of sixty-six (66) inches wide.
- 701.6.1 All ramps required as a means of egress for the handicapped shall comply with the requirements of the Rules and Regulations of the Architectural Barriers Board.
- 701.7 MINIMUM VERTICAL EXITWAY WIDTHS: Exitways shall be provided from the station platform to grade level with no

reduction in exit width unless specifically excepted by the state inspector.

701.7.1 Exit doors shall be class B, one and one-half (1½) hour labeled assembly forty-four (44) inches wide equipped with panic hardware in accordance with Section 612.5 of the Basic Code. (This door width is required to accommodate stretchers and a fully equipped fireman using breathing apparatus.)

701.7.2 Exit stairs shall be a minimum of sixty-six inches wide, excluding those leading to the trainway. The stairway shall be designed in accordance with Section 616.0 of the Basic Code.

701.7.3 Exit ramps of over four (4) percent slope shall be a minimum of sixty-six (66) inches wide.

701.7.4 Escalators shall be considered as conforming exit stairs for the purpose of exit capacity calculations. A thirty-two (32) inch wide escalator shall count as one (1) UEW and a forty-eight (48) inch wide escalator shall count as two (2) UEW. In the event of an emergency, incoming escalators shall be stopped by the station attendant.

701.7.5 Elevators throughout all stations shall not be considered a means of egress in determining the exitway capacity. They shall be equipped with controls which will offer special provisions for operation by the fire department including selective stopping and override capability. To prevent entrapment in an elevator during a fire, each elevator shall be equipped with an intercom

connected to the primary collector's booth. This "call for aid" system shall be served by the emergency power system if normal power fails.

NOTE: > 701.8 ESCALATORS (SEE PAGE 7-6A) NEXT PAGE

701.8.5 Escalators may be operated at any speed approved by
ANSI Al7.1.

- 701.9 FARE COLLECTION GATES: The following design features shall be provided to permit ample exits if an emergency should occur:
 - a) Fare aisles shall assume an emergency exit mode in the event of a power failure, or by activation of a manual or remote control.
 - b) At least one gate-type exit thirty-eight (38) inches high and forty-four (44) inches wide which swings in both directions shall be provided at each fare collection array.
 - c) A turnstile fare collection gate of minimum eighteen

 (18) inch aisle and maximum thirty-six (36) inch

 height of the turnstile bar which when deactivated

 will free wheel in the exit direction may be considered

 as an emergency exit and shall count as one-half (\frac{1}{2})

 a horizontal UEW.
- 791.10 GATES AND DOORS: Gates and doors that are used to protect a station and are necessary for use as an emergency egress shall be able to be opened either by remote control from a location that is continuously attended while the station is open or by panic hardware which will activate any latches or locks.

- 701.8 ESCALATORS: All of the provisions of Section 620.0 of the Basic Code shall apply except the vertical travel height of escalators in transit stations may exceed the limits given in Section 620.7.3 providing additional safety features are included. The number of flat steps at the upper landings shall be increased according to the vertical rise of the escalators. Escalators up to a twenty (20) foot rise shall have a minimum of one and three-fourths (1-3/4) flat steps, those with a rise over twenty (20) feet shall have a minimum of two (2) flat steps.
- 701.8.1 Landing and floor plates exposed to the outdoor environment shall be covered with an approved slip-resistant material.
- 701.8.2 Understep lighting near comb-plates or other means of illuminating the comb-plates shall be provided.
- 701.8.3 Upthrust switches shall be provided at the upper and lower radii.
- 701.8.4 A flashing light and horn located in the collector's booth shall indicate that an escalator has stopped because of the activation of a safety device or other unusual condition. Also located in the collector's booth shall be an emergency stop button so that the station attendant can stop any escalator in the event of an emergency. If roll down grilles or doors are installed at escalator head houses, interlocks must be provided so that escalators cannot operate if grilles or doors are closed, to prevent the pile up of passengers against grilles or doors.

SECTION 702.0 TUNNEL EXITING

- 702.1 OCCUPANCY: It is anticipated that MBTA passengers will enter upon the tunnel trainways (subways) only in the event it becomes necessary to evacuate a disabled train. Such evacuation will take place only under the guidance and control of authorized MBTA personnel or by other authorized personnel as warranted under an emergency situation. In all cases, however, it shall first be positively established that the contact rail traction power circuits have been deenergized by MBTA personnel or by other authorized personnel.
- 702.2 EXITWAY DETAILS: Exitways shall be provided from tunnels to a point of safety. In a tunnel, a point of safety shall be defined as any one of the following:
 - a) an enclosed fire exit that exits to a public way or safe location outside the tunnel structure,
 - b) an at-grade point beyond any enclosing structure,
 - c) or other passage that affords adequate protection from smoke and fire for a passenger.
- 702.2.1 Along one wall of each tunnel a safety walk with a minimum width of twenty-four (24) inches shall be constructed a maximum of twelve (12) inches above the top of the adjacent running rail. The function of the safety walk is to enable passengers to detrain and walk to the nearest station, emergency stairway or other area of safety.

A continuous handrail shall be wall mounted forty-two (42) inches above the safety walk. In tunnels with safety niches, the handrail shall be interrupted for the width of the niche. The handrail shall not project more than three and one-half (3½) inches from the wall on which it is mounted and shall be designed to withstand an applied load of two hundred (200) pounds in any direction at any point. All handrails shall be returned to walls at each end of the handrail. The handgrip portion of a handrail shall not be less than one and one-quarter (1½) inches nor more than two (2) inches in outside diameter and shall be basically round or oval in cross-section, and shall have a smooth surface with no sharp corners. Clearance between a wall and its wall handrail shall be one and one-half (1½) inches.

702.2.2 Emergency exit stairways shall be provided throughout the tunnels, spaced so that the maximum distance between emergency exits shall never be greater than twenty-five hundred (2500) feet. The stairways shall be designed in accordance with Section 616.0 of the Basic Code. The stairways shall be enclosed and shall lead directly to the outdoors, or to a safe refuge area.

702.2.3 Where trainways are divided by minimum two (2) hour rated firewalls, or trainways are in twin bores, such an arrangement shall be deemed to afford adequate protection for the passengers via cross passages between the trainways

and may therefore be utilized in lieu of exit stairways to the surface, or in the event that a ventilation system does not provide a sufficient stream of fresh air to protect the passengers in a path of egress, provided that:

- a) Cross passages are no further than six hundred (600) feet apart and a minimum of seventy-two (72) inches wide.
- b) Cross passages have at each end a set of Class B labeled assembly double egress doors. Both doors of each set shall be not less than thirty-six (36) inches wide and each door shall swing in the opposite direction from its mate.
- c) Cross passages will contain an emergency telephone, and portable fire extinguishers as directed by the local fire department.
- d) A system of positive ventilation satisfying air velocity criteria of this code is maintained in the uncontaminated trainway.
- e) A ventilation system for the contaminated tunnel is capable of removing smoke from the vicinity of the passengers.
- f) A suitable means of evacuating passengers in the uncontaminated trainway, for protecting passengers from
 oncoming traffic, and for evacuating passengers to a
 nearby station or other emergency exit is provided.
- 702.2.4 Doors to all tunnel exit access points shall swing in the direction of exit travel and shall be Class B, one

and one-half (1½) hour labeled assembly forty-four (44) inch wide doors equipped with panic hardware in accordance with Section 612.5 of the Basic Code.

702.2.5 Exit hatches at exit discharge points shall be protected by covers and shall be latched with UL listed panic hardware. Each separate leaf, if more than one, shall be independently operated so that with minimal effort the leaf can be released and opened. Hatch covers shall be capable of being opened from the outside by authorized personnel. The areas into which the hatches exit shall be designed to minimize obstruction of the hatches and maintain safe egress by approved guard rails if practical. The hatch areas shall be maintained obstruction free.

SECTION 703.0 SURFACE EXITING

703.1 OCCUPANCY: It is anticipated that MBTA passengers will enter upon the surface (at-grade) and depressed (below-grade) trainways only in the event it becomes necessary to evacuate a disabled train or evacuate a station platform.

Such evacuation will take place under the guidance and control of authorized MBTA or other authorized personnel as warranted under an emergency situation. In all cases, however, it shall first be positively established that the contact rail traction power circuits have been de-energized by MBTA personnel or other authorized personnel.

- 703.2 EMERGENCY ACCESS AND EGRESS: Access gates, which are usable by the fire department for entering the trainway for emergency purposes, shall be provided in the security fences adjacent to the trainway. These gates shall also be used as emergency egress for passengers.
- 703.2.1 The gates shall generally be spaced at intervals not to exceed twenty-five hundred (2500) feet with a gate as close as practical to the portals to permit easy access to tunnels.
- 703.2.2 The gates shall be a minimum of forty-four (44) inches wide and shall be of the hinged or sliding type, and secured with a standard MBTA lock.
- 703.2.3 At the location of each gate in a depressed (below-grade) trainway, an unenclosed exit stairway to grade, a minimum of forty-four (44) inches wide, shall be provided.

SECTION 704.0 AERIAL EXITING

704.1 OCCUPANCY: It is anticipated that MBTA passengers will enter upon the aerial (above-grade) trainways only in the event it becomes necessary to evacuate a disabled train or evacuate a station platform. Such evacuation will take place under the guidance and control of authorized MBTA personnel or by other authorized personnel as warranted under an emergency situation. In all cases, however, it shall first

be positively established that the contact rail traction power circuits have been de-energized by MBTA personnel or other authorized personnel.

704.2 EMERGENCY ACCESS: Access to the aerial trainway shall be from the rapid transit station or by mobile ladder equipment from roadways adjacent to the trainway. If no adjacent or crossing roadways are available, access ways at intervals not to exceed twenty-five hundred (2500) feet shall be required.

704.2.1 If security fences are used along the trainway, gates shall be required as described in Section 703.2 of this code. Fences should not be in close proximity to the contact rail and/or overhead power and should be grounded at each post and to the fence mesh.

704.3 EMERGENCY EGRESS: There shall be a walkway or other suitable means for passengers to evacuate a train at any point along the trainway to either proceed to the nearest station or point of egress or wait for an evacuation train to arrive.

SECTION 705.0 SIGNING AND GRAPHICS

The signing and graphics within the rapid transit stations and trainways shall clearly mark exit routes. (See Section 623.0 of the Basic Code.)

- 705.1 STATIONS: Illuminated emergency exit signs and directional signs shall be placed within the rapid transit stations at emergency passageways and stairs and over all doors to emergency stairways. (See Section 624.0 of the Basic Code.)
- 705.1.1 Principal passenger station entrances and exits that are clearly visible are not required to have illuminated exit signs and/or directional signs.
- 705.2 TUNNELS: Illuminated emergency exit signs shall be placed at all emergency cross passages and over all doors to emergency stairways. Graphics shall be provided to clearly identify the location of each emergency exit.
- 705.3 SURFACE AND AERIAL TRAINWAYS: Emergency access and egress gates shall be equipped with an emergency exit light. Graphics shall be provided to clearly identify the location of each exit.

31

ARTICLE 8 - FIRE FIGHTING FACILITIES

SECTION 800.0 SCOPE

The provisions of this article shall control the design, construction and installation of fire fighting facilities for all new rapid transit stations and tunnels.

800.1 GENERAL: Rapid transit stations and tunnels shall be equipped with fire fighting facilities and equipment to limit the spread of fire and to assist in the fighting of a fire in any of these structures.

SECTION 801.0 UNDERGROUND AND ABOVE GROUND STATIONS

All stations, including subway, depressed, surface and aerial structures shall be equipped with various fire fighting facilities.

801.1 STANDPIPE SYSTEM: A dry standpipe system shall be anstalled at each station platform. The station standpipe system
shall not be connected to tunnel standpipe system; separate
street connections shall be provided forseach independented
system.

and pipe valves shall be spaced at lone hundred (100) stoot to intervals.

801.1.2 A street-level connection shall be provided to fill the standpipe system and shall be as required by the local fire department.

- 801.1.3 All connection points, both fill and draw-off, shall be equipped with threads that conform to the standards of the local fire department.
- 801.2 PLATFORM HOSE SYSTEM: A first aid fire fighting system with threads that conform to the standards of the local fire department shall be installed at each platform at all stations if required by the local fire department. It may use the domestic water system as a supply source and shall include one and one-half (1½) inch hoses of sufficient length to cover the entire station platform.
- 801.3 SPRINKLER SYSTEM: A sprinkler line, heat traced if necessary, with sprinkler heads located as directed by the local fire department shall be installed in all enclosed concession areas. The domestic water system may be used as the supply source if no more than twenty (20) sprinkler heads are installed. (See Section 1205.0 of the Basic Code.)
- 801.3.1 A water flow alarm valve with the alarm connected to the fire alarm supervisory panel and to Central Control shall be installed in the sprinkler line.
- 801.4 HALON SYSTEM: Central Instrument Rooms (CIR), Emergency Control Rooms (ECR) and communications rooms shall be provided with an automatic halon extinguishing system.
- 801.5 FIRE EXTINGUISHERS: Portable fire extinguishers shall be provided in electric rooms, CIR, communications rooms, starter's rooms and main collector's booths and as directed by the local fire department.

SECTION 802.0 TUNNELS

802.1 STANDPIPE SYSTEM: A dry standpipe system shall be installed in all tunnels and shall meet the provisions listed earlier in Section 801.1.

802.2 FIRE EXTINGUISHERS: Portable fire extinguishers shall be provided as directed by the local fire department.

ARTICLE 9 - EMERGENCY PROCEDURES, INSTRUCTIONS AND EQUIPMENT SECTION 900.0 SCOPE

The provisions of this article shall require the formulation and implementation of emergency procedures, instructions, and equipment for the rapid transit system of the MBTA.

900.1 GENERAL: The Massachusetts Bay Transportation Authority (MBTA) shall provide various items of emergency equipment and shall develop and distribute operating procedures and/or instructions to provide guidance for its personnel in the event of an emergency.

900.2 ENDORSEMENT: The master set of emergency procedures and/or instructions and the lists of emergency equipment shall be reviewed and endorsed annually in the month of July by the chief operating officer, certifying that the equipment lists, procedures and/or instructions have been reviewed in light of current operating practices and procedures and are presently adequate. These items shall be subject to the review of the local fire department.

SECTION 901.0 EMERGENCY PROCEDURES

The emergency procedures shall address the following situations for both the subway and open areas of the rapid transit system:

- a) Fire or suspected fire:
 - 1. In the right-of-way
 - 2. In rooms or areas of the right-of-way

- 3. In passenger areas of stations
- 4. In ancillary areas of stations.
- 5. Under a train.
- In a train.
- b) Injured or sick individuals: 10 5000
 - 1. In normal passenger areas of stations.

್ಟಿಶಿ ಕಂತ

- 2. In ancillary areas of stations.
- 3. On the right-of-way
- 4. Under a train.
- 5. In a train.
- c) Derailment.
- d) Bomb threat. Mark the act of the
- e) Robbery.
- f) Civil disturbance or riot.
- g) Natural disasters such as floods, earthquakes, windstorms and snowstorms.
- h) Power failure.
- i) Volitile liquid entering the subway of various locations.

SECTION 902.0 EMERGENCY INSTRUCTIONS

The instructions shall include check lists for materials to be available at various locations in the rapid transit system. These lists shall include procedures for the checking and replacing of materials.

The instructions shall contain detailed procedural methods for reporting various emergencies.

The instructions shall include rules for both Central Control and employees of the rapid transit system to follow in handling certain emergency situations and principles to follow in other cases.

SECTION 903.0 EMERGENCY EQUIPMENT

Throughout the rapid transit system, various items of equipment shall be provided to extinguish small fires or to limit the spread of large fires and to assist in the evacuation of passengers in the event an emergency occurs.

+ 30 + 21

Equipment items to be provided shall be determined by the MBTA and may include special ladders for evacuating passengers from trains, third rail testers and covers, stretchers, fire extinguishers and pails of sand.

The emergency procedures and/or instructions for use of this equipment shall be provided by the MBTA as indicated earlier in this section.

parent 1

1 3 2 2 3

Reference Documents Applicable to META Fire Protection and Life Safety Program

	1
ACI 318-1977	Building Code Requirements for Reinforced Concrete (American Concrete Institute)
AISC - 1969	Specification for the Design, Fabrication, and Erection of Structural Steel for Buildings (American Institute of Steel Construction)
NFPA 72 B-1974	Auxiliary Signaling Systems (National Fire Protection Association)
NFPA 101-1976	Code for Safety to Life from Fire in Buildings and Structures (National Fire Protection Association)
NFPA 220-1975	Standard on Types of Building Construction (National Fire Protection Association)
521 CMR 3.00	Rules and Regulations of the Architectural Barriers Board (Massachusetts Department of Public Safety)
524 CMR 3.00-	Elevator and Escalator Regulations
524 CMR 15.00- 33.00	Elevator, Dumbwaiter, Escalator and Moving Walk Regulations
527 CMR 12.00	Massachusetts Electrical Code (Mass. Department of Public Safety)
780 CMR 18.00	The Commonwealth of Massachusetts State Building Code

BLUE LINE MANUAL CATALOG FILE

CATALOG #	DESCRIPTION	DATE
i	MBTA - GUIDELINES & STANDARD	
	PART I GUIDELINES & PRINCIPALS PART IV COMPONENTS PART V GRAPHICS PART VI LIGHTING PART VII MATERIALS PART VIII ACOUSTICS PART IX SERVICE FACILITIES PART X SITE PLANING AN NEW STATIONS PART XI VENTILATION	REVISED 1977 REVISED 1977 REVISED 1977 REVISED 1977 REVISED 1977
2	MBTA - FIRE PROTECTION AND LIFE SAFETY PROGRAM a.k.a. BOSTON TRANSIT FACILITIES CODE (BTFC)	AUG. 21, 1981 FOURTH DRAFT

